

RS 200



RS 200

Bajaj Auto Limited
Akurdi Pune 411 035 India
Tel +91 20 27472851
Fax +91 20 27407385
www.bajajauto.com

Spare Parts Catalogue



Notice

All information contained in this manual is based on the latest product information at the time of publication. Bajaj Auto Limited accepts no liability for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without prior notice. The right is reserved to make such changes at any time without prior notice and without incurring an obligation to make such changes to product manufactured previously. Contact your authorized Bajaj Dealer for the latest information on product improvements incorporated after this manual was issued.

DOC. NO.: XXXXXXXX

REV. 00, AUG 15

Copy rights : All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, Or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Bajaj Auto LTD.

Foreword

We have pleasure in presenting the Spare Parts Catalogue for 'Pulsar / Rouser / Pulse 200 RS' Motorcycle. This catalogue has been specially designed to assist you in selecting the correct parts for procurement to maintain 100% availability.

The Bajaj spares are subjected to the stringent quality control standards to ensure longer life of the vehicle. It is therefore necessary that only the Genuine Bajaj Spares are used.

In a continual effort to improve Performance and Efficiency of the vehicles, Specifications, Diagrams, Illustrations and Part Numbers can change without notice. Consequently, the description in this Spare Parts Catalogue cannot therefore be final and binding on us.

The modifications / alterations which are carried out after the issue of this catalogue, will be conveyed to you through our Service Circulars. You are requested to make necessary corrections in the Parts Catalogue as per the circulars so as to keep your catalogue up-to-date. This will ensure the appropriate and speedy delivery of the Spare Parts as the order placed will bear the latest part numbers.

In case, if you need any technical assistance contact the concerned Regional Office or write to us on the following address :

Bajaj Auto Limited

Service Department

Akurdi, Pune 411 035 India

Phone : 020-27406557

Fax : 020-27407385

Instructions

- 1. How to Read the Catalogue :** Open the catalogue and from the pictorial index locate the group in which the part you want to find is present. Turn over to the concerned page number (as given by pictorial index). Now find out the figure of the part you wish to order. Write down the part number against that particular figure number from the text.

In case, if you have the part number and you need the other details, the part index can be used. The part index (at the end of the catalogue) will give you the figure and page number of the part you wish to order.

- 2. How to Order Spare Parts :** The part number and the description of the part required should be invariably mentioned in the order as per the catalogue text.

The latest part number as conveyed through our service circulars should only appear on the order. In case of ordering painted components, colour shade of the components should be mentioned.

The quantity shown against the part number is the quantity per vehicle for that group so that particular quantity should be multiplied by the number of sets required.

- 3. Part Number System :** We have used 8 digit system for part numbers. The model or hardware item is indicated by first two digits or alphanumeric, the next two or four digits indicate main group and the last four or two digits indicate serial number in main group or serial number or subgroup of fastener respectively. Thus the part numbers will be indicated by 2-2-4 or 2-4-2 digit system. Understanding this system will enable you to identify the spare parts easily.

- 4. Abbreviations :** The following abbreviations are used in this catalogue.

Assly	Assembly	V	Volts
N.I.	Not illustrated	W	Watts
C'case	Crankcase	Accl.	Accelerator
Cyl	Cylinder	Comp.	Complete
O/s	Over size	Fr.	Front
Rr.	Rear	Std.	Standard
L	Length	A/t.	Alternate
R.H.	Right hand	L.H.	Left hand
Hex.	Hexagonal	AR	As required

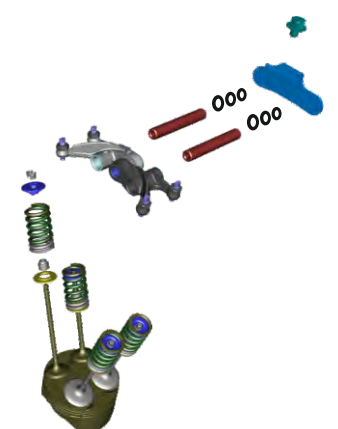
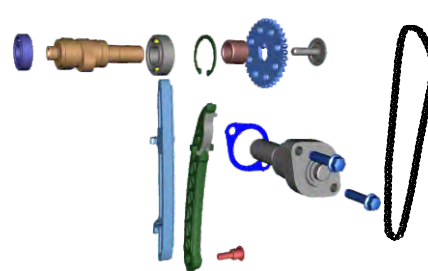
Index

Plate No.	Description	Page No.
1	Cover Cylinder Head	2
2	Cylinder Head	4
3	Valve	6
4	Camshaft / Tensioner	8
5	Cylinder and Piston	10
6	Crankshaft	12
7	Transmission	14
8	Change Drum / Shift Fork	16
9	Gear Change Mechanism	18
10	Engine Assly / Crankcase RH	20
11	Crankcase LH	22
12	Balancer Idler Gear / Water Pump	24
13	Oil Pump	26
14	Radiator	28
15	Cover Clutch	30
16	Cover Magneto	32
17	Clutch Assly	34
18	Carburettor	36
19	Air Cleaner Complete	38
20	Silencer Assly	40
21	Starter Assly	42
22	Magneto, C.D.I. & H.T. Coil	44
23	Seat Assly / Seat Lock	46
24	Engine Mountings	48
25	Frame and Frame Fitting	50
26	Swing Arm / Rear Shock Absorber	52
27	Pillion Foot Rest / Holder	54
28	Mudguard- Front & Rear	56
29	Stand Assembly	58
30	Tyre/ Tube / Rim	60

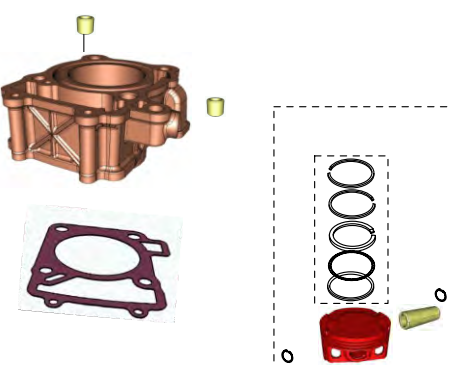
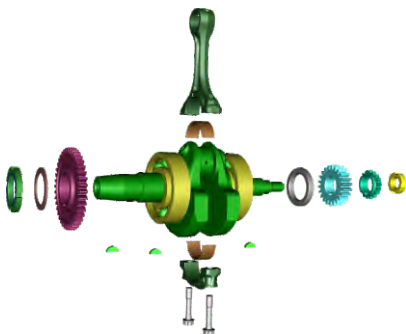
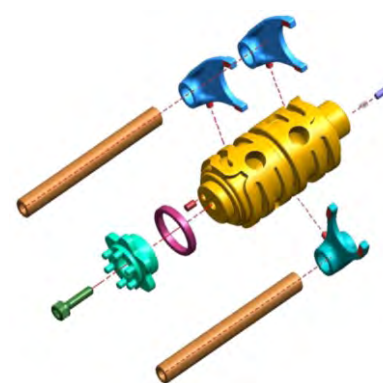
Index

Plate No.	Description	Page No.
31	Front Hub	62
32	Front Master Cylinder	64
33	Front Disc Brake	66
34	Rear Hub	68
35	Rear Disc Brake System	70
36	Rear Brake Pedal	72
37	Handle Bar Assly	74
38	Front Fork	76, 78
39	Painted Parts & Decals	80, 82
40	Radiator Cover	84
41	Petrol Tank, Cap Tank & Gauge Fuel	86
42	Fittings - Petrol Tank, Side Cover & Cover Seat	88
43	Meter Assly.	90
44	Control Cables	92
45	Chain Case	94
46	Head Lamp & Fairing	96
47	Indicator Light Assly.	98
48	Tail Lamp Assly. / Front No. Plate	100
49	Electrical Equipments	102
50	Tool Kit	104
51	Accessories / Grab Handle	106

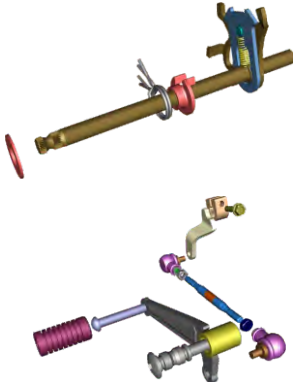
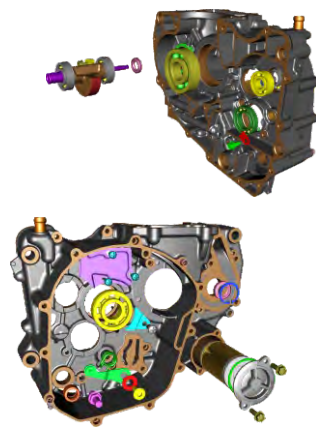
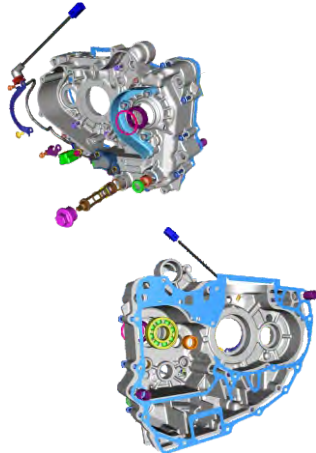
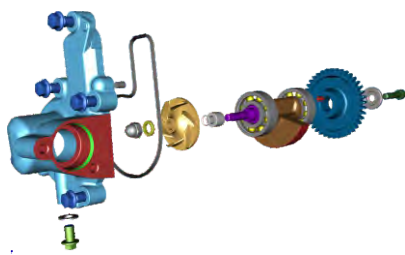
Pictorial Index

PLATE NO. : 1 COVER CYLINDER HEAD	PAGE NO. 1	PLATE NO. : 2 CYLINDER HEAD	PAGE NO. 3
			
PLATE NO. : 3 VALVE	PAGE NO. 5	PLATE NO. : 4 CAMSHAFT / TENSIONER	PAGE NO. 7
			

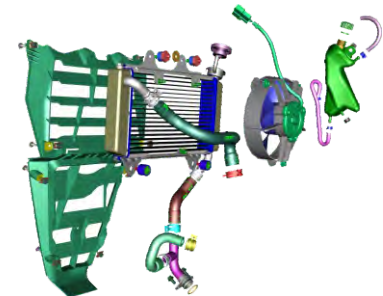
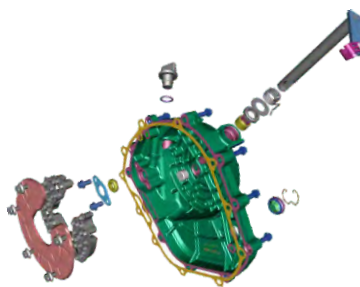
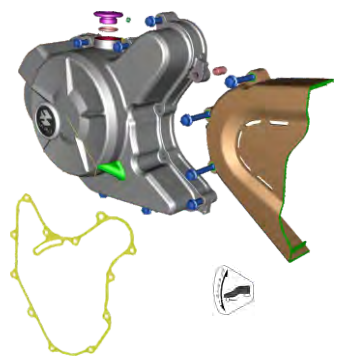
Pictorial Index

PLATE NO. : 5 CYLINDER & PISTON	PAGE NO. 9	PLATE NO. : 6 CRANKSHAFT	PAGE NO. 11
			
PLATE NO. : 7 TRANSMISSION	PAGE NO. 13	PLATE NO. : 8 CHANGE DRUM / SHIFT FORK	PAGE NO. 15
			

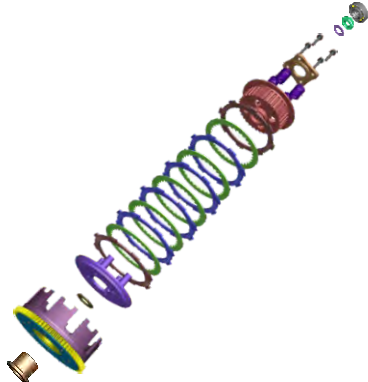
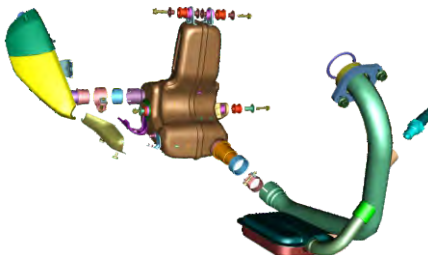
Pictorial Index

PLATE NO. : 9 GEAR CHANGE MECHANISM	PAGE NO. 17	PLATE NO. : 10 ENGINE ASSLY & CRANKCASE RH	PAGE NO. 19
			
PLATE NO. : 11 CRANKCASE LH	PAGE NO. 21	PLATE NO. : 12 BALANCER IDLER GEAR/WATER PUMP	PAGE NO. 23
			

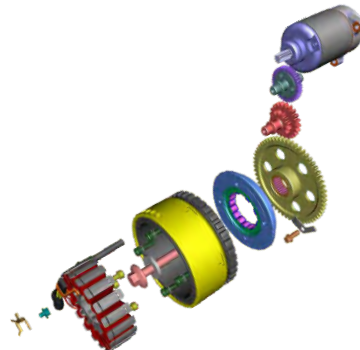
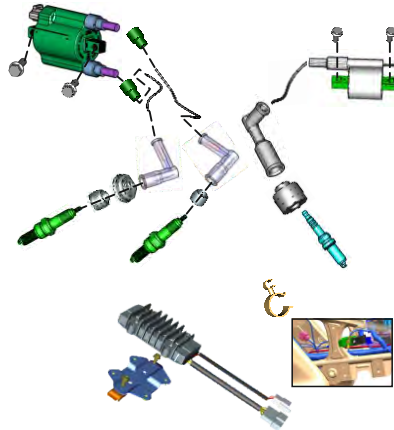
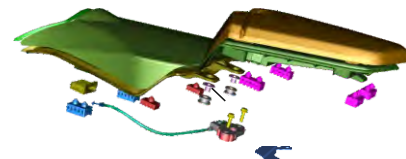
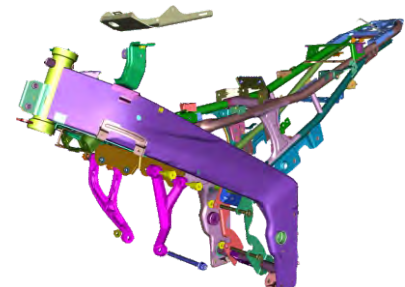
Pictorial Index

PLATE NO. : 13 OIL PUMP	PAGE NO. 25	PLATE NO. : 14 RADIATOR	PAGE NO. 27
			
PLATE NO. : 15 COVER CLUTCH	PAGE NO. 29	PLATE NO. : 16 COVER MAGNETO	PAGE NO. 31
			

Pictorial Index

PLATE NO. : 17 CLUTCH ASSEMBLY	PAGE NO. 33	PLATE NO. : 18 THROTTLE BODY	PAGE NO. 35
			
PLATE NO. : 19 AIR CLEANER COMPLETE	PAGE NO. 37	PLATE NO. : 20 SILENCER ASSEMBLY	PAGE NO. 39
			

Pictorial Index

PLATE NO. : 21 STARTER ASSEMBLY	PAGE NO. 41	PLATE NO. : 22 H T COIL AND REGULATOR ASSEMBLY	PAGE NO. 43
			
PLATE NO. : 23 SEAT ASSEMBLY	PAGE NO. 45	PLATE NO. : 24 FRAME & FITTINGS	PAGE NO. 47
			

Pictorial Index

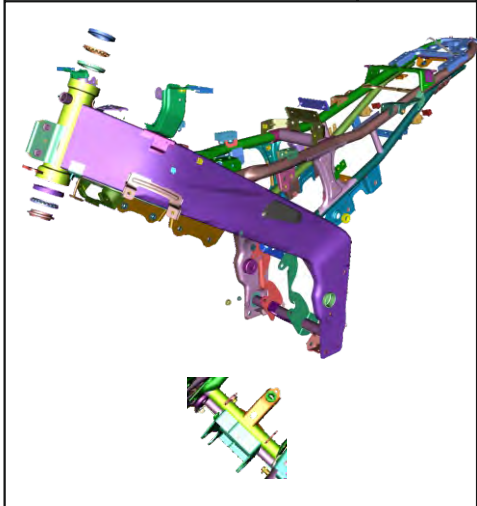
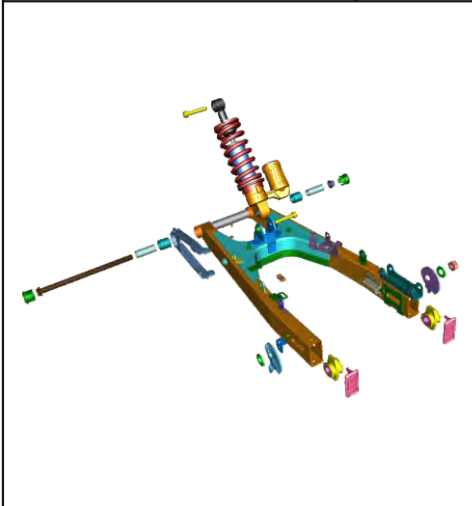
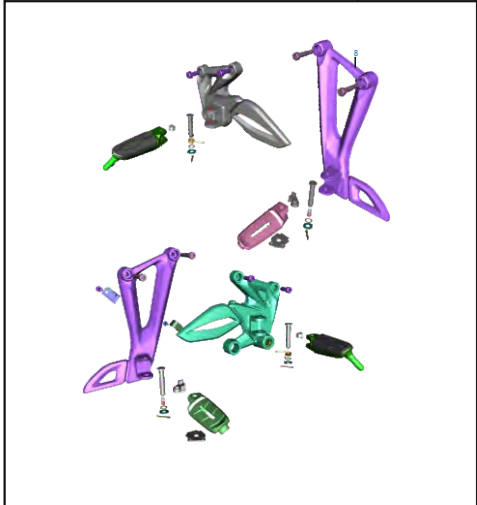
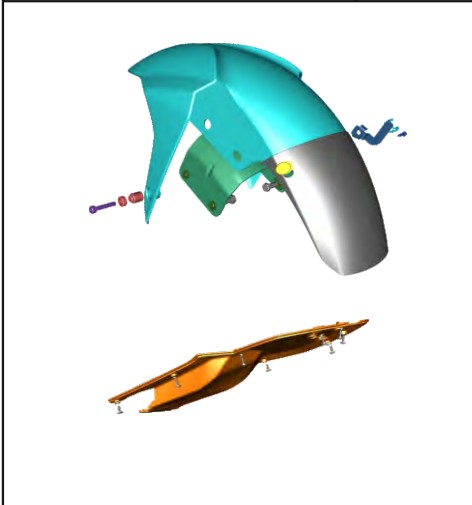
PLATE NO. : 25 FRAME AND FITTINGS	PAGE NO. 49	PLATE NO. : 26 SWING ARM ASSEMBLY	PAGE NO. 51
			

PLATE NO. : 27 PILLION FOOTREST & HOLDER	PAGE NO. 53	PLATE NO. : 28 MUD GUARD FRONT & REAR	PAGE NO. 55
			

Pictorial Index

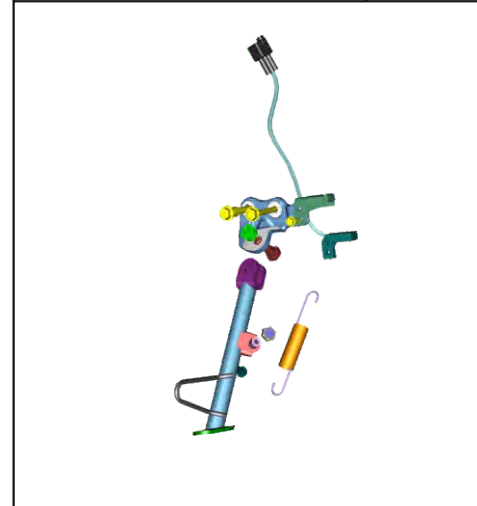
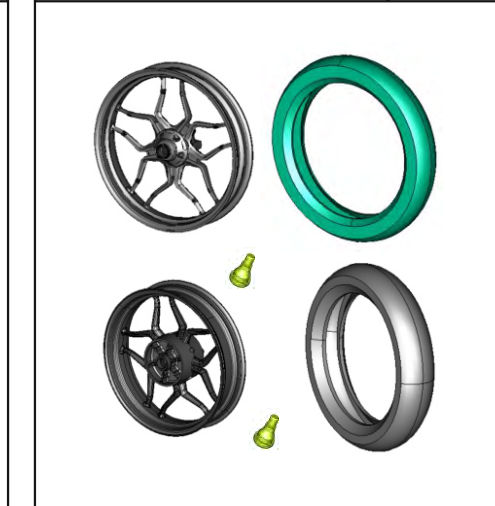
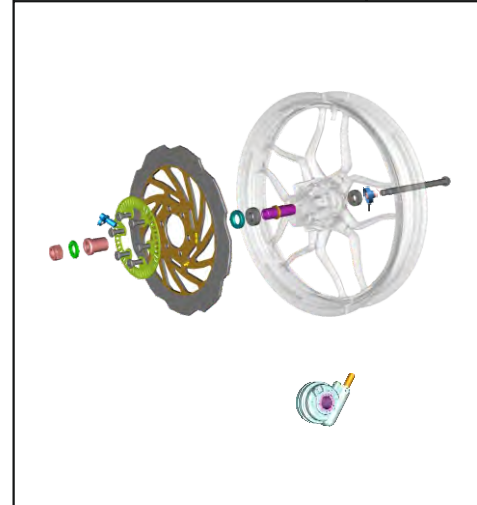
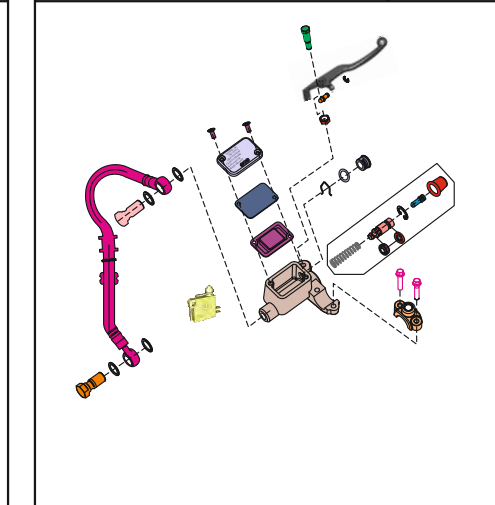
PLATE NO. : 29 STAND ASSEMBLY	PAGE NO. 57	PLATE NO. : 30 TYRE & TUBE	PAGE NO. 59
			

PLATE NO. : 31 FRONT HUB	PAGE NO. 61	PLATE NO. : 32 FRONT MASTER CYLINDER	PAGE NO. 63
			

Pictorial Index

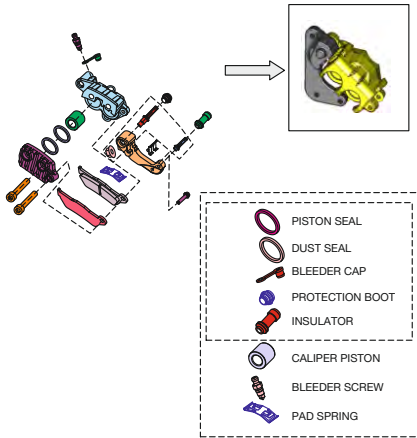
PLATE NO. : 33 FRONT DISC BRAKE	PAGE NO. 65
	

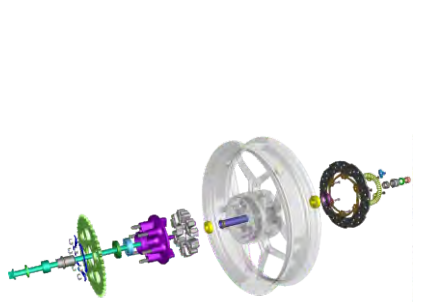
PLATE NO. : 34 REAR HUB	PAGE NO. 67
	

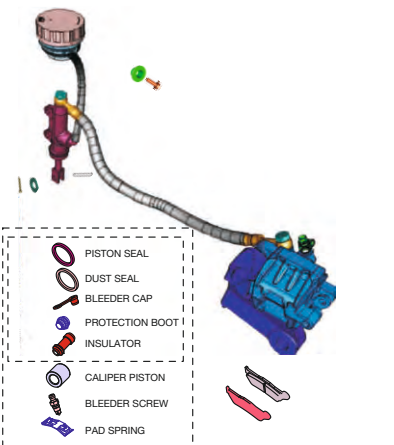
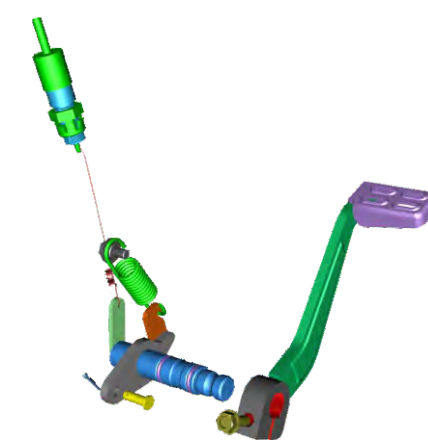
PLATE NO. : 35 REAR DISC BRAKE SYSTEM	PAGE NO. 69
	

PLATE NO. : 36 REAR BRAKE PEDAL	PAGE NO. 71
	

Pictorial Index

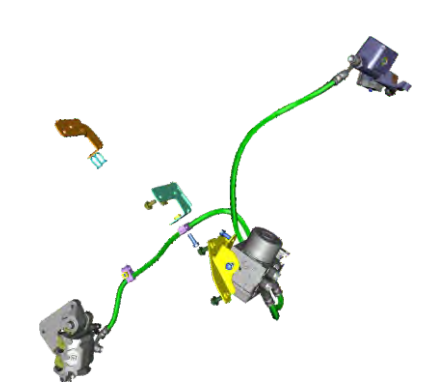
PLATE NO. : 37 ANTI BRAKE SYSTEM	PAGE NO. 73
	

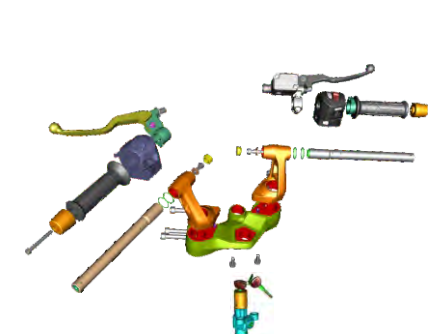
PLATE NO. : 38 HANDLE BAR ASSEMBLY	PAGE NO. 75, 77
	


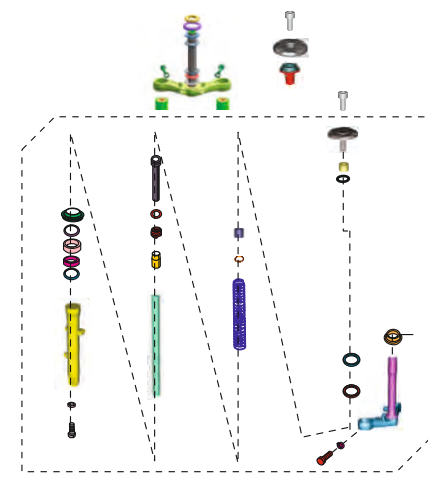
PLATE NO. : 39 FRONT FORK	PAGE NO. 79, 81
	

PLATE NO. : 40 PETROL TANK, CAP TANK & GAUGE FUEL	PAGE NO. 83
	

Pictorial Index

PLATE NO. : 41
FITTING FAIRING SIDE COVERS

PAGE NO.
85

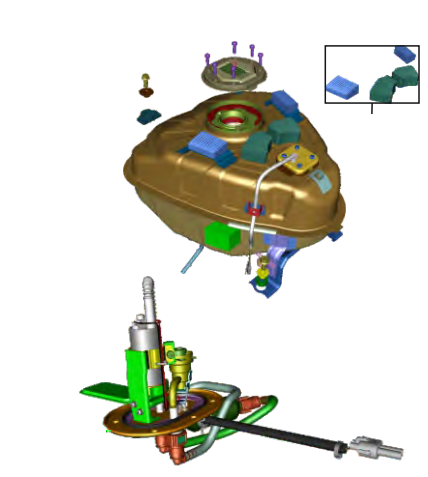

PLATE NO. : 42
FITTING FUEL TANK COVE

PAGE NO.
87

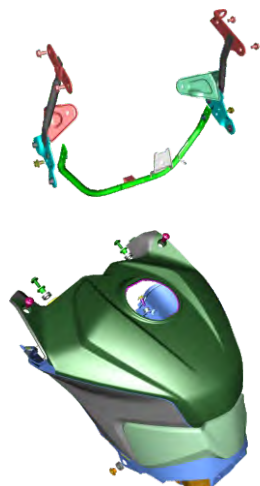


PLATE NO. : 43
FITTING SIDE COVER

PAGE NO.
89


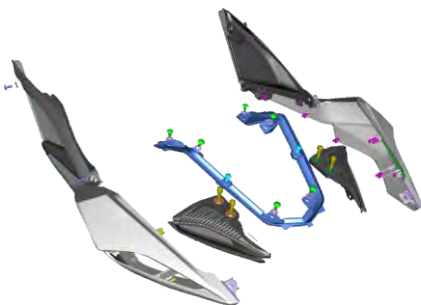


PLATE NO. : 44
SPEEDOMETER ASSEMBLY

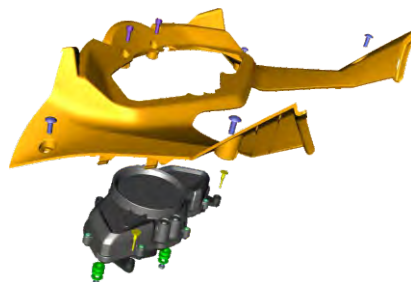PAGE NO.
91



Pictorial Index

PLATE NO. : 45
CONTROL CABLES

PAGE NO.
93



PLATE NO. : 46
CHAIN CASE

PAGE NO.
96

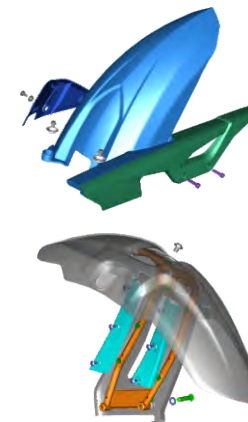


PLATE NO. : 47
HEAD LAMP & FAIRING

PAGE NO.
97


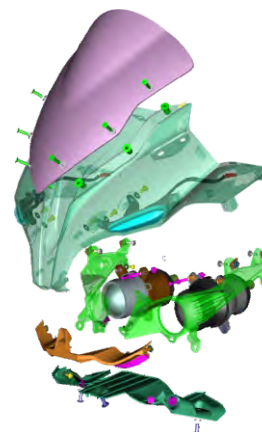


PLATE NO. : 48
FAIRING STRUCTURE

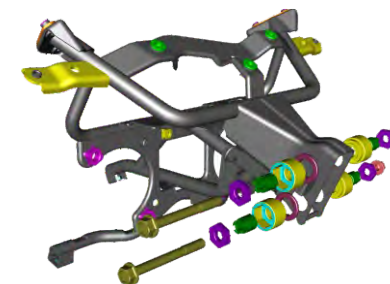PAGE NO.
99



Pictorial Index


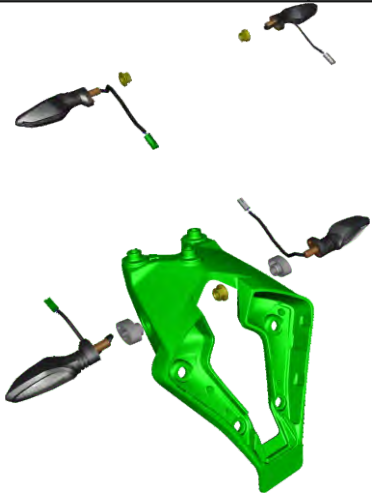
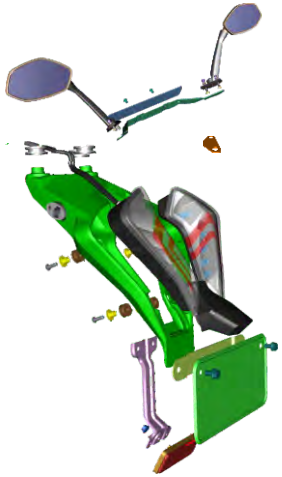
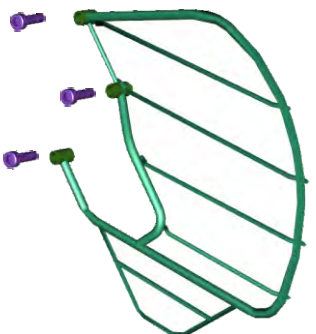
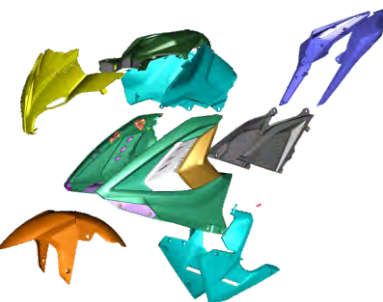
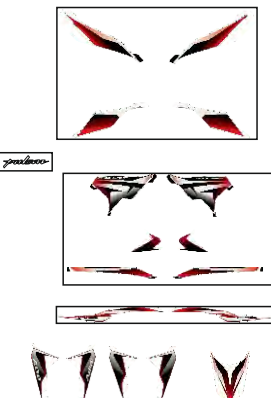
PLATE NO. : 49 INDICATOR ASSEMBLY	PAGE NO. 101	PLATE NO. : 50 TAIL LAMP & FRONT NUMBER PLATE	PAGE NO. 103
			

PLATE NO. : 51-52 ELECTRICAL EQUIPMENTS	PAGE NO. 105	PLATE NO. : 53 TOOL KIT	PAGE NO. 107
			

Pictorial Index


PLATE NO. : 54 ACCESSORIES	PAGE NO. 109	PLATE NO. : 55 DECALS	PAGE NO. 111
			
PLATE NO. : 56 PAINTED PARTS	PAGE NO. 113		
			

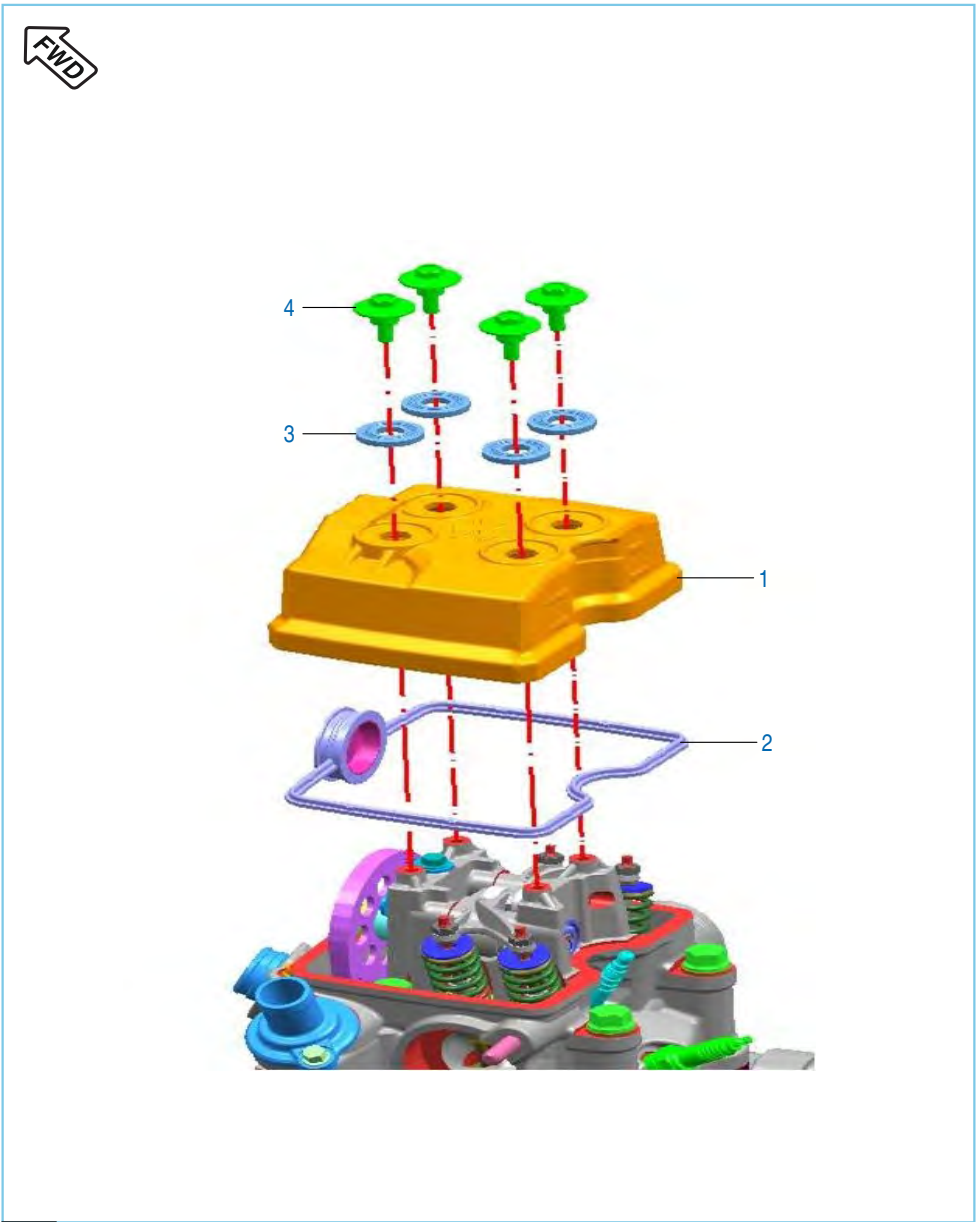Cover Cylinder Head




No.	Part No.	Description	Qty.	Remarks
1	JL 5110 41	Cover Cylinder Head	1	
2	JL 5110 42	Gasket Head Cover(Rubber)	1	
3	JG 5110 21	Washer	4	
4	JG 5110 22	Bolt Special	4	

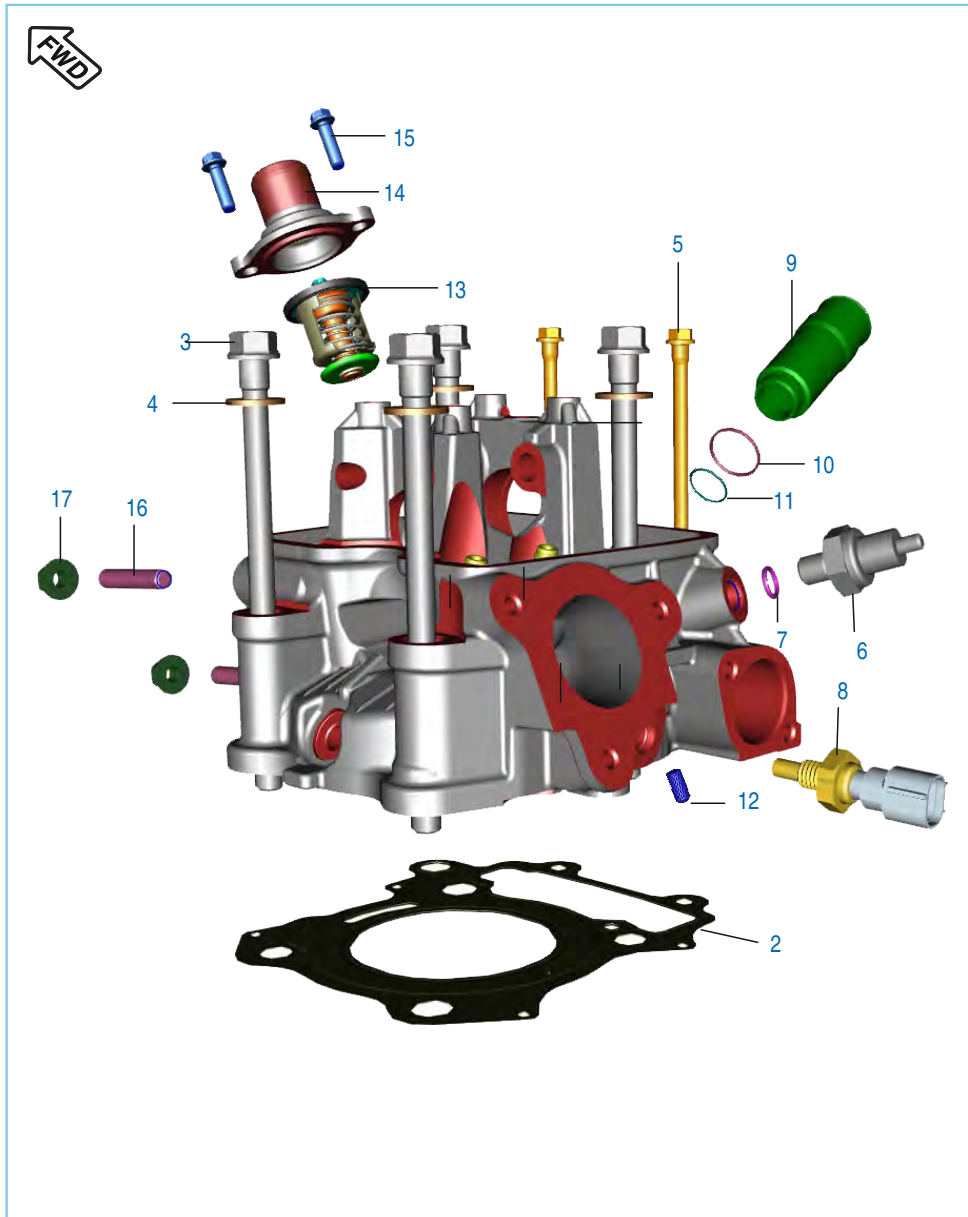Cylinder Head




No.	Part No.	Description	Qty.	Remarks
1	36 DT00 32	Kit Cylinder Head Assly	1	
2	JL 5110 22	Gasket Cylinder Head	1	
3	JG 5410 68	Hex Flange Head Bolt M10	4	
4	LD A000 08	Washer 11.2*20*2T	4	
5	JL 5110 09	M6 Stud Bolt	2	
6	DK 1012 25	Switch Oil Pressure	1	
7	DK 1013 40	O'Ring	1	
8	JG 3514 00	Coolant Water Temp Sensor	1	
9	JL 5112 19	Sleeve Spark Plug	1	
10	39 2629 21	'O' Ring Sleeve	1	Top side
11	39 1283 21	'O' Ring Sleeve	1	Bottom side
12	39 2608 01	Grub Screw	1	
13	JL 6012 37	Thermostat Assembly	1	
14	JL 5110 29	Cover Thermostat	1	
15	KA EQ06 20	Bolt - Flange :- M6	2	
16	JG 5110 46	Stud (M8*1.25)	2	
17	LC G000 06	Nut Hex Flanged	2	

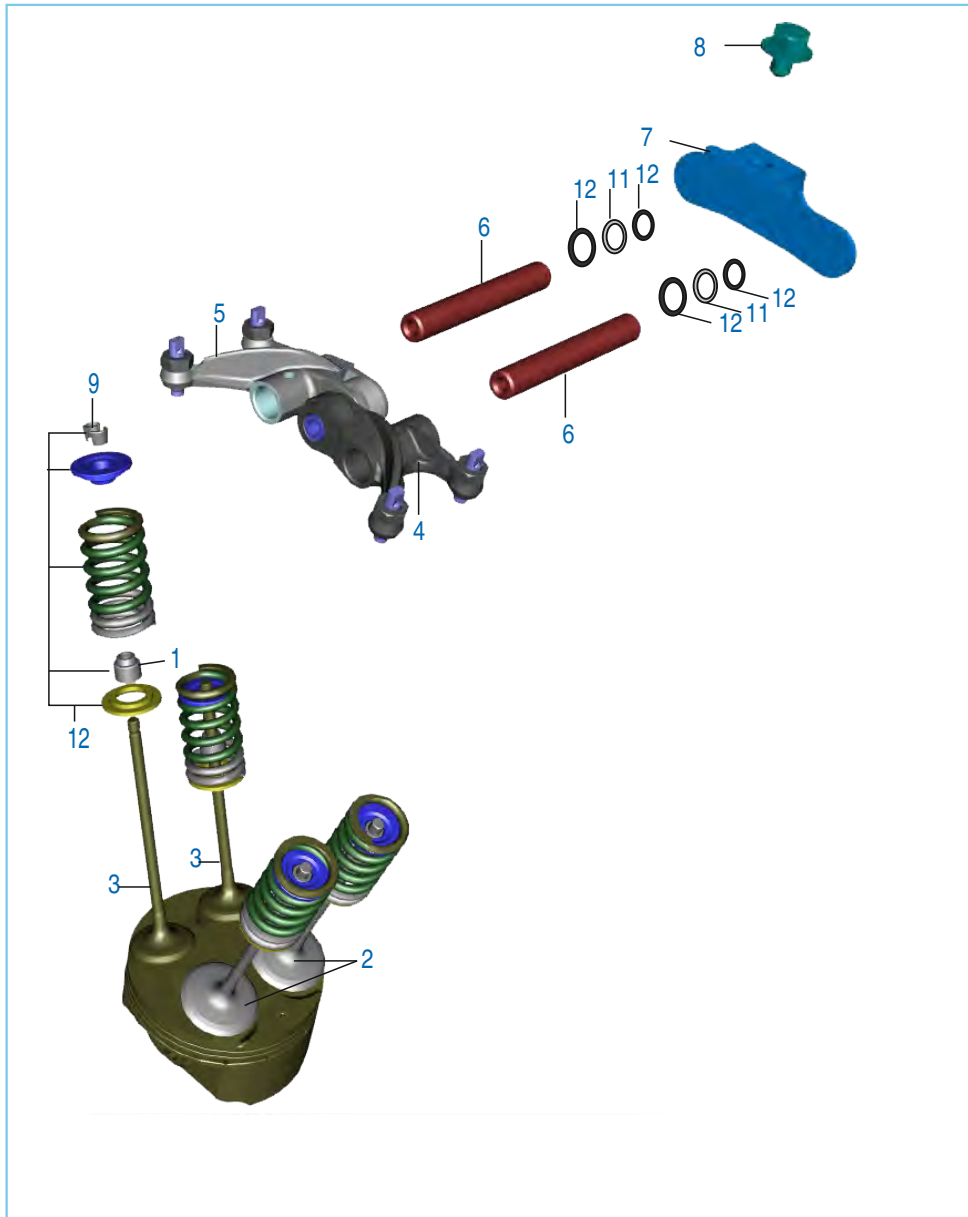Valve




No.	Part No.	Description	Qty.	Remarks
1	39 2017 19	Seal - Oil	4	
2	JL 5110 10	Valve Intake	2	
3	JL 5110 11	Valve Exhaust	2	
4	DT 5112 42	Assembly Rocker Arm Intake	1	
5	DT 5112 43	Assembly Rocker Arm Exhaust	1	
6	JL 5112 05	Rocker Arm Shaft	2	
7	JF 5112 07	Plate Stopper Rocker Arm	1	
8	LA E000 16	Bolt Flanged M5X0.8X6L-Precoated	1	
9	DG 1010 29	Cotter Valve	8	
10	36 JL00 11	Valve Repair Kit	4	
11	DH 1012 95	Wave Washer	2	
12	39 2440 11	Plain Wahser	4	

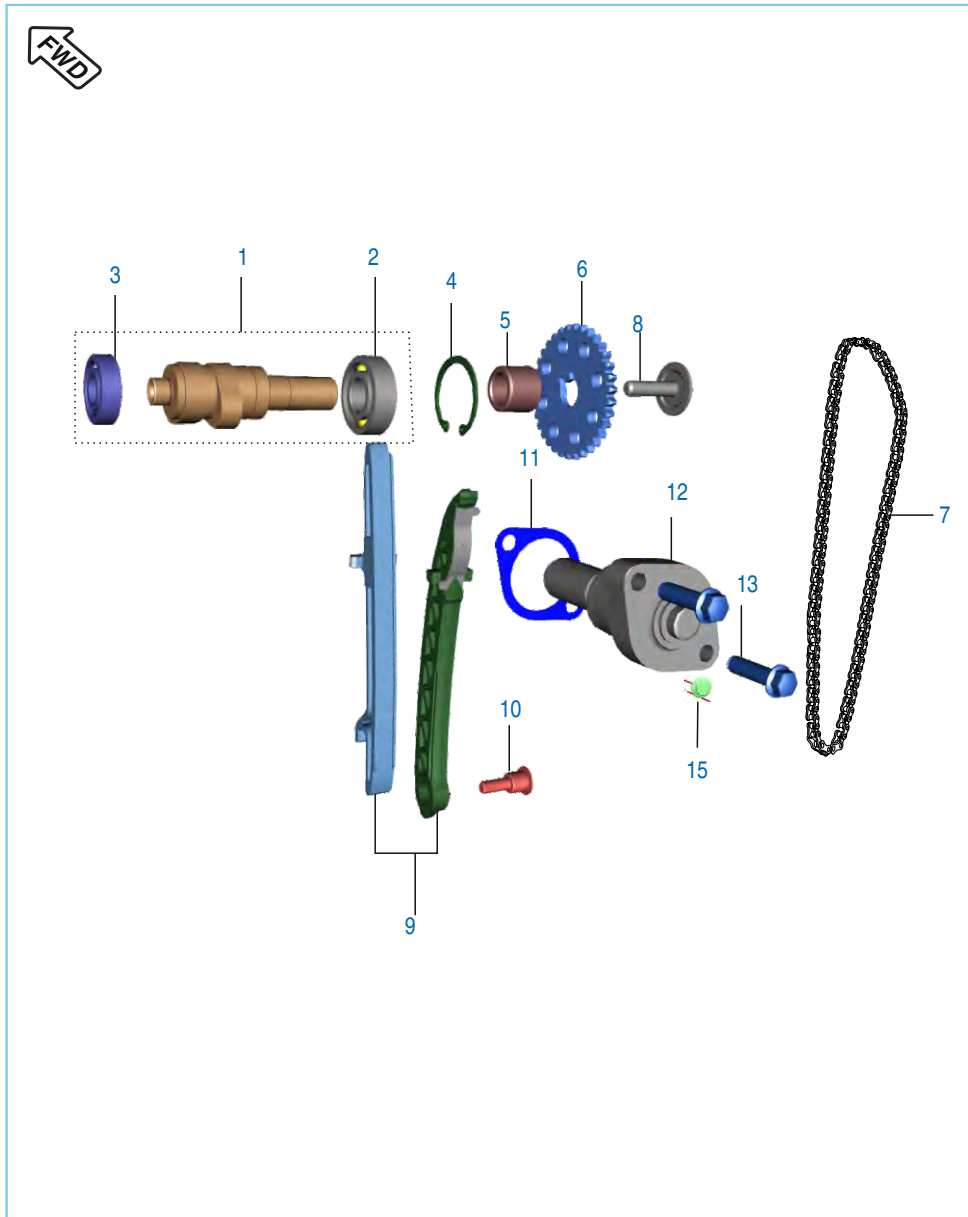Camshaft / Tensioner




No.	Part No.	Description	Qty.	Remarks
1	DT 5112 39	Assembly Camshaft	1	
2	AP 1012 36	Bearing - Ball :- 12 X 28 X 8	1	
3	JG 5312 20	Bearing - Ball 6202/HN3	1	
4	39 0594 17	Circlip - Internal	1	
5	JL 5112 21	Spacer Camshaft	1	
6	JL 5112 20	Sprocket Camshaft	1	
7	JL 5112 22	Timing Chain	1	
8	JG 5112 69	Bolt Special Flanged (Camshaft)	1	
9	36 DT00 01	Kit Cam Chain Guide	1	
10	DH 1013 92	Chain Guide Pivot Bolt	1	
11	CS 1011 28	Gasket	1	
12	JC 1010 34	Tensioner Assembly	1	
13	KA DQ06 20	Bolt Hexagonal	2	
14	39 2669 21	Ring - O (Tensioner Bolt)	1	N.I.
15	JG 5112 70	Bolt Flanged M6X1X6L-Special	1	

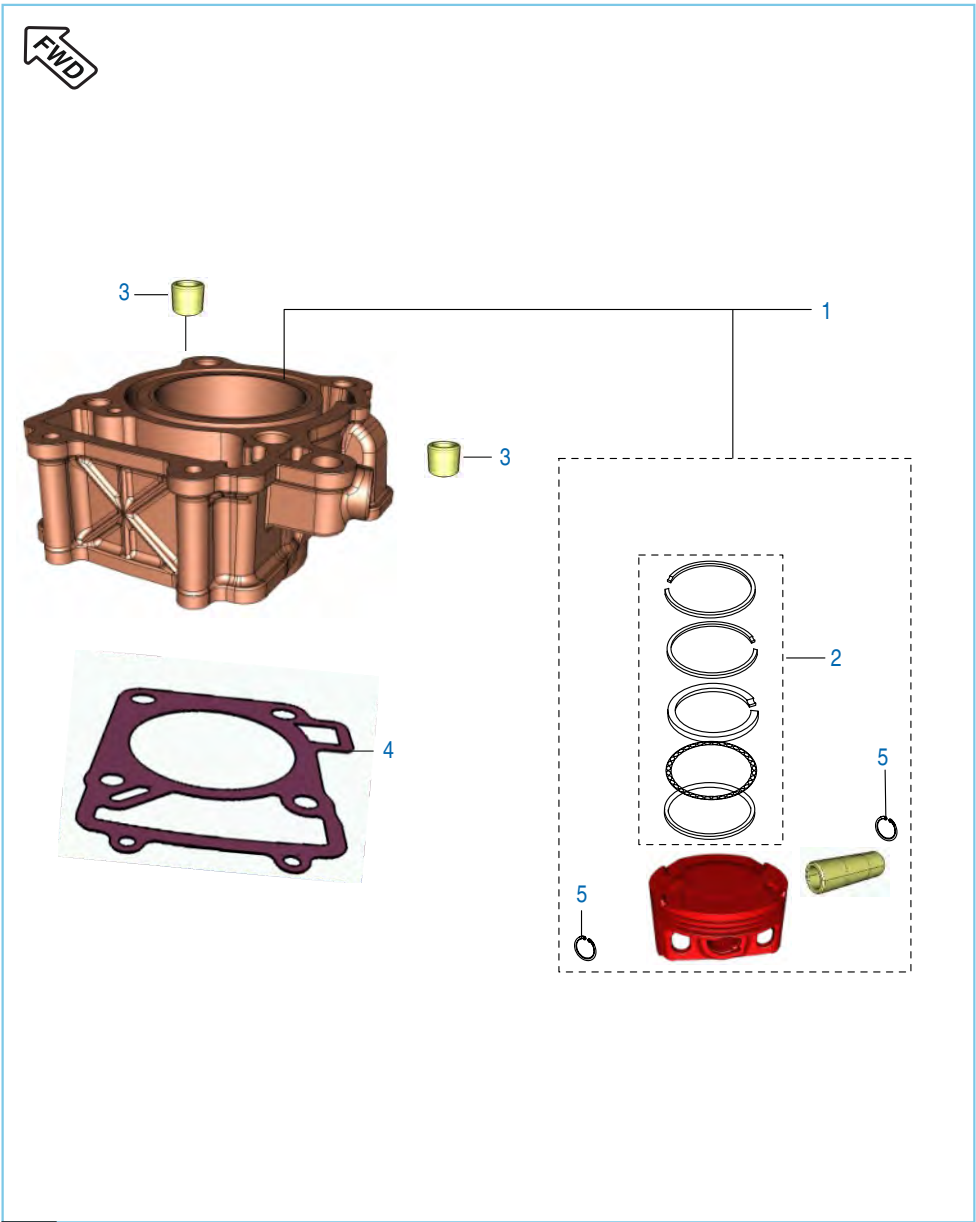Cylinder and Piston




No.	Part No.	Description	Qty.	Remarks
1	36 JL00 07	Kit Asly Block Piston	1	
2	36 JU00 01	Kit Piston Ring	1	
3	39 2181 06	Pin - Hollow Dowel :- 14 X 20	2	
4	JL 5210 02	Gasket Cylinder Block	1	
5	39 2132 17	Ring - Snap	2	

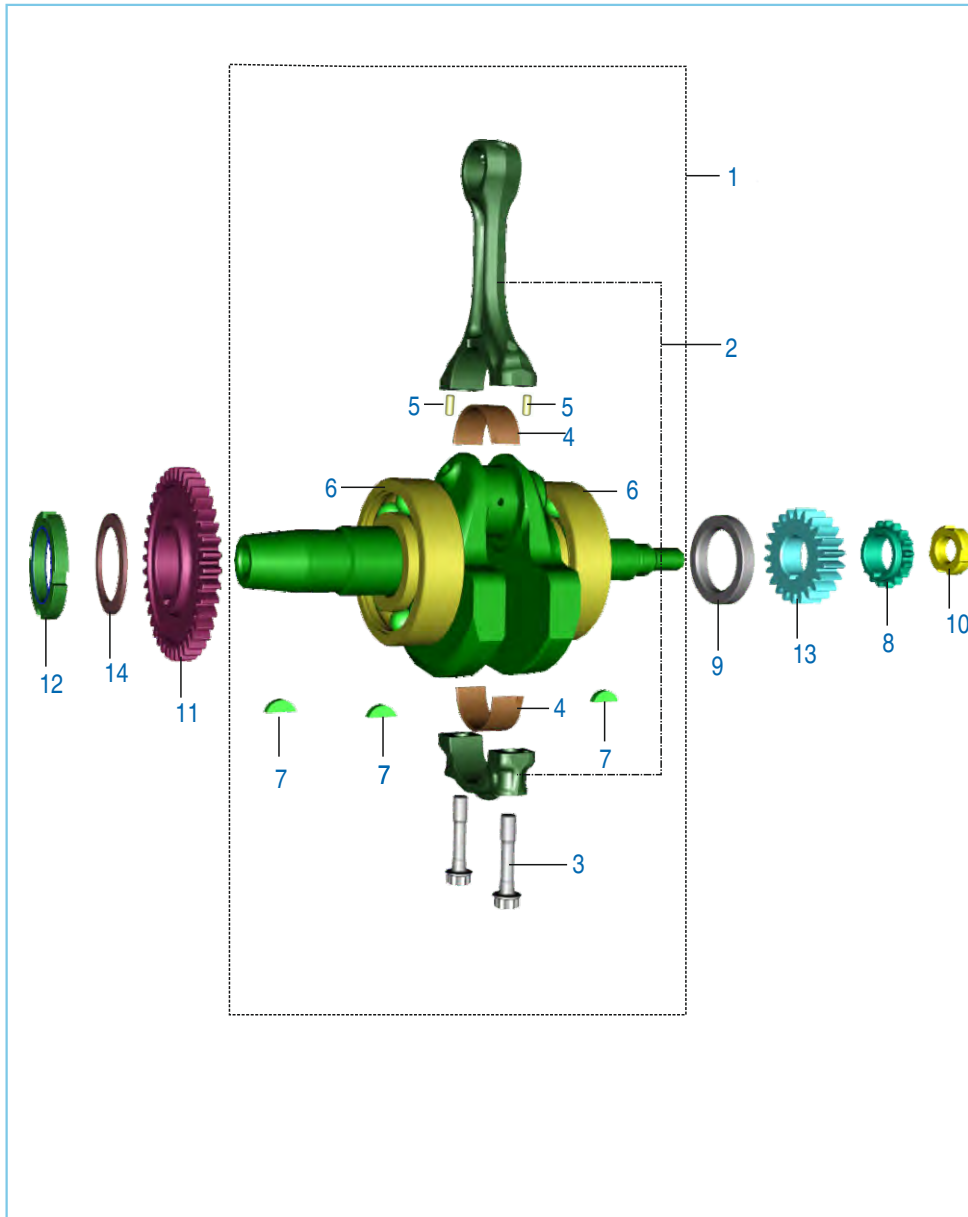Crankshaft




No.	Part No.	Description	Qty.	Remarks
1	JU 5310 27	Crankshaft Assembly Comp	1	
2	JF 5310 07	Conrod Assly Compl	1	
3	JF 5310 14	Bolt (Jf Con Rod)	2	
4	JU 5310 21	Bush Big End	2	
5	39 2203 07	Pin - Parallel	2	
6	39 1931 20	Bearing - Ball : 28 X 68 X 18	1	
7	31 1011 73	Key-Woodruff	3	
8	JG 5310 27	Sprocket Crankshaft	1	
9	JG 5310 31	Spacer Crankshaft	1	
10	LC D000 01	Nut Sprocket Drive Lock	1	
11	JG 5310 41	Balancer Drive Gear	1	
12	JG 5310 40	Nut Balancer Drive Lock	1	
13	JG 5612 16	Gear Drive	1	
14	LD H000 02	Washer	1	

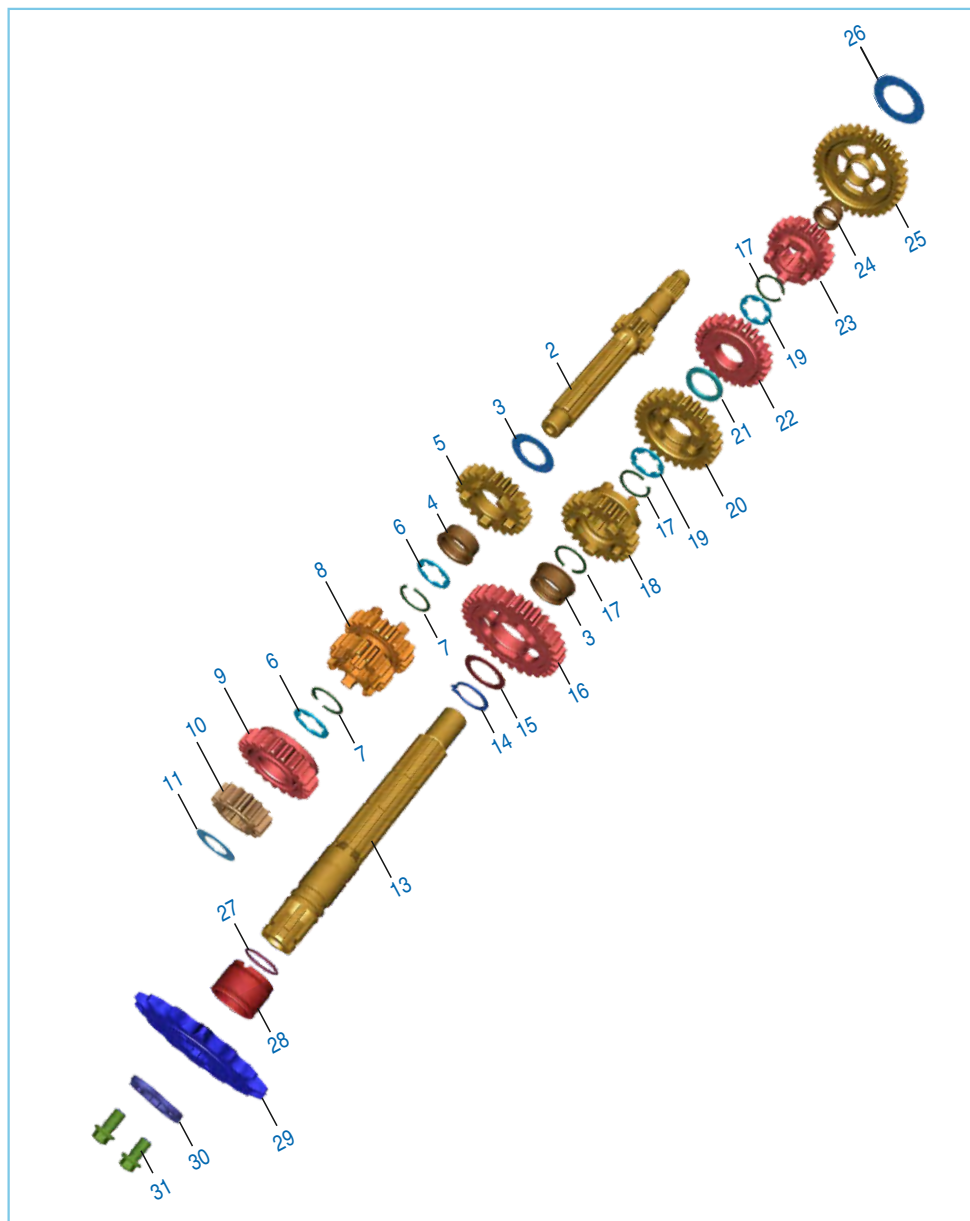Transmission




No.	Part No.	Description	Qty.	Remarks
1	JG 5510 28	Shaft Input T/M Assly	1	N.I
2	JG 5510 27	Shaft Input T/M Comp	1	
3	39 2158 11	Washer - Plain	1	
4	JG 5510 13	Bush 6th Drive / Bush 2nd Driven	2	
5	JG 5512 13	Gear 6th Drive	1	
6	JG 5510 20	Washer Splined	2	
7	BF 5510 37	Ring - Snap	2	
8	JG 5512 14	Gear Drive Multiple 3&4	1	
9	JG 5512 20	Gear 5th Drive	1	
10	JG 5512 27	Gear 2nd Drive	1	
11	JG 5510 22	Washer - Plain 2ng Gear I/P Shaft	1	
12	JG 5510 26	Output Shaft Assy	1	N.I
13	JG 5510 25	Output Shaft Assy With Plug	1	
14	DH 1012 35	Circlip	1	
15	DH 1013 36	Washer Special	1	
16	JG 5512 28	Gear 2nd Driven	1	
17	BF 5510 37	Ring - Snap	2	
18	JG 5512 22	Gear 5th Driven	1	
19	JG 5510 20	Washer - Plain 2ng Gear I/P Shaft	2	
20	JG 5512 23	Gear 3rd Driven	1	
21	JG 5510 21	Washer Plain O/P Shaft	1	
22	JG 5512 15	Gear 4th Driven	1	
23	JG 5512 24	Gear 6th Driven	1	
24	JG 5510 00	Bush 1st Driven	1	
25	JG 5512 25	Gear 1st Driven	1	
26	JG 5510 21	Washer Plain O/P Shaft	1	
27	DK 1013 52	O-Ring Sprocket Collar(17.5*1.5)	1	
28	JG 5510 10	Collar Sprocket	1	
29	DV 1010 48	Sprocket Output (14T)	1	
30	DJ 1013 12	Plate Drive Sprocket	1	
31	LA E000 17	Bolt Flanged M6X1X10L-Precoated	2	

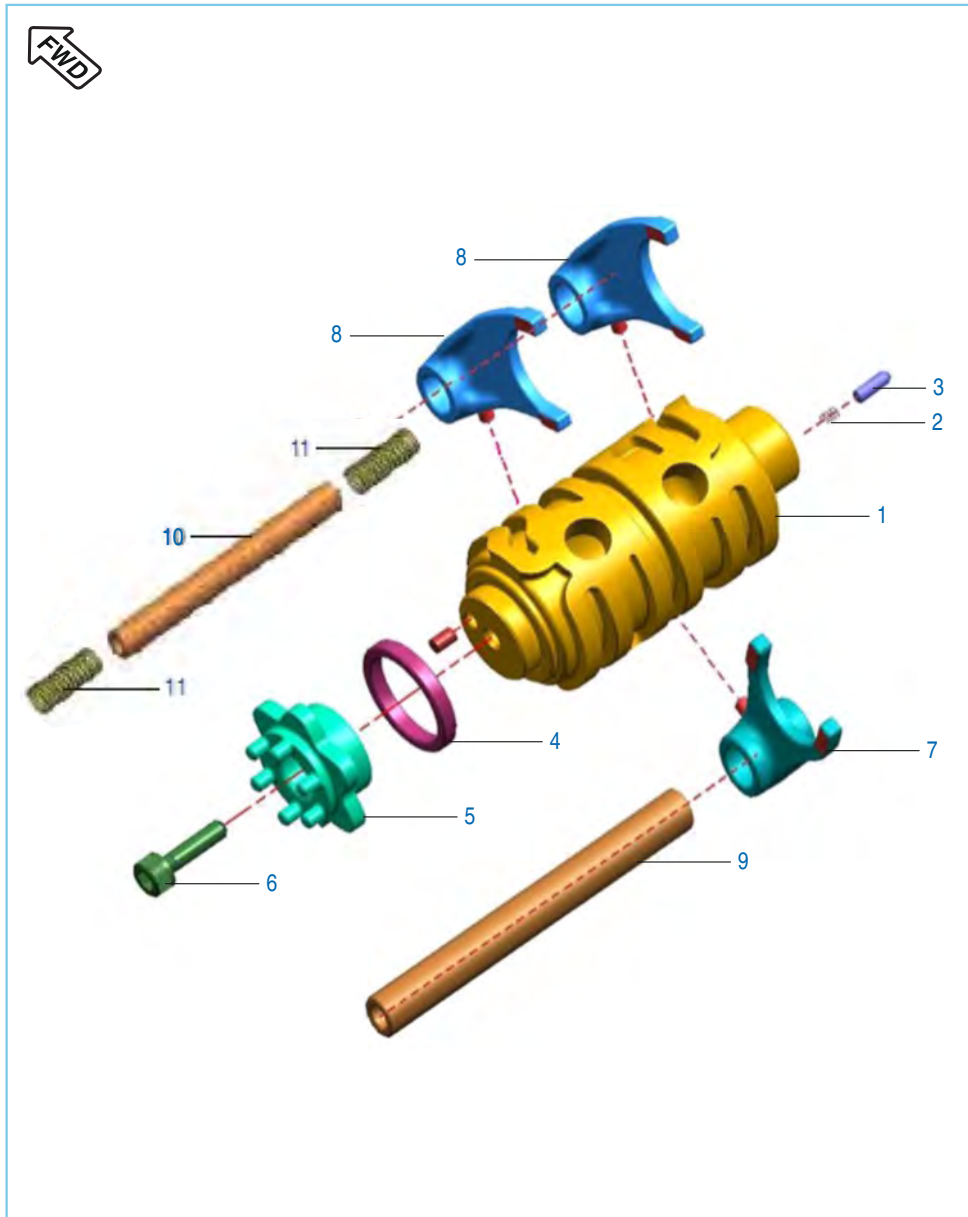Change Drum / Shift Fork




No.	Part No.	Description	Qty.	Remarks
1	JG 5610 11	Drum Complete Gear Shift	1	
2	EC 5610 23	Spring Gear Switch Indicator	1	
3	39 2606 07	Pin - Parallel	1	
4	JG 5610 10	Spacer-Guide Gear Shift	1	
5	JG 5612 22	Guide Gear Shift	1	
6	LA C000 24	Bolt Socket Head M6X1X20L	1	
7	JG 5610 12	Fork Gear Shift Input	1	
8	JG 5610 13	Fork Gear Shift Output	1	
9	JG 5610 16	Shaft Gear Shift Fork	1	
10	JG 5612 25	Shaft Gear Shift Fork Output	1	
11	JG 5612 15	Compression Spring	2	

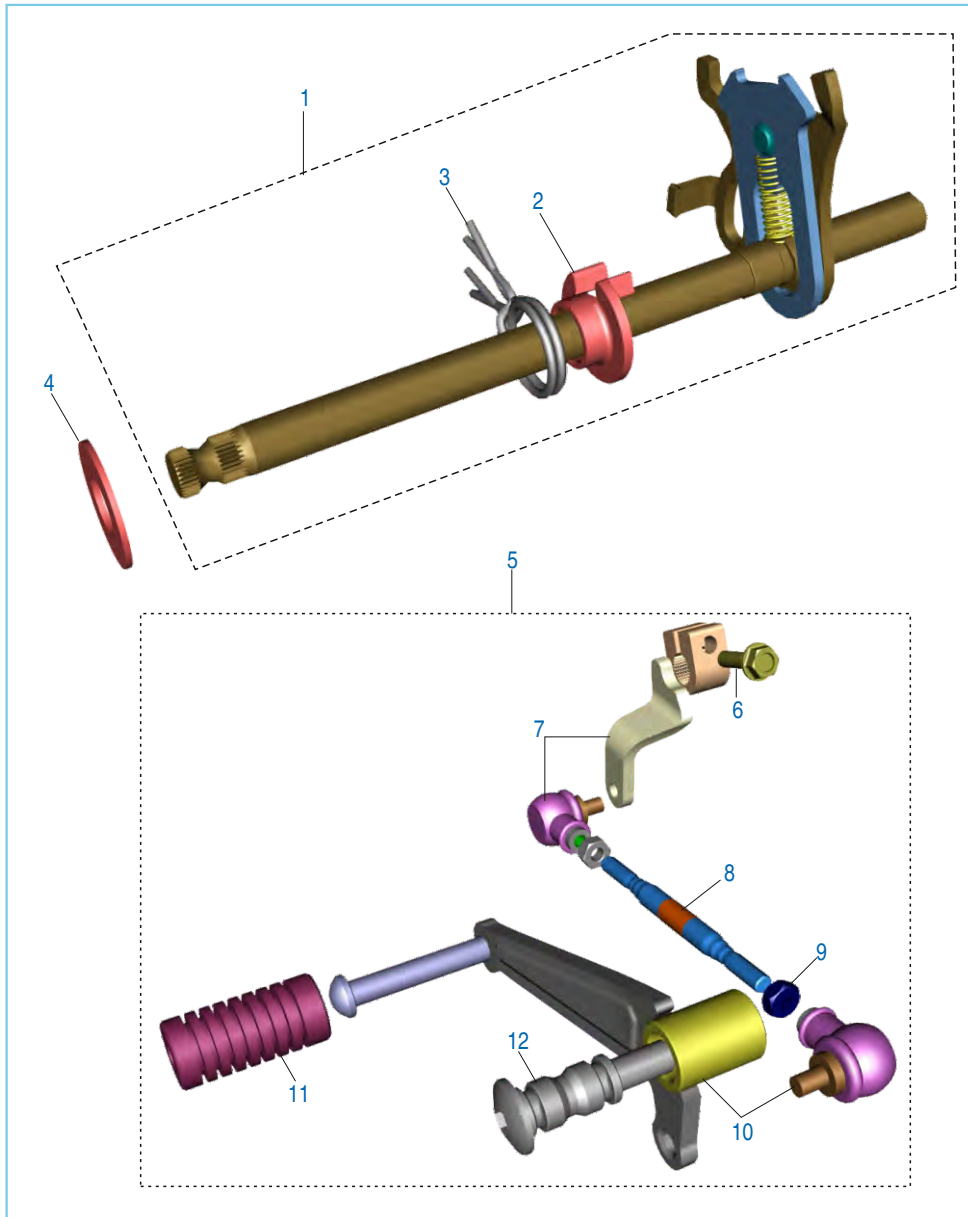Gear Change Mechanism



No.	Part No.	Description	Qty.	Remarks
1	DT 5612 06	Lever Gear Shift Assly Comp.	1	
2	JG 5612 17	Bush Torsion Spring	1	
3	JG 5612 32	Torsion Spring	2	
4	JG 5612 16	Washer	1	
5	DT 5612 01	Assly Lever Complete Change	1	
6	KA DM06 22	Bolt Flanged	1	
7	DT 5614 09	Assly Lever Change Arm	1	
8	DK 1011 80	Tie Rod	1	
9	LC B000 03	Nut	1	
10	DT 5614 08	Change Lever Assly	1	
11	DT 5612 05	Damper	1	
12	JL 5614 09	Bolt Gear Change Lever	1	

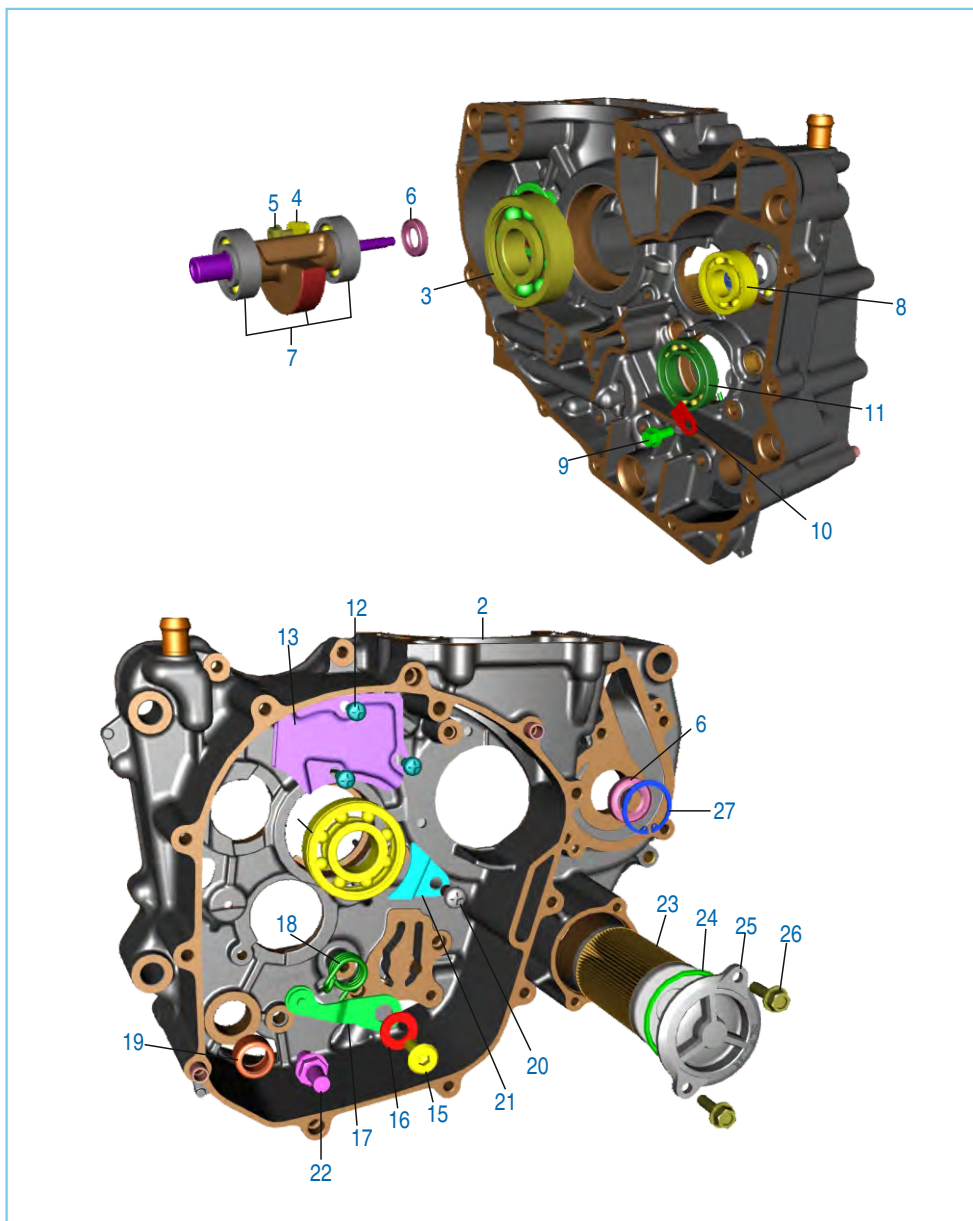
Engine Assembly / Crankcase RH



No.	Part No.	Description	Qty.	Remarks
1	JL 5010 04	Assembly Engine	1	N.I
2	36 JL000 4	Asly Crankcase RH	1	
3	39 1931 20	Ball Bearing 28 X 68 X 18	1	
4	LA D000 77	Bolt Flanged M6x16	1	
5	JG 5410 46	Balancer Bearing Stopper	1	
6	JG 6010 07	Special Shaft Seal Ring (oil)	2	
7	JU 5312 15	Balancer Assly.	1	
8	39 2602 20	Bearing - Ball 6202/HN3	1	
9	DH 1013 83	Pre coated Flanged Bolt M6 X 12	1	
10	JG 5410 59	Plate Stopper Bearing Drum	1	
11	39 2601 20	Bearing - Ball :- 61905 (25X42X9)	1	
12	LB B000 06	Screw Pan head	3	
13	JU 5410 05	Breather Plate	1	
14	59 2000 28	Bearing Ball RH	1	
15	JG 5612 04	Bolt Drum Stopper	1	
16	JG 5612 05	Washer	1	
17	JG 5610 09	Stopper Drum Complete	1	
18	JG 5612 26	Spring	1	
19	39 2562 20	Bearing - Needle Roller:-13X19X12	1	
20	39 0746 01	Screw Pan Cross - M6	1	
21	JG 5410 45	Input Shaft Bearing Stopper	1	
22	DP 1011 91	Bolt Shifter	1	
23	JG 5710 14	Oil Filter	1	
24	JG 5710 16	O-Ring	1	
25	JL 5412 37	Cap Oil Filter	1	
26	LA D000 63	Hexagonal Flange Bolt	2	
27	LE B000 01	Circlip Internal	1	




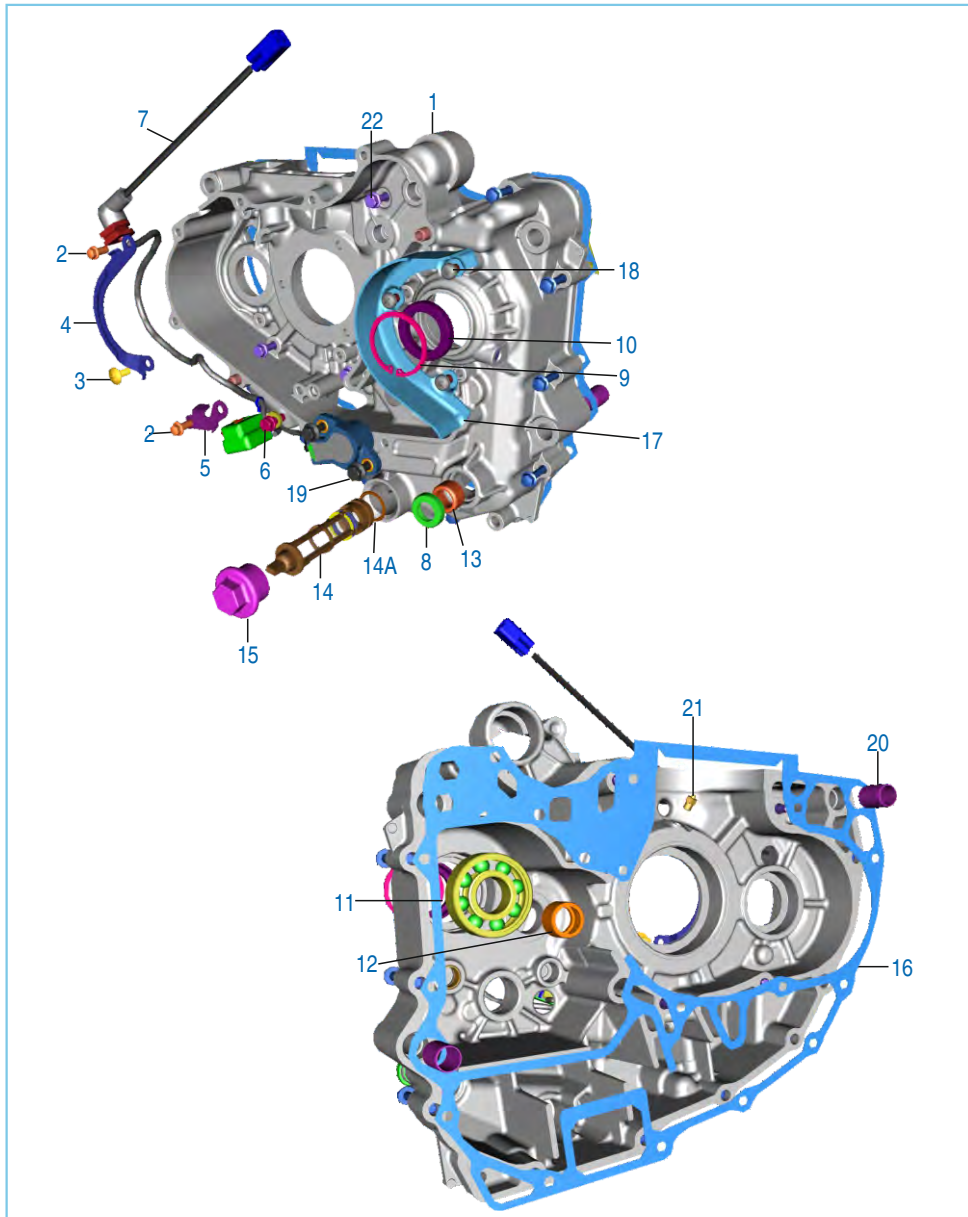Crankcase LH




No.	Part No.	Description	Qty.	Remarks
1	36 JL00 03	Assly. Crankcase LH	1	
2	LA E000 14	Bolt Flanged	2	
3	DH 1013 81	Pre Coated pan Screw	1	
4	JG 5410 63	Bracket Harness Upper	1	
5	JG 5410 44	Bracket Harness Lower	1	
6	39 1773 04	Bolt M-5 x 16	2	
7	DT 3518 02	Neutral Indicator Switch	1	
8	39 1043 19	Seal Oil	1	Gear Change lever
9	KE BA37 15	Circlip Internal	1	Output Shaft
10	DG 1014 56	Seal Oil	1	Output Shaft
11	59 2000 06	Bearing Ball	1	Output Shaft
12	JG 5410 15	Needle Bearing	1	Drum
13	39 2562 20	Needle Bearing	1	
14	JY 5710 30	Mesh Oil Filter Assly.	1	
14a	LJ A000 04	'O' ring Strainer	1	
15	JA 5410 48	Strainer Cap with 'O' Ring	1	
16	JG 5410 41	Gasket Crankcase	1	
17	JG 5410 58	Chain Guard	1	
18	KB BG06 12	Pan Screw Head	3	
19	39 1773 04	Bolt Flange	2	
20	39 2181 06	Hollow Pin Dowel	2	
21	JG 5410 74	Oil Nozzle	1	
22	LA D000 81	Bolt Flange Pre-coated	4	
23	36 DT00 08	Kit Engine Gasket	1	

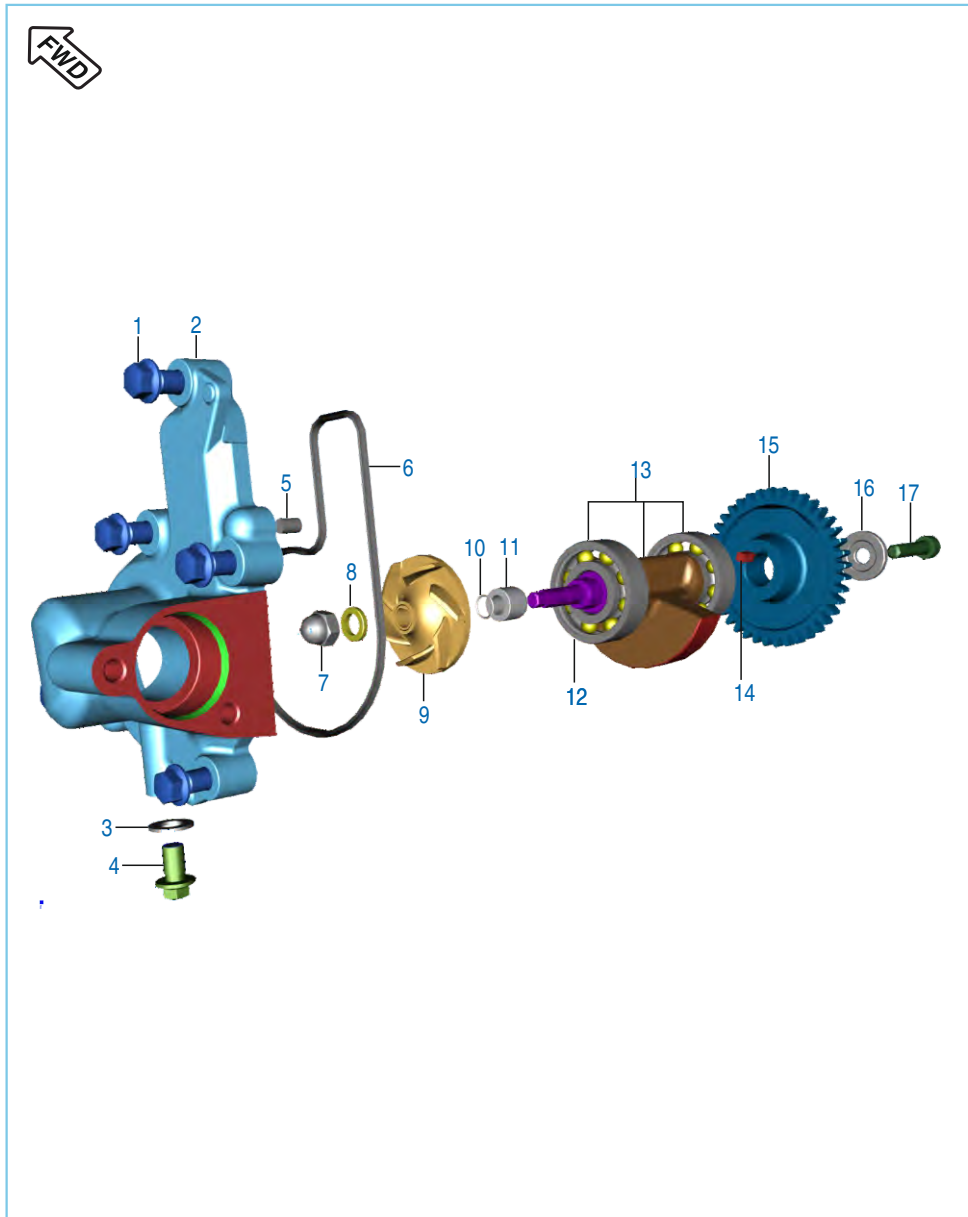Balancer Idler Gear / Water Pump



No.	Part No.	Description	Qty.	Remarks
1	KA EQ06 20	Bolt Hexagonal	5	
2	JL 6010 05	Cover Water Pump	1	
3	39 1665 11	Washer - Seal :- 6	1	
4	LA E000 17	Bolt Flange	1	
5	39 2606 07	Pin - Parallel	2	
6	JG 6010 12	O-Ring (Water Pump Cover)	1	
7	JG 6010 05	Dome Nut	1	
8	JG 5312 15	Washer (2.5MM)	1	
9	JG 6010 13	Water Pump Rotor	1	
10	JG 5312 29	O Ring Balancer Driven	1	
11	JG 5312 28	Sleeve Balancer Driven	1	
12	59 2000 36	Balancer Bearing (6203/HN3C3D8)	2	
13	JU 5312 15	Balancer Assy	1	
14	DS 1011 54	Key	1	
15	JG 5312 07	Gear Balancer Driven	1	
16	DH 1010 48	Washer - Special :- Camshaft	1	
17	DK 1013 86	Pre-coated Soc Hd Cap Bolt M8X40	1	

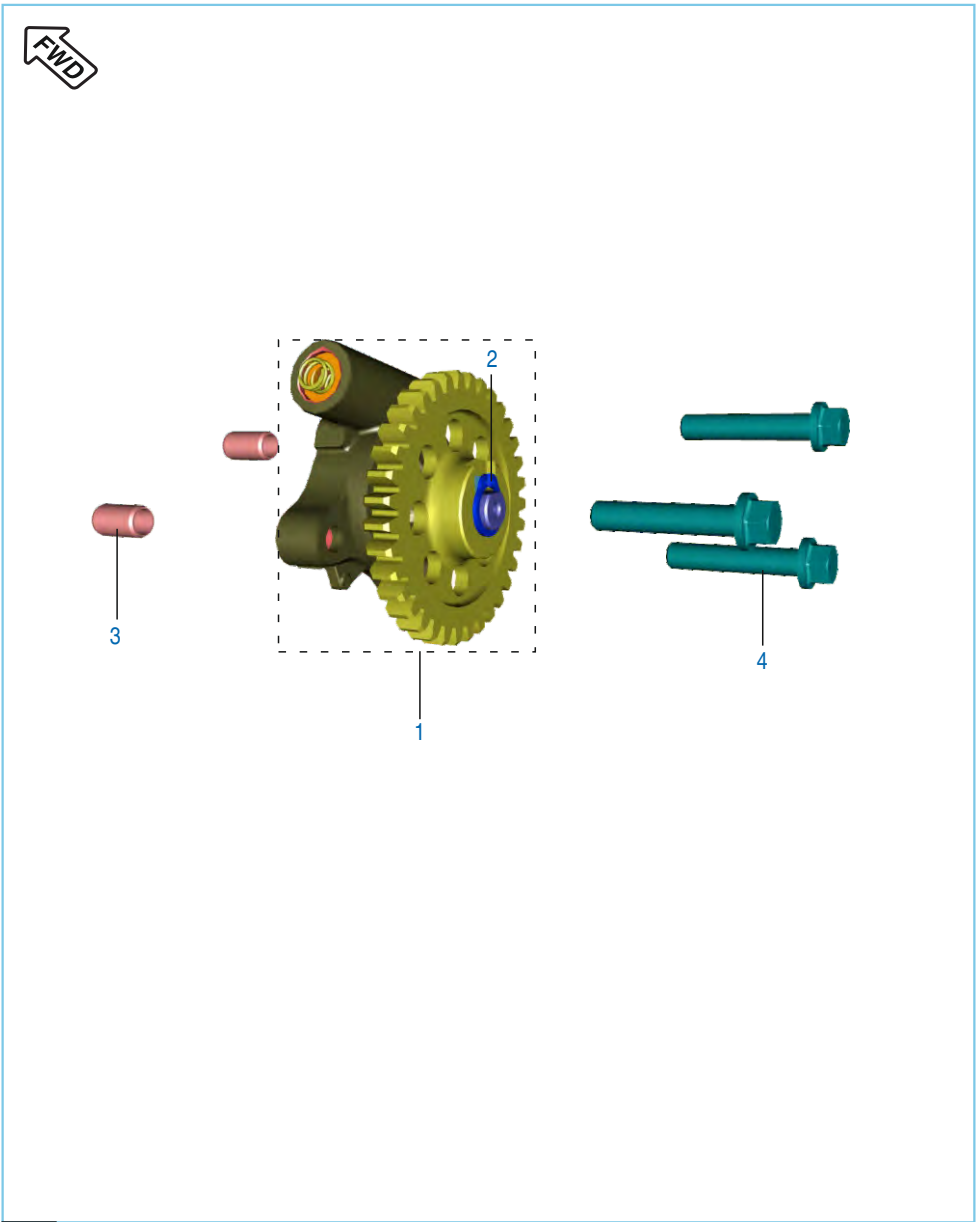Oil Pump




No.	Part No.	Description	Qty.	Remarks
1	JU 5710 00	Oil Pump Assy Comp	1	
2	KE AB10 10	Circlip	1	
3	39 0999 06	Pin - Hollow Dowel	2	
5	LA E000 18	Bolt Flanged M6X1X30L-Precoated	3	

Radiator

No.	Part No.	Description	Qty.	Remarks
1	DT 1810 01	Cowl Radiator	1	
2	DJ 1612 29	Nut - Clip M6	4	
3	39 2141 24	Washer Nylon	4	
4	LB U000 23	Screw	4	
5	DT 6012 32	Radiator Core	1	
6	JG 6012 37	Radiator Fan	1	
7	JL 6012 16	Silent Block	2	
8	39 0211 11	Washer	2	
9	JG 5810 14	Silent Block	2	
10	DT 6012 26	Expansion Tank	1	
11	DT 6012 28	Tube Connecting	1	
12	DT 6012 10	Tube Drain	1	
13	JG 6012 11	Cap Expansion Tank	1	
14	JG 6012 30	O-Ring Cap	1	
15	JG 6012 35	Radiator Cap	1	
16	JG 6012 34	Clamp	2	
17	JL 6012 22	Hose Thermosat to Radiator	1	
18	JL 6012 23	Hose Radiator to T pipe	1	
19	JL 6012 28	Coolant Pipe T Assly	1	
20	JG 6012 09	Clamp Radiator Pipe	2	
21	JL 6010 01	Hose By Pass To pump	1	
22	JL 6012 12	Clamp Radiator	1	
23	LA D000 82	Bolt Flange	2	
24	LJ A000 05	O ring- Pipe Coolant	1	
25	JL 6012 21	Clamp Coolant Pipe	1	
26	JG 1710 29	Spring Band Clip	3	
27	JG 1138 06	Grommet Expansion Tank	1	
28	JY 6012 41	Flange Nut	3	
29	JY 6012 48	Bracket Fan Mounting	3	
30	36 DT00 01	Kit Hardware R Cowl & Fairing	1	




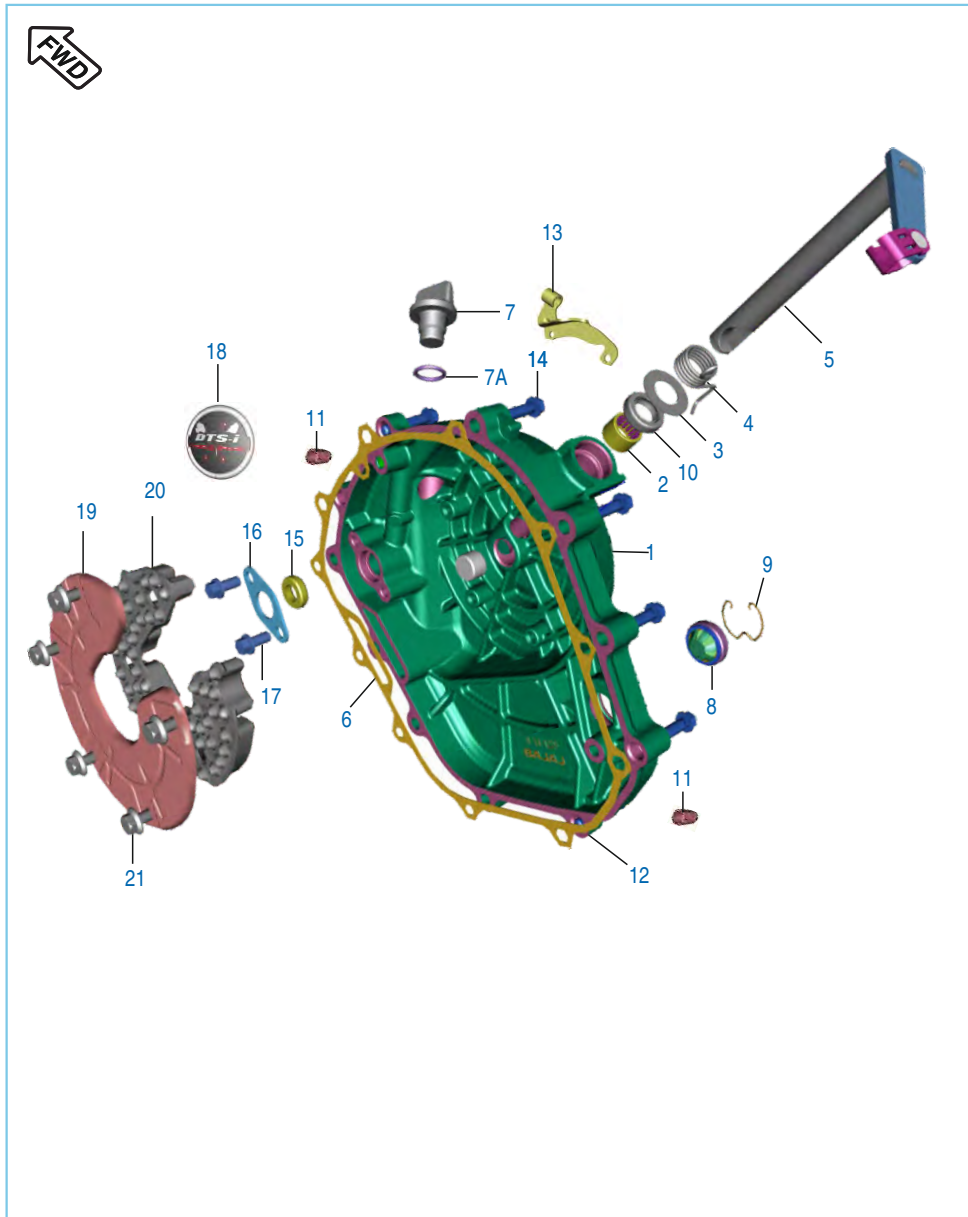Cover Clutch




No.	Part No.	Description	Qty.	Remarks
1	DT 5412 12	Clutch Cover with oil Plug	1	
2	39 1990 20	Bearing - Needle	1	
3	LD B000 20	Washer 12.5X24X0.8T	1	
4	JG 5510 17	Spring	1	
5	DT 5410 19	Shaft Clutch Release Assy	1	
6	JU 5514 01	Rod Push	1	
7	JG 5412 30	Cap Oil Filling	1	
7A	39 1537 21	Ring 'O'	1	
8	JL 5412 27	Window Oil Gauge	1	
9	DH 1021 17	Clip - Wire	1	
10	39 1041 19	Seal - Oil	1	
11	39 0999 06	Pin - Hollow Dowel	2	
12	JL 5412 07	Gasket Clutch Cover	1	
13	DT 5410 18	Bracket Clutch Cable	1	
14	KA EQ06 30	Bolt Flanged	11	
15	39 1046 19	Seal - Oil	1	
16	JG 5412 31	Plate -position	1	
17	DH 1013 83	Precoated Flanged Bolt M6 X 12	2	
18	JL 5412 22	Decal Triple Spark	1	
19	JL 5412 30	Damper Clutch Cover	1	
20	JL 5412 31	Plate Damper Clutch Cover	1	
21	DH 1013 88	Bolt M5 x 10	5	

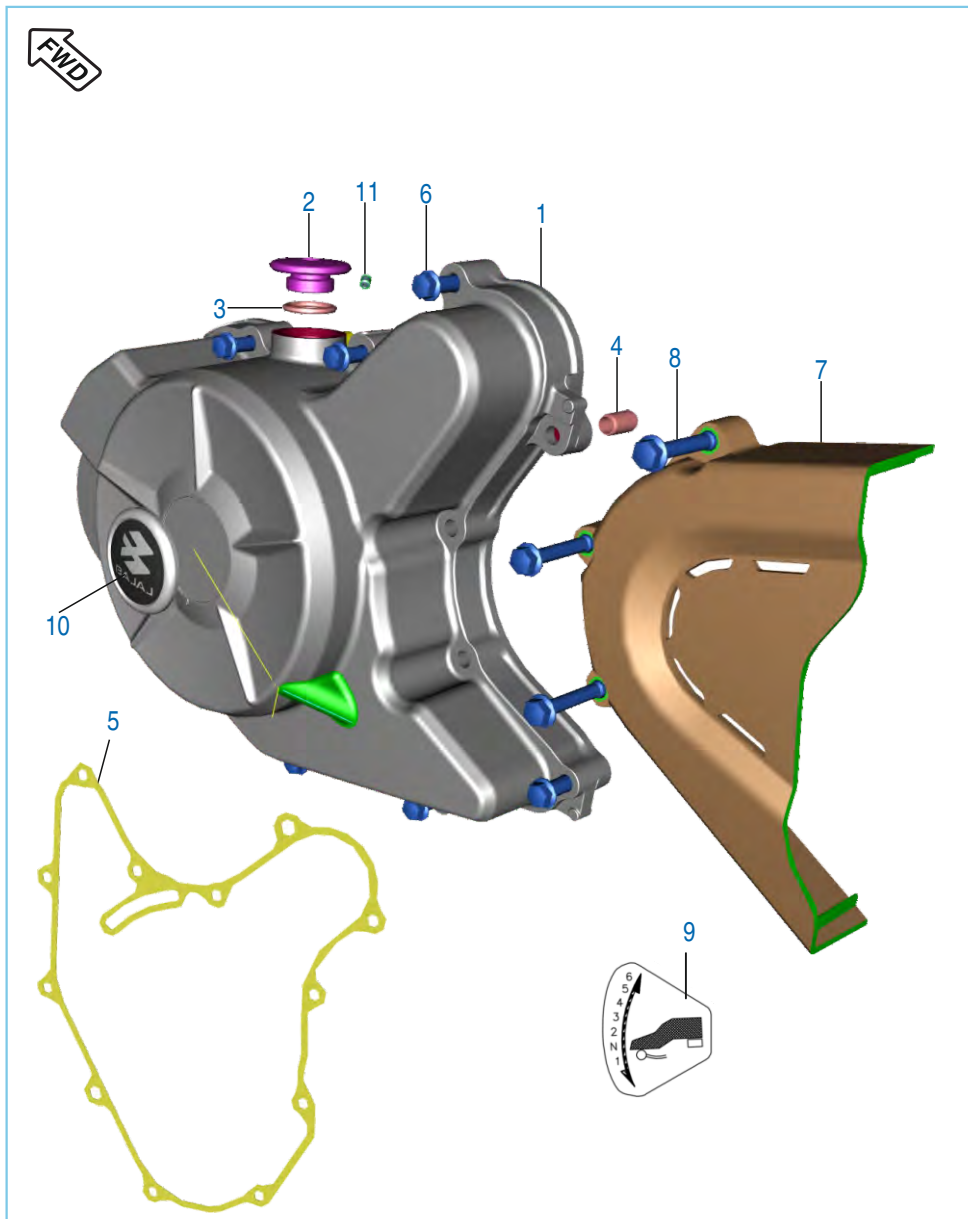Cover Magneto




No.	Part No.	Description	Qty.	Remarks
1	DT 5412 06	Cover Magneto	1	
2	JA 5412 33	Cap TDC Finder	1	
3	30 1011 95	Ring - O	1	
4	39 0999 06	Pin - Hollow Dowel	2	
5	JL 5412 08	Gasket Magneto Cover	1	
6	KA EQ06 30	Bolt Flanged	9	
7	JL 5412 03	Cover LH RR	1	
8	KA EQ06 45	Hex Headed Bolt Flange	3	
9	JL 2330 15	Gear Shift Label-6 Speed	1	
10	JL 5412 23	Decal 'Bajaj Logo'	1	
11	DT 5412 10	Jet Oil Stator	1	
12	BA 1020 04	Plug	1	

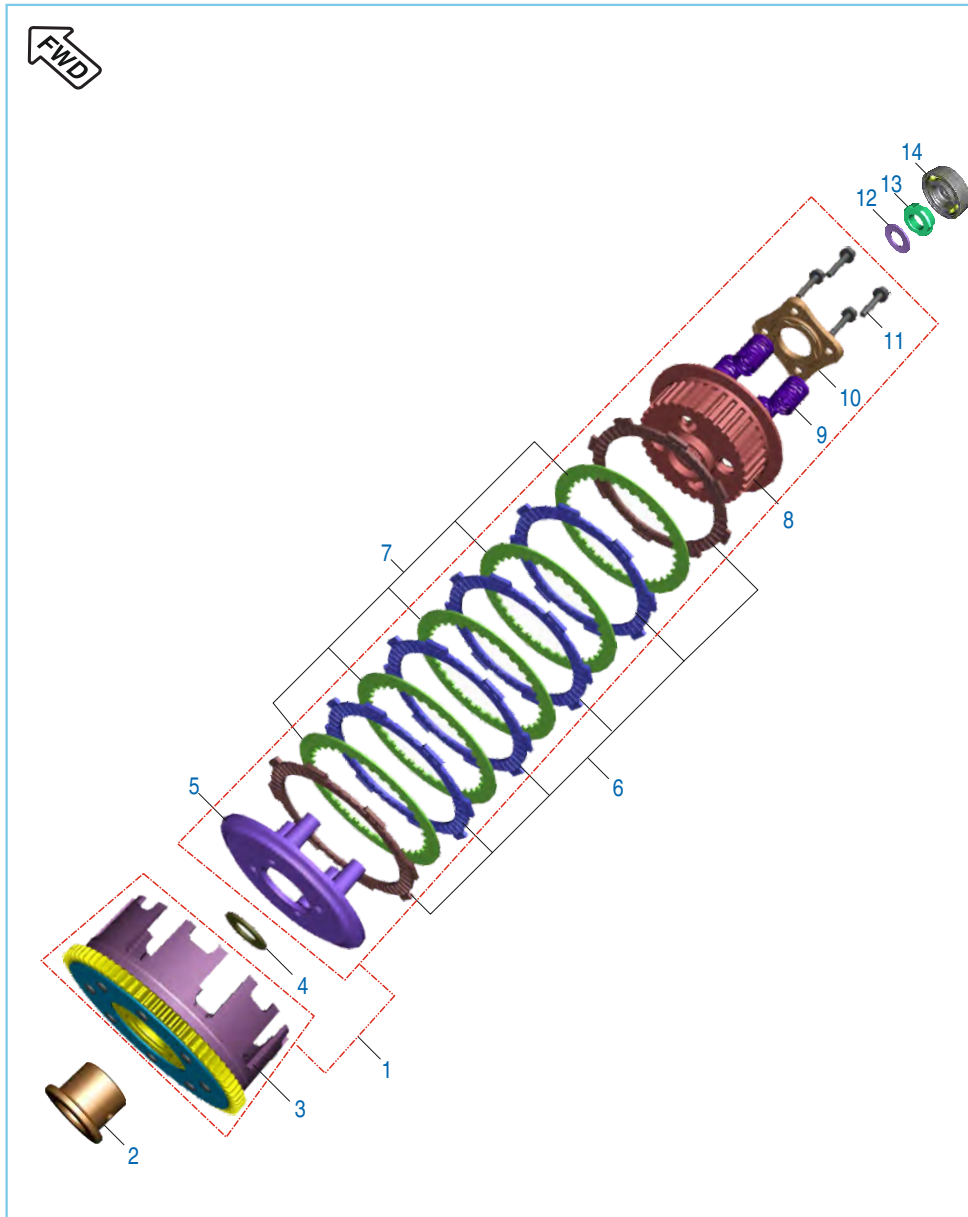

Clutch Assly


No.	Part No.	Description	Qty.	Remarks
1	DT 5514 00	Clutch Assy Comp	1	
2	JG 5514 27	Collared Bush	1	
3	36 DT00 33	Housing Clutch Assly Complete	1	
4	JG 5514 28	Washer Clutch	1	
5	DT 5514 02	Plate (Wheel Clutch)	1	
6	JG 5514 48	Friction Plate	4	
	JG 5514 55	Friction Plate	2	
7	JG 5514 47	Pressure Plate	6	
8	DT 5514 01	Clutch Center (Hub Clutch)	1	
9	DT 5514 03	Spring -Clutch	4	
10	JG 5514 43	Clutch Holder (Holder Clutch)	1	
11	JG 5514 51	Bolt Sh 6*22	4	
12	JL 5514 07	Washer - Plain (Primary Drive Gear)	1	
13	DH 1016 48	Nut Clutch Center Lock (Pre-coated)	1	
14	JG 5514 23	Clutch Lifter Bearing	1	

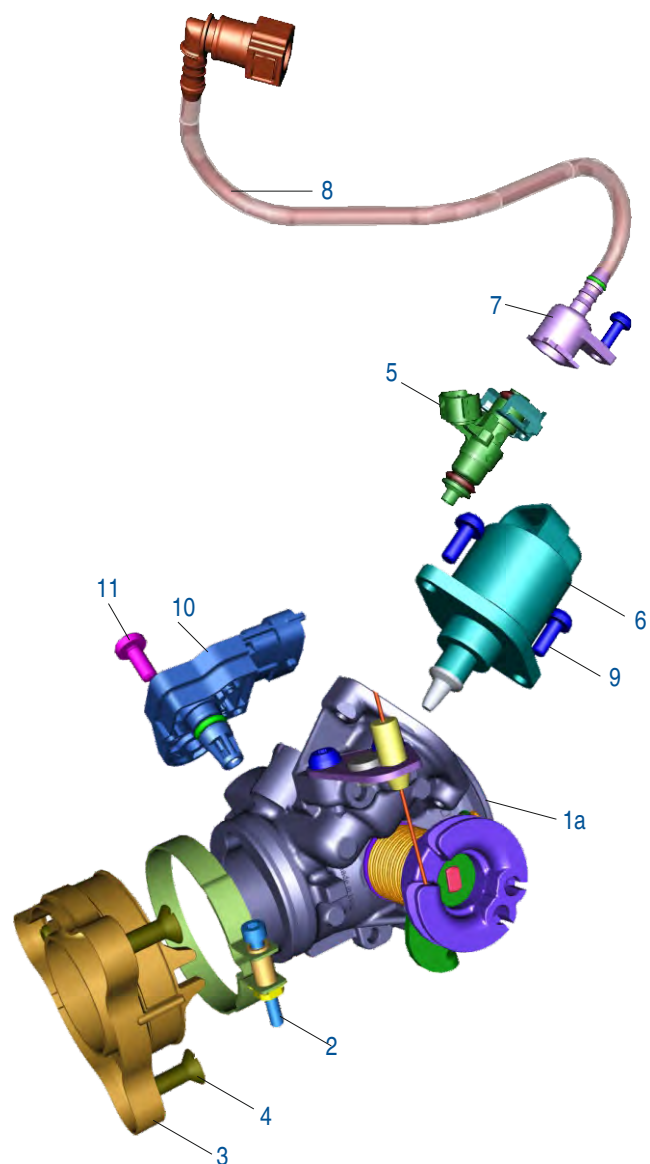Throttle Body




No.	Part No.	Description	Qty.	Remarks
1	DT 6112 02	Throttle Body Assly	1	N.I
1a	JU 5814 03	Throttle Body	1	
2	JU 5810 06	Clamp Connecting Tube	1	
3	JL 5810 39	Pipe Intake	1	
4	LB C000 02	Screw CSK Cross	1	
5	JG 6110 07	Fuel Injector	1	
6	JG 6112 06	Motor Stepper	1	
7	DT 6112 03	Cap Injector with assly QC	1	
8	DT 1710 54	Fuel Tube	1	
9	JG 5814 24	Fixing Screw	5	
10	JG 3518 05	Sensor T map	1	
11	JG 5814 37	Fixing Screw	1	

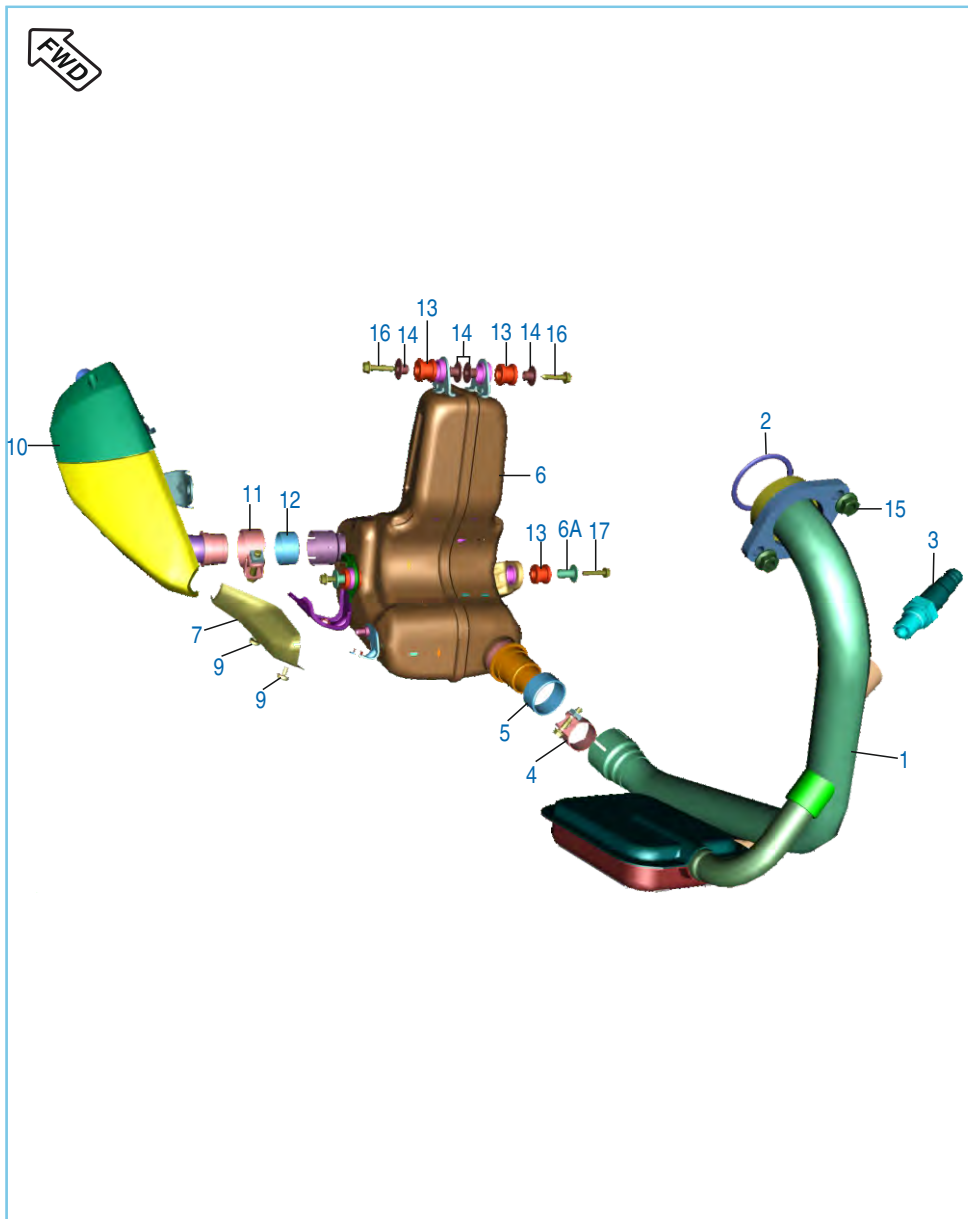Silencer Assembly




No.	Part No.	Description	Qty.	Remarks
1	DT 5912 30	Assembly Muffler	1	For Argentina & Iran
	DT 5912 38	Assembly Muffler	1	
2	JG 5910 70	Gasket Exhaust	1	
3	JG 5110 10	O2 Sensor	1	
4	JG 5910 38	Band Clip	1	
5	JG 5910 39	Gasket Muffler Pipe- A	1	
6	DT 5912 38	Muffler Assly Comp	1	
6A	JL 5911 57	Sleeve Bottom	2	
7	DT 5911 16	Assly Heat Shield	1	
8	DT 5911 18	Grommet Heat Shield	1	
9	LB U000 37	Truss Screw	2	
10	52 DT01 53	Assly End Chamber	1	
11	DT 5910 72	Band Clip End Chamber	1	
12	JL 5910 45	Spacer Pipe A Proto 1	1	
13	JL 5911 65	Damper Silencer Mtg. Lower	4	
14	JL 5911 56	Sleeve Top	4	
15	LC G000 06	Nut Hex	2	
16	JL 5911 48	Bolt Flange	2	
17	KA DA06 30	Bolt M 6 X 30	2	

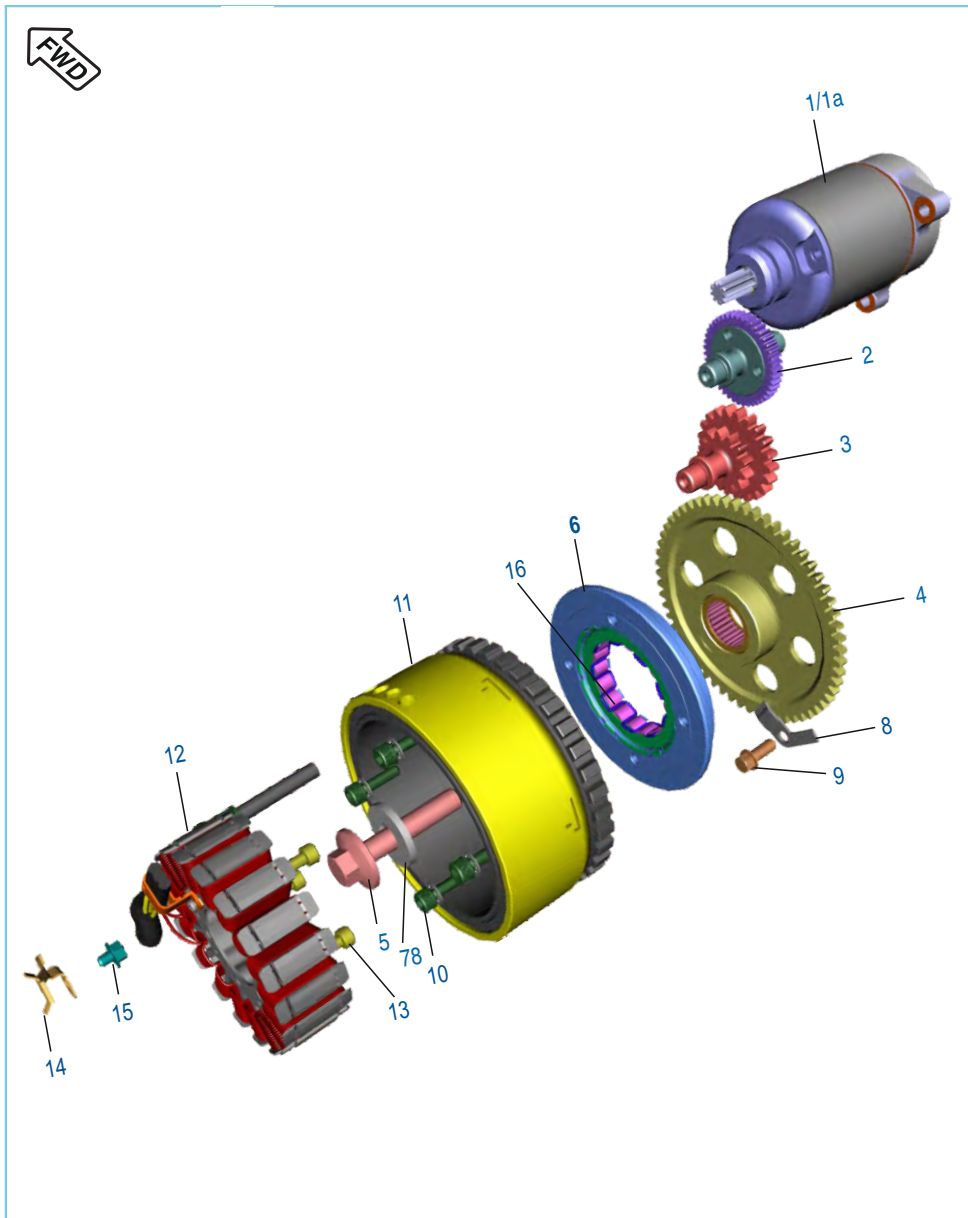Starter Assembly



No.	Part No.	Description	Qty.	Remarks
1	JL 3516 00	Starter Motor Assly.	1	
1a	KA DQ06 25	Bolt M6-Motor mtg.	2	
2	JG 6214 13	Gear Starter Counter 2 Assy	1	
3	JG 6214 12	Gear Starter Counter 1	1	
4	JG 6214 17	Assembly Gear Starter Clutch	1	
5	LA D000 55	Hex Bolt Flanged	1	
6	JG 3510 19	Body Complete Starter Clutch	1	
7	LD B000 10	Spring Dowel Sleeve	4	
8	JG 5410 43	Retainer Gear Starter	1	
9	39 1672 04	Bolt Flange	1	
10	DH 1013 89	Pre Coated Screw M6 X 20	4	
11	JY 3510 19	Rotor Assy. (W/O Clutch Assy)	1	
12	DT 3510 06	Stator Assly Compl	1	
13	DK 1012 84	Hex Soc. Head Screw(M5X0.8X35)	3	
14	JG 5412 23	Plate - Stopper (Wiring Harness)	1	
15	LA E000 10	Bolt Flange M5 X 13L	2	
16	JY 5514 02	Clutch One Way Assly	1	

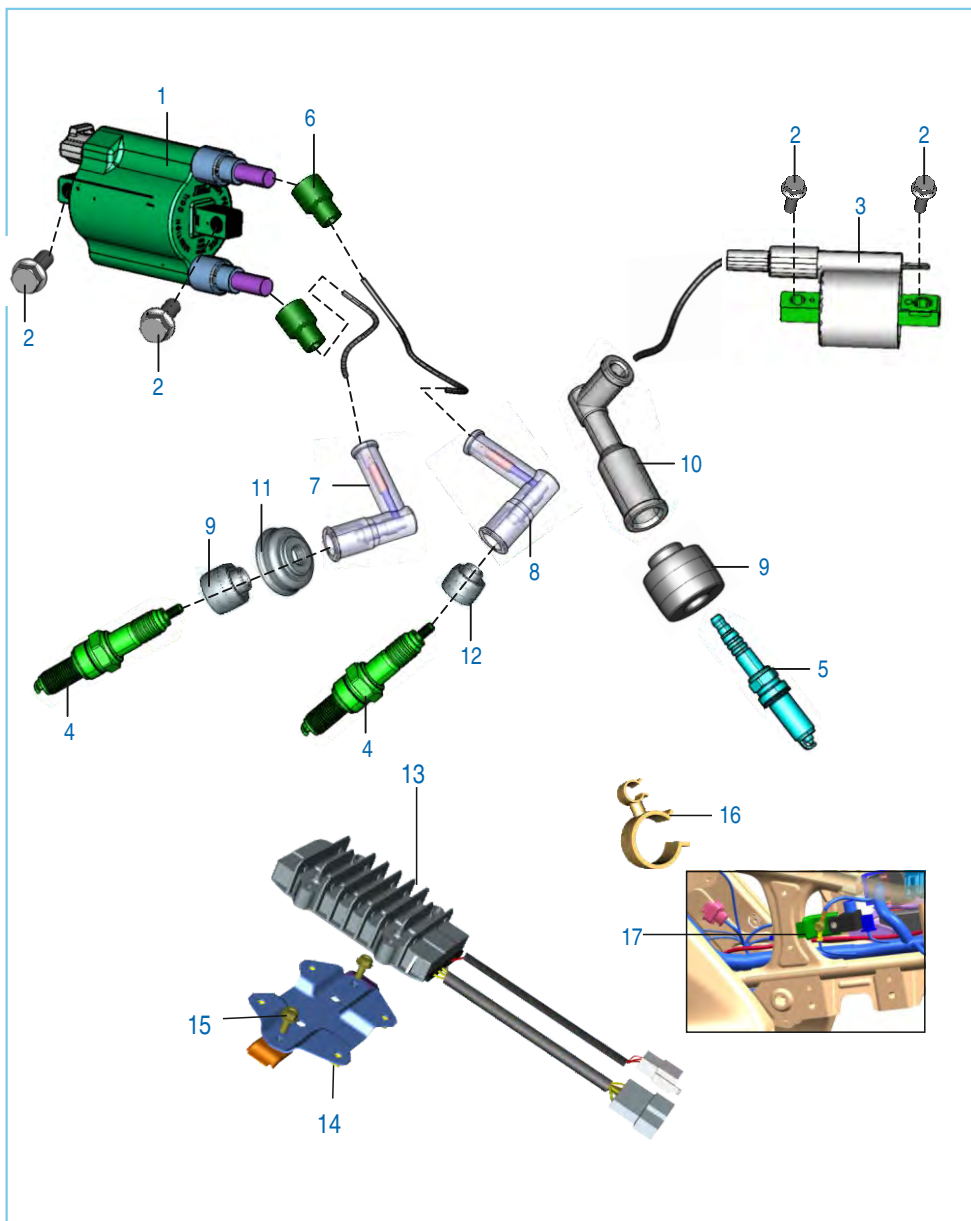
H.T. Coil & Regulator Assembly



No.	Part No.	Description	Qty.	Remarks
1	JL 3512 37	Ignition Coil With Cable LH	1	Twin output
2	39 1913 04	Bolt Flange	4	
3	JL 3512 35	Ignition Coil with Cable RH	1	
4	DK 1110 28	Spark Plug RG6HCC	2	
5	JL 3512 18	Spark Plug Bosch central	1	
6	DD 1110 12	Grommet for H.T. Cable	3	
7	JD 3512 07	Spark Plug Cap	1	
8	AN 1110 15	Spark Plug Cap	1	
9	DH 1110 13	Grommet - Spark Plug	2	
10	DK 1110 11	Cap Spark Plug	1	
11	DH 1110 16	Grommet - Sleeve Spark Plug	1	
12	DD 1110 11	Grommet - Spark Plug Cap	1	
13	DT 4020 04	Regulator Assly	1	
14	DT 1138 02	Bracket Regulator	1	
15	KA DA06 14	Bolt Flanged	2	
16	DT 1138 55	Clamp HT Coil	1	
17	DT 4020 03	Capacitor Assly	1	




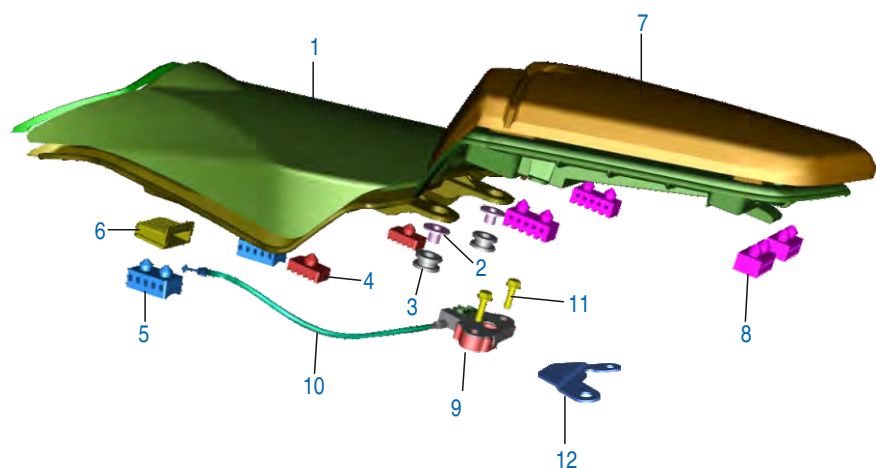Seat Assembly / Seat Lock




No.	Part No.	Description	Qty.	Remarks
1	DT 1910 06	Seat Assly Front	1	
2	DK 2110 09	Damper For Seat	2	
3	DT 1910 12	Damper Seat Front	1	
4	JZ 1910 10	Damper For Seat	2	
5	FD 2110 06	Grommet Seat	2	
6	JG 1910 08	Collar Seat	2	
7	DT 1910 09	Seat Assly Rear	1	
8	DS 2110 04	Damper Seat I	4	
9	JG 2326 01	Seat Lock Assly Rear	1	
	DT 2326 05	Lock rear Seat	1	For Iran
10	JG 2326 06	Seat Lock Cable	1	
11	KA DA06 22	Bolt Flanged	2	
12	JL 2326 04	Cover Seat Lock	1	

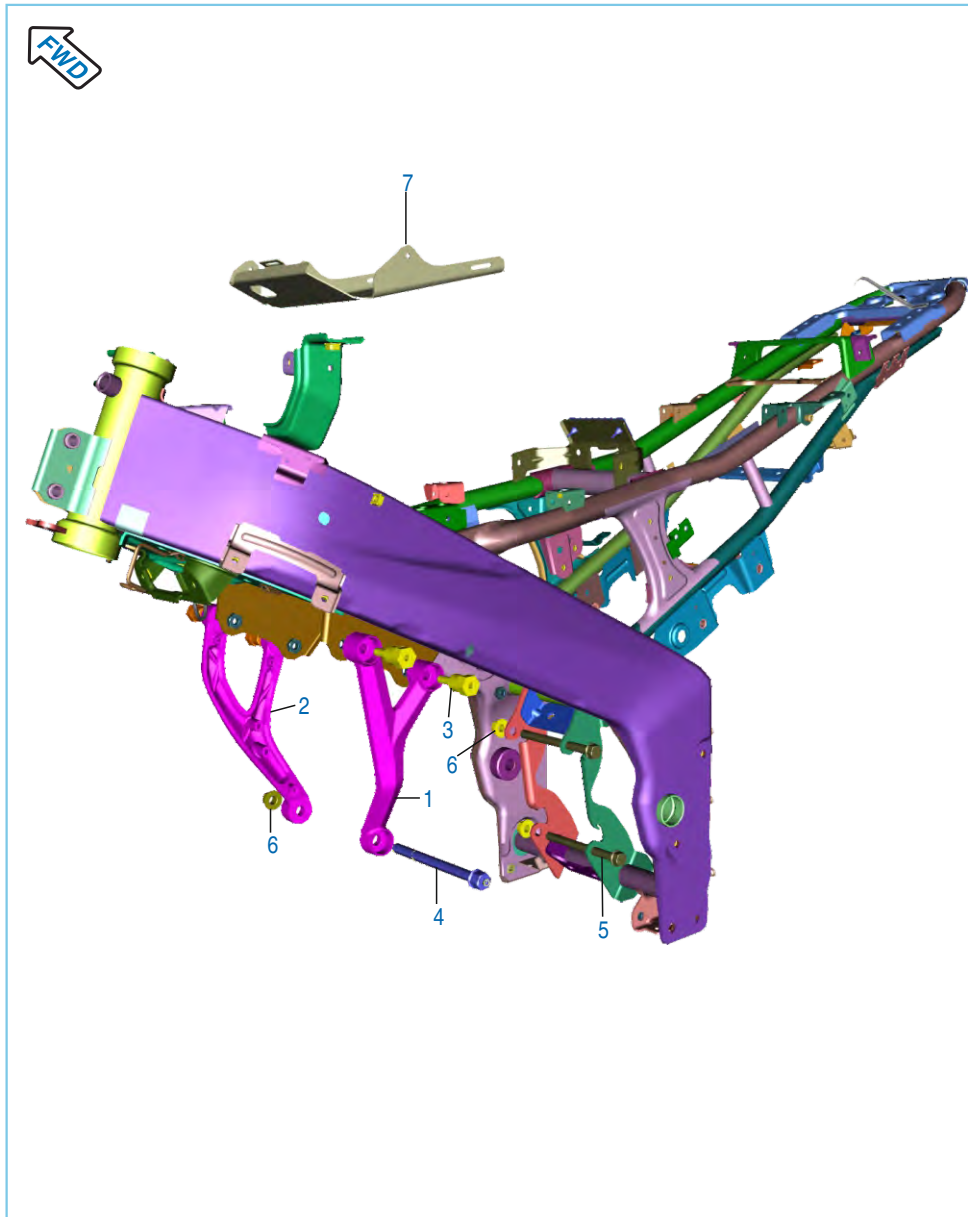Engine Mountings




No.	Part No.	Description	Qty.	Remarks
1	52 JL01 56	Eng Stay Assly LH	1	With Black Color
2	52 JI01 57	Eng Stay Assly RH	1	With Black Color
3	DT 1134 08	Bolt - Flanged Small	4	
4	JL 1110 54	Engine Mtg Bolt Front	1	
5	JA 1134 03	Flanged Bolt	2	
6	39 2723 15	Nut Flanged M10	2	
7	DT 1138 42	Cover Seal Heat	1	

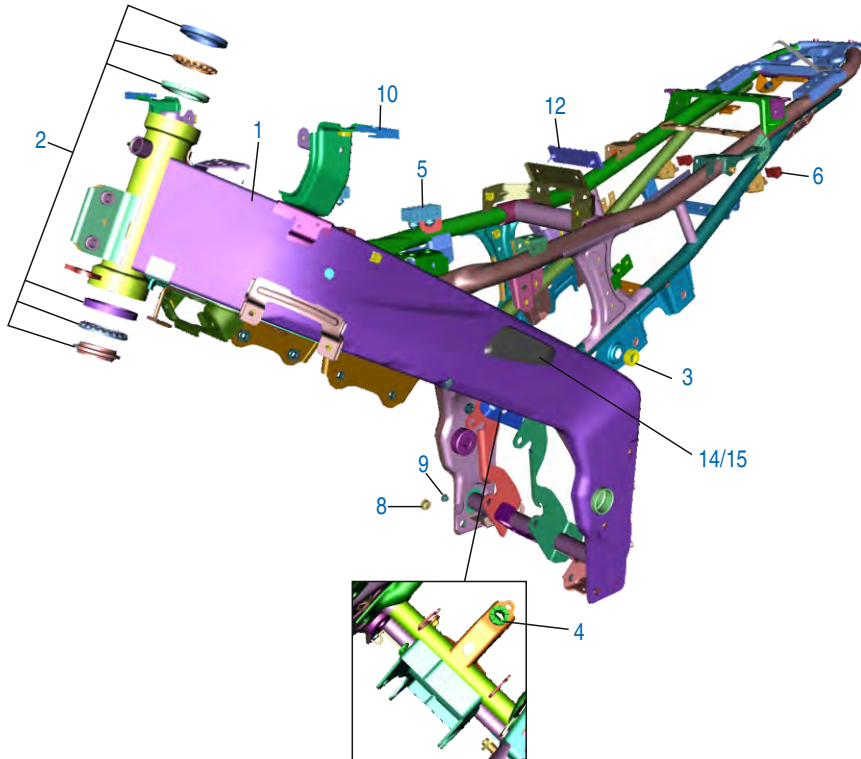Frame and Frame Fittings




No.	Part No.	Description	Qty.	Remarks
1	DT 1111 63	Frame Assly Complete	1	Without Bearing Race
2	36 JG00 11	Kit Steering Head Bearing	1	
3	DT 1812 65	Grommet Side Cover	2	
4	JL 1710 20	Grommet Tank Rear	1	
5	DS 2110 04	Damper Seat I	2	
6	JZ 1813 22	Side Cover Grommet	2	
7	DX 1610 66	Pad Brace Fender	2	N.I
8	DT 1813 22	Plug 1	1	
9	DT 1813 23	Plug 2	1	
10	DT 1710 76	Damper Tank Cover	2	
11	DT 1138 46	Frame Beading RH	2	N.I
12	DT 1813 21	Pad Tank Cover Resting	1	
13	JB 1812 23	Beading LH	2	N.I
14	DT 1111 06	Frame Rubber Pad LH	1	
15	DT 1111 07	Frame Rubber Pad RH	1	

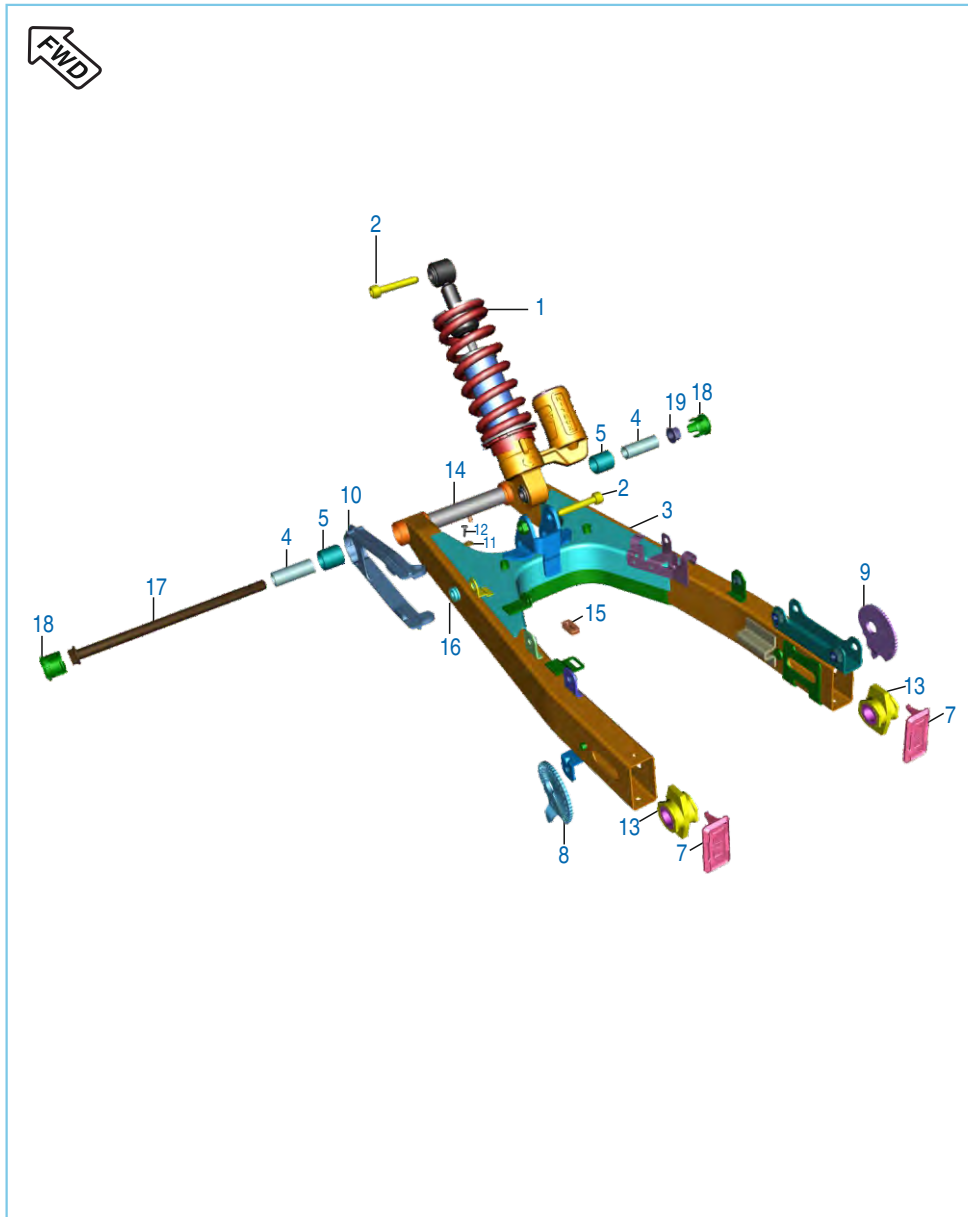Swing Arm / Rear Shock Absorber




No.	Part No.	Description	Qty.	Remarks
1	DT 1220 19	Shockabsorber Mono	1	
2	LA C000 19	Bolt Socket M10 X 1.25 X 55	2	
3	JL 1220 13	Assembly Swing Arm Comp	1	
4	DG 1710 16	Sleeve	2	
5	DG 1710 18	Bearing - Needle	2	
6	DG 1710 19	Seal - Oil	4	N.I
7	JL 1220 02	Cap Swing Arm Tube	2	
8	JL 1220 01	Adjuster Chain Lh	1	
9	JL 1220 09	Adjuster Chain Rh	1	
10	JL 1220 03	Slider Chain	1	
11	39 0454 11	Washer - Plain	2	
12	39 0553 02	Screw - Self Tapping	2	
13	JL 1220 04	Spacer Chain Adjuster	2	
14	JL 1220 08	Spacer Central Swing Arm	2	
15	JL 1812 24	Grommet I	1	
16	JL 1812 25	Grommet li	1	
17	JL 1220 26	Shaft - Swing Arm	1	
18	DT 1138 48	Cap -Swing Armpivot	2	
19	39 1053 15	Nut	1	

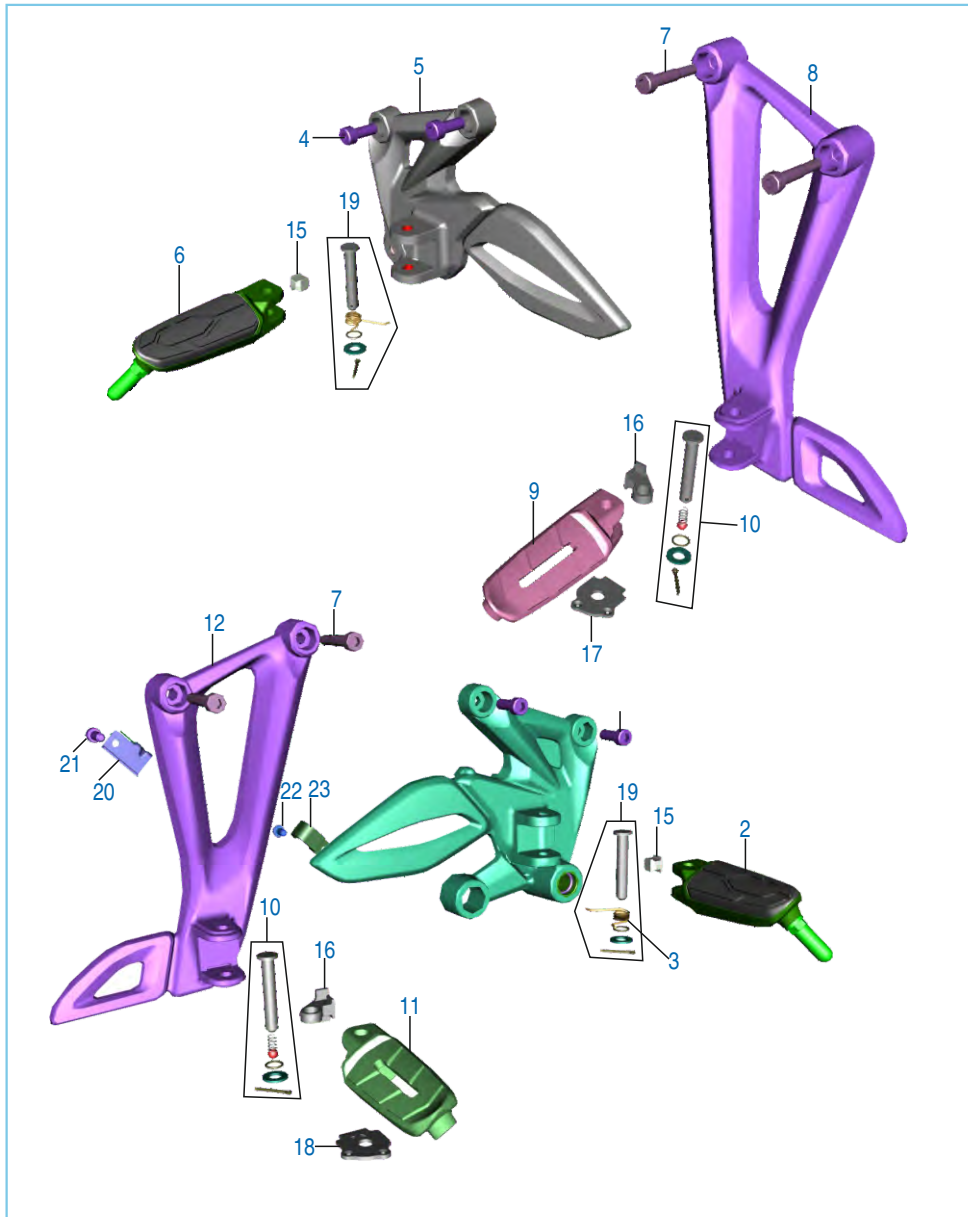Pillion Foot Rest / Holder




No.	Part No.	Description	Qty.	Remarks
1	DT 1130 01	Holder Step RH	1	
2	DT 1130 29	Step Assy Main RH	1	
3	JL 1130 12	Spring Torsion	2	
4	LA C000 45	Bolt-Socket Dia-08 L-20	4	
5	DT 1130 02	Holder Step LH	1	
6	DT 1130 28	Step Assy Main LH	1	
7	LA C000 74	Bolt Socket M8X35	4	
8	DT 1130 06	Step Holder- Pillion LH	1	
9	JL 1130 14	Step Pillion LH	1	
10	36 JL00 15	Kit Pillion Hardware	2	
11	JL 1130 16	Step Pillion RH	1	
12	DT 1130 08	Step Holder - Pillion RH	1	
13	JL 1318 41	Bracket Reservoir Mtg.	1	N.I
14	39 2140 04	Bolt Flanged	1	N.I
15	JZ 1130 61	Rubber Pad Footrest	2	
16	JL 1130 36	Rubber Pad Footrest	2	
17	DT 1130 14	Lock Plate LH	1	
18	DT 1130 15	Lock Plate RH	1	
19	36 JL00 41	Kit Main Step Hardware	2	
20	JL 1318 78	Bracket Reservoir cap	1	
21	KB BA05 12	Screw	1	
22	KA EA06 10	Bolt Flange	1	
23	DT 1318 33	Clamp	1	

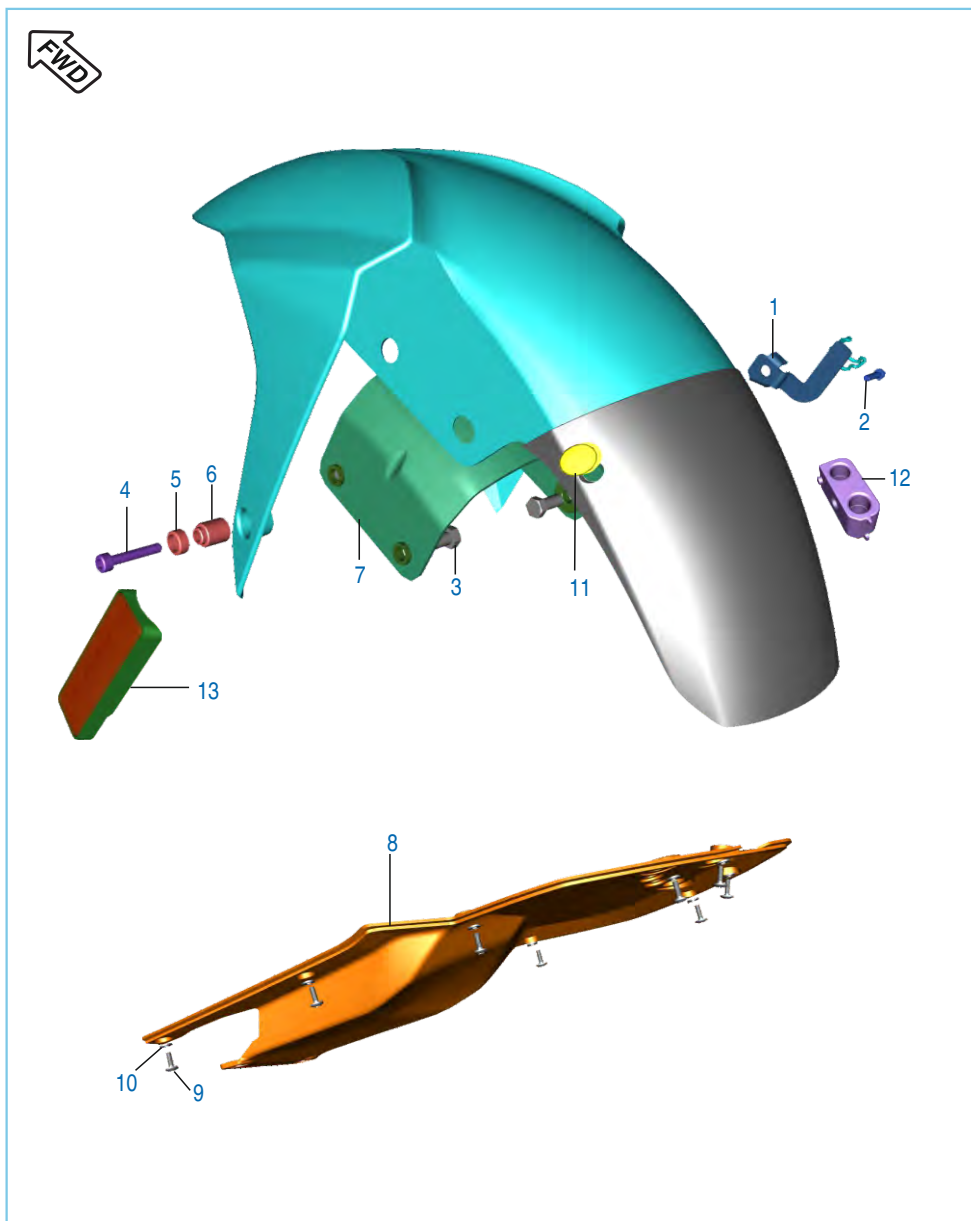Mudguard - Front & Rear




No.	Part No.	Description	Qty.	Remarks
1	DT 1318 37	Bracket - Hose Clamp	1	
2	39 1958 04	Bolt Flange	1	
3	KA AB08 20	Bolt 08	4	
4	KA Ca06 30	Bolt- Hex Socket M6	2	
5	DT 1814 34	Cup Washer	2	
6	DT 1814 11	Spacer Fender Front	2	
7	DT 1814 07	Bracket Brace Fender	3	
8	DT 1812 56	Seat Cowl Central Bottom	1	
9	39 1907 01	Screw M5	8	
10	39 2141 24	Washer Non Metallic	8	
11	DT 1814 33	Plug Front Fender	1	
12	DT 1318 49	Clamp	1	
13	DK 2011 21	Front Reflex Reflector LH Assy	1	For Argentina

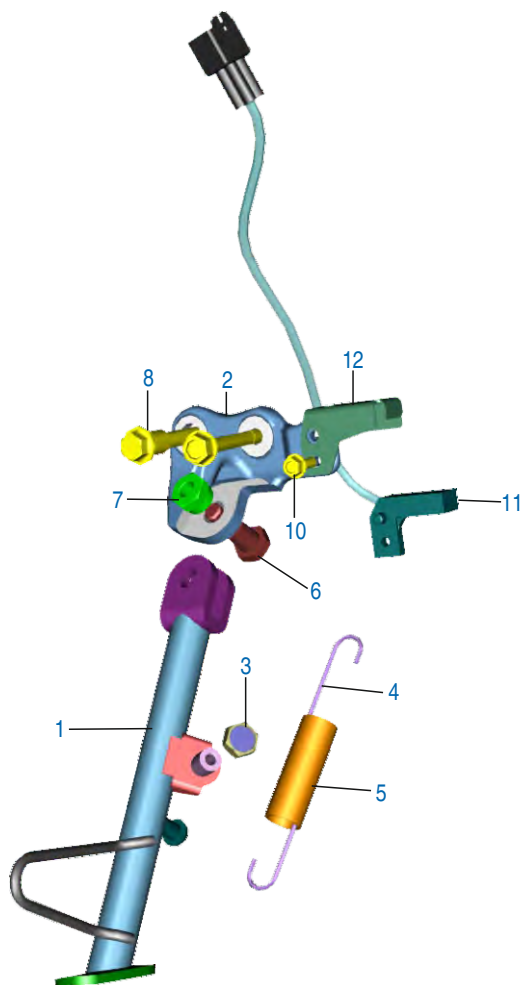


Stand Assembly

No.	Part No.	Description	Qty.	Remarks
1	DT 1132 04	Assly Side Stand	1	
2	DT 1132 05	Bracket Side Stand	1	
3	JZ 4036 01	Magnet Holder	1	
4	JL 1132 09	Spring Side Stand	1	
5	DH 1611 46	Cover Spring Side Stand	1	
6	DF 1611 02	Bolt	1	
7	39 0422 15	Nut Nyloc M10	1	
8	DT 1132 02	Bolt Spcl Stand Mtg	1	
9	KA DH08 70	Bolt Hexagon M8	1	
10	KA DA05 12	Flange Bolt	1	
11	JL 4014 08	Switch Assembly Side Stand	1	
12	JL 1138 18	Cover Side Stand Switch	1	

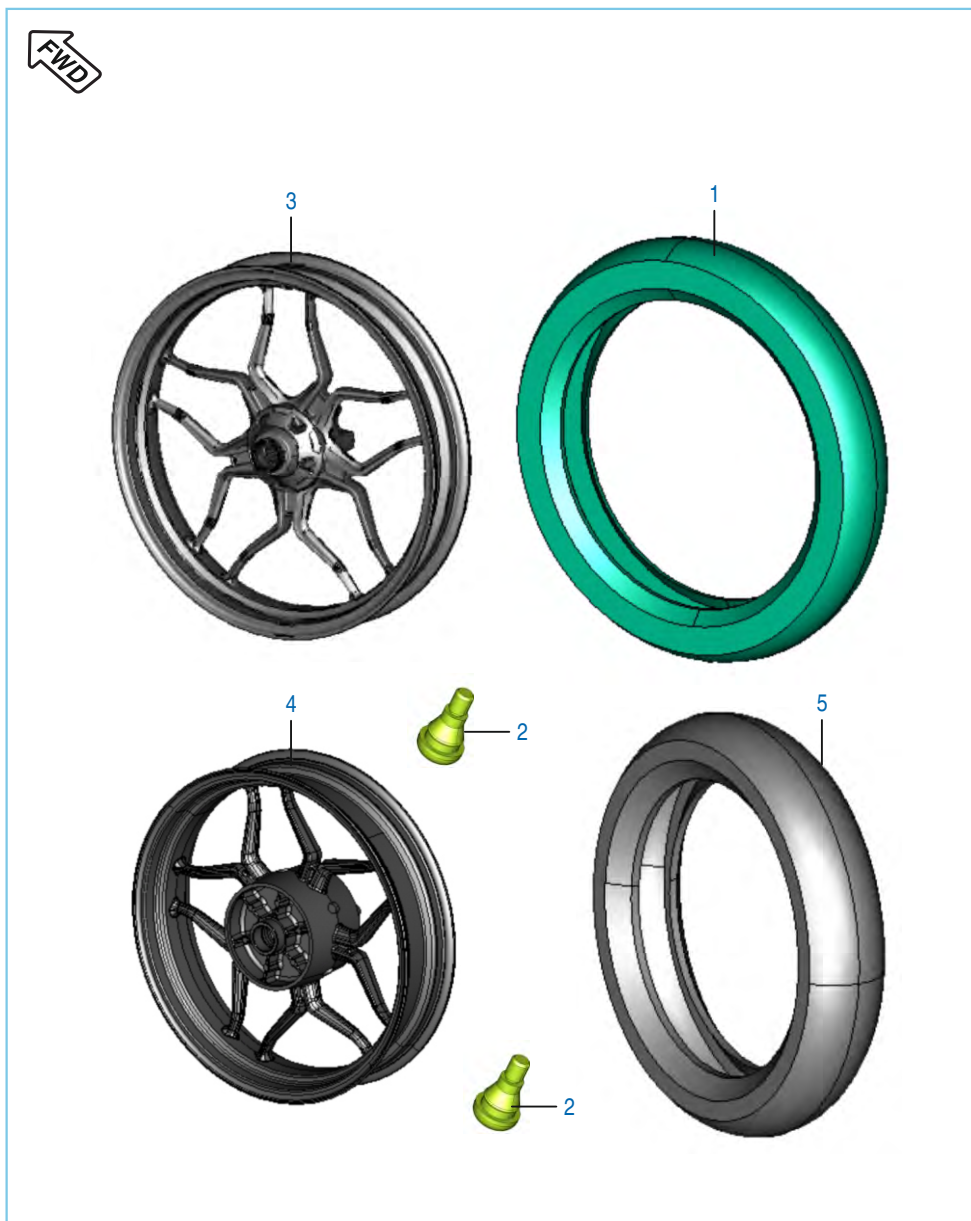Tube / Tyre / Rim




No.	Part No.	Description	Qty.	Remarks
1	DT 1310 18	Tyre Tubeless Front (100/80-17)	1	
2	DK 1510 26	Valve Tubeless Tyre	2	
3	JL 1310 04	Wheel Rim 2.5X17	1	
4	JL 1312 09	Wheel Rim 3.5X17	1	
5	DT 1312 22	Tyre Tubeless Rear (130/70-17)	1	

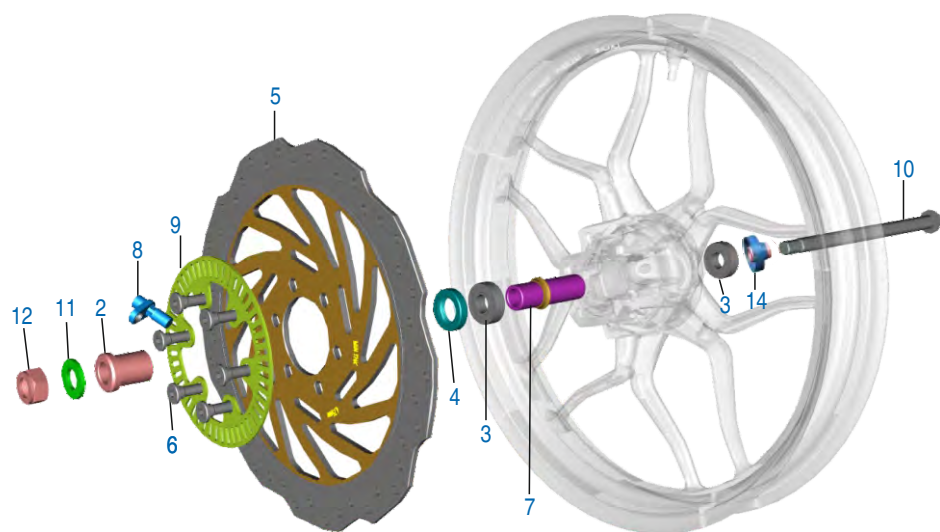

Front Hub


No.	Part No.	Description	Qty.	Remarks
1	JL 1310 04	Wheel Front	1	
2	JG 1310 01	Spacer	1	
3	KP BC62 02	Bearing - Ball	2	
4	DG 1510 05	Seal - Oil	1	
5	DT 1318 02	Disc Front	1	
6	JD 1318 11	Special Bolt M8	6	
7	JL 1310 00	Collar	1	
8	DT 4024 04	Wheel Speed Sensor (ABS)	1	Front & Rear
9	JU 1318 01	Sensor Disc Front	1	ABS
10	JL 1310 01	Axle	1	N.I
11	LD B000 29	Washer	1	
12	LC J000 02	Nut - U M14	1	
13	39 1943 04	Flanged Bolt	1	
14	DT 1310 17	Collar Assly	1	

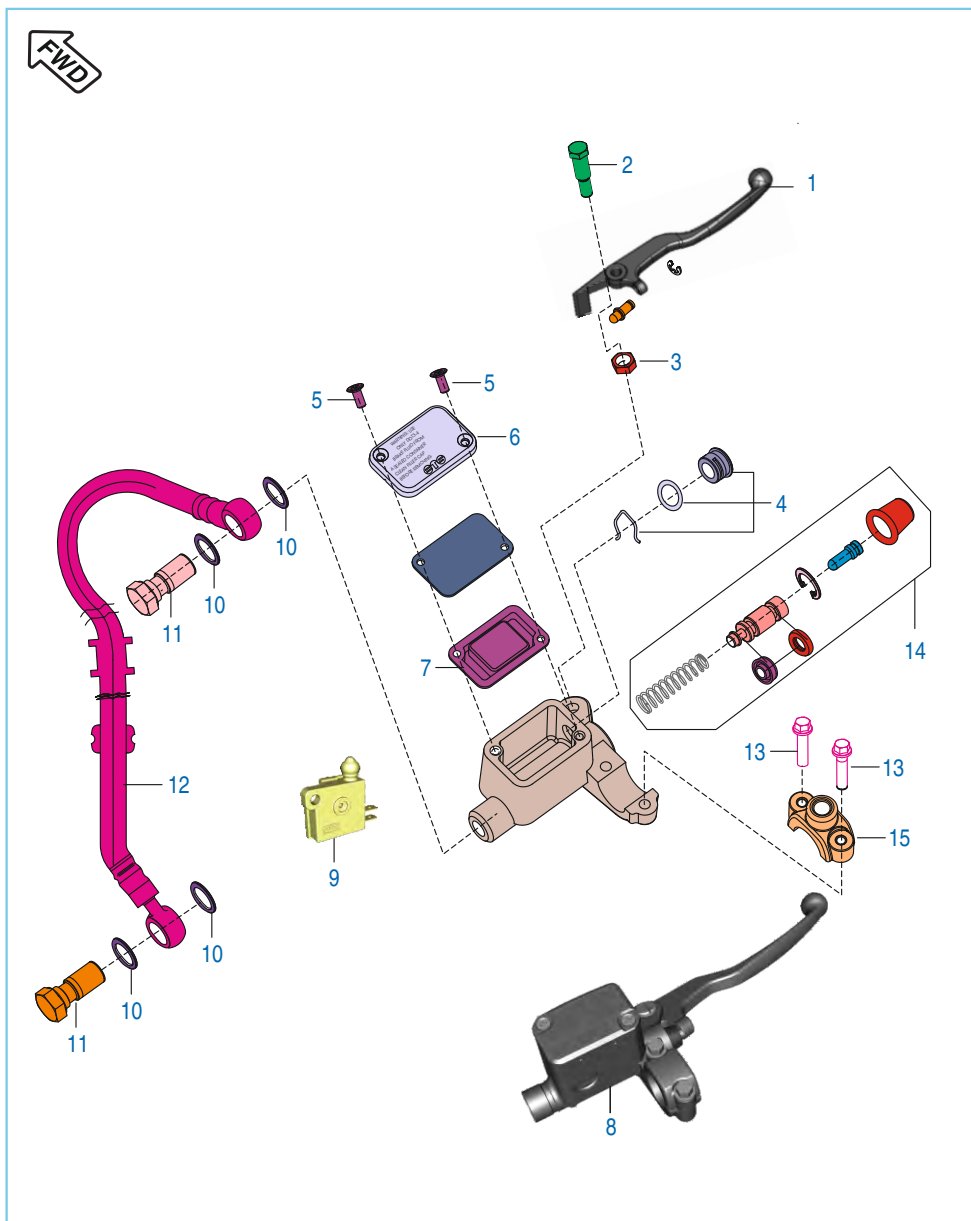

Front Master Cylinder


No.	Part No.	Description	Qty.	Remarks
1	JG 1610 10	Lever Front Brake	1	
2	DJ 1910 29	Bolt Front Bracket I	1	
3	DJ 1910 30	Nut	1	
4	DE 1910 36	Oil Window Kit	1	
5	DJ 1910 31	Screw	2	
6	DE 1910 29	Cover - Reservoir	1	
7	DE 1910 28	Diaphragm	1	
8	DT 1318 31	Master Cylinder Assly Front	1	
9	DJ 2011 09	Brake Switch	1	
10	DE 1910 10	Washer - Copper	4	
11	DE 1910 11	Bolt - Banjo	2	
12	JL 1318 02	Hose Assembly	1	
13	LA D000 37	Bolt Flanged M8X1X50	2	
14	36 DT00 34	Major Kit M Cylinder - ABS	1	
15	DK 1810 52	Clamp - Holder : RH	1	

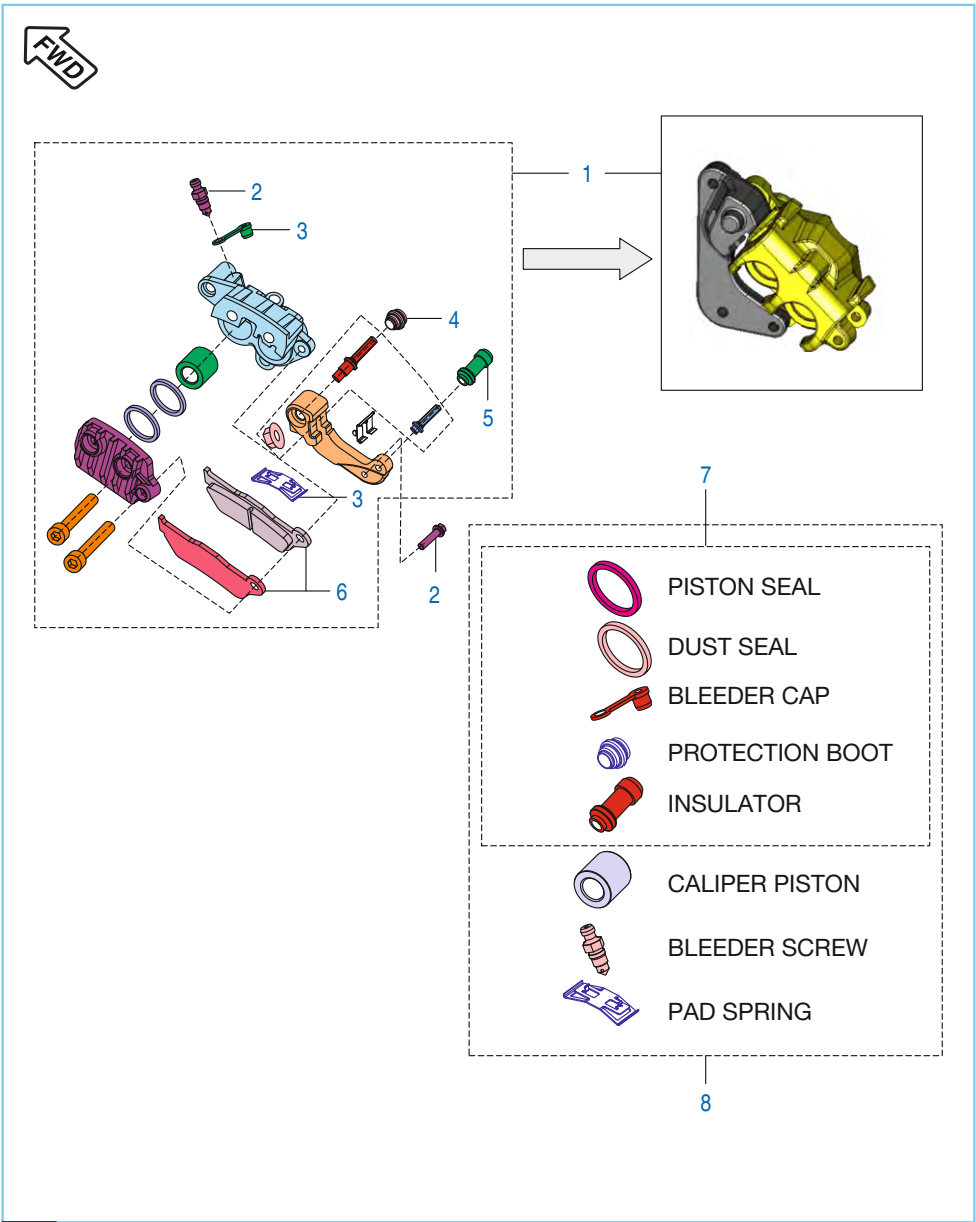Front Disc Brake



No.	Part No.	Description	Qty.	Remarks
1	DT 1318 53	Caliper Assy Brake Front	1	
2	JL 1318 06	Screw Bleeder	1	
3	DE 1510 47	Bleeder Cap	1	
4	JL 1318 07	Boot	1	
5	DE 1910 33	Spring	1	
6	JL 1318 32	Pad	1	
7	JL 1318 31	Minor Kit	1	
8	JL 1318 31	Major Kit	1	

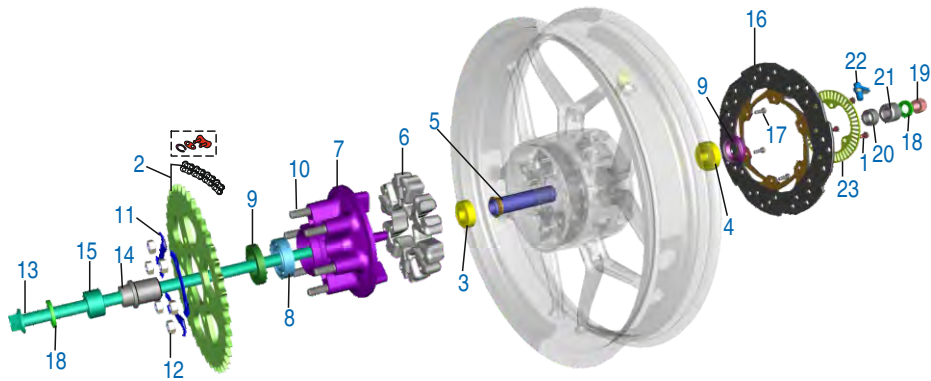
Rear Hub



No.	Part No.	Description	Qty.	Remarks
1	39 0746 01	Screw Pan Head	3	
2	36 DT00 07	Kit Chain Sprocket	1	
3	KP BC63 02	Bearing - Ball	1	
4	KP BC62 02	Bearing - Ball	1	
5	JL 1312 16	Collar Bearing Assy	1	
6	JL 1312 32	Coupling Rubber	1	
7	JL 1312 25	Coupling	1	
8	DK 1510 13	Bearing Coupling	1	
9	30 1510 82	Oil Seal	2	
10	LA A000 19	D Bolt	6	
11	JL 1312 26	Washer 6 Rubber	3	
12	LC A000 09	Nut	6	
13	JL 1312 03	Axle	1	
14	DK 1510 15	Sleeve	1	
15	JL 1312 11	Spacer for Coupling	1	
16	JL 1312 18	Disc Rear	1	
17	39 2038 04	Bolt Hex	6	
18	LD B000 29	Washer	2	
19	LC J000 02	U Nut Swing Arm	1	
20	DK 1510 81	Spacer I	1	
21	DK 1510 82	Spacer II	1	
22	DT 4024 04	Wheel Speed Sensor (ABS)	1	Front & Rear
23	JU 1318 02	Sensor Disc Rear	1	




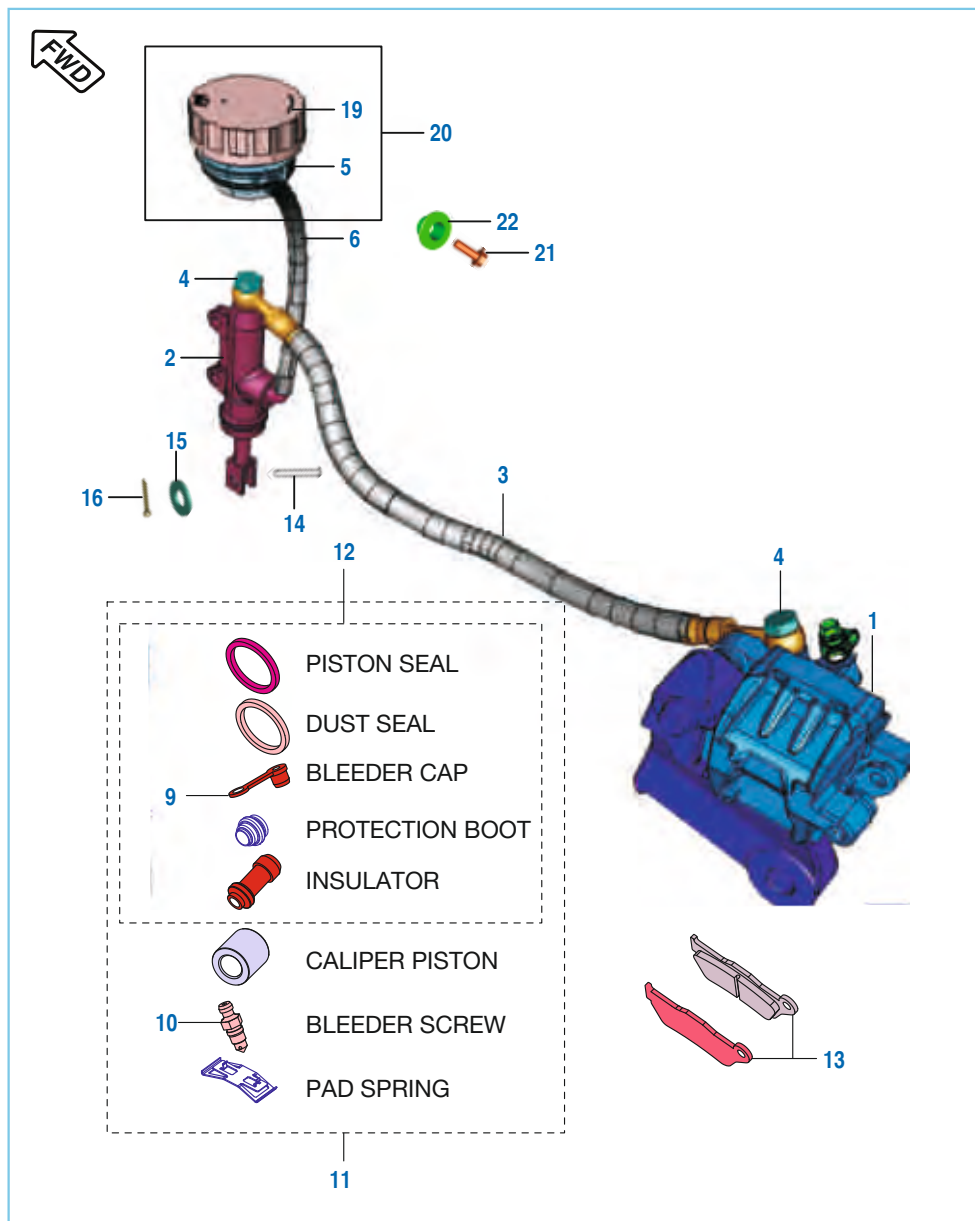Rear Disc Brake System



No.	Part No.	Description	Qty.	Remarks
1	DT 1318 26	Assembly Caliper	1	
2	DT 1318 66	Assembly Master Cyl. Rear	1	
3	36 DT00 42	Hose Disc Brake Rear	1	
4	DK 1510 69	Banjo Bolt	2	
5	JG 1318 21	Reservoir Rear Brake	1	Without Cap
6	JL 1312 20	Hose - Reservoir	1	
7	DK 1510 63	Clip Reservoir	1	Cap Reservoir
8	DE 1910 10	Copper Washer	4	Banjo Bolt
9	DE 1510 47	Cap Bleeder Screw	1	
10	DE 1510 46	Bleeder Screw	1	
11	36 DT00 37	Kit Major Caliper	1	
12	36 DT00 38	Kit Minor Caliper	1	
13	DK 1510 85	Set Disc Pad	1	
14	30 1910 38	Pin	1	
15	39 0198 11	Washer	1	
16	39 0808 08	Split Pin	1	
17	36 DT00 39	Kit Major M Cylinder	1	N.I
18	36 DT00 40	Kit Minor M Cylinder	1	N.I.
19	DK 1510 45	Cap Reservoir	1	
20	36 JG00 18	Reservoir with Cap	1	
21	KA DD06 14	Screw Pan Cross	1	
22	JG 1812 39	Collar	1	
23	59 0400 14	Bolt flanged M6	2	N.I

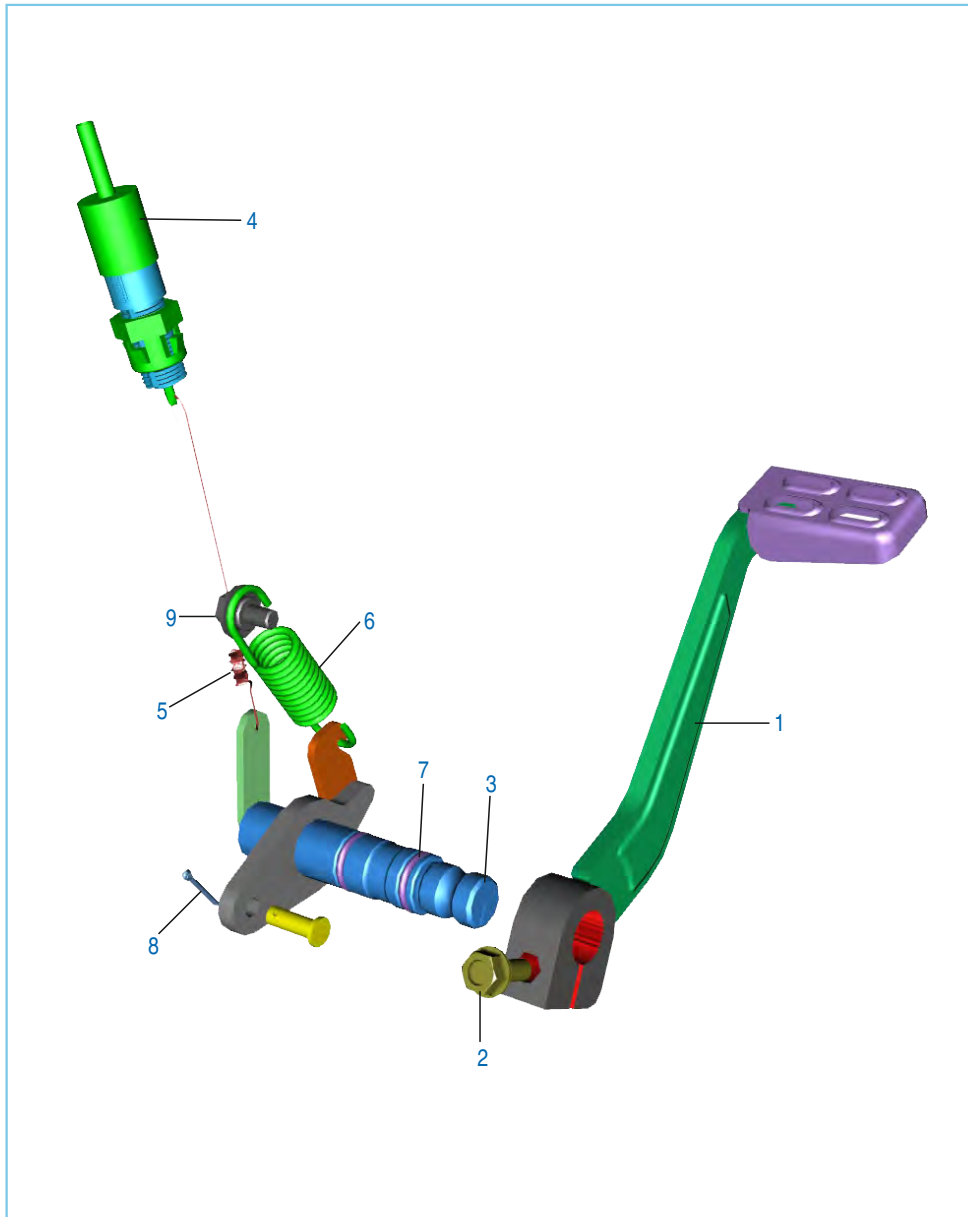
Rear Brake Pedal




No.	Part No.	Description	Qty.	Remarks
1	DT 1610 11	Brake Pedal	1	N.I.
2	39 1769 04	Bolt - Flanged : M8	1	
3	DT 1610 12	Shaft Assy Brake Lever	1	
4	JL 4014 06	Switch - Rear Brake	1	
5	DT 1610 04	Spring Rear Brake Switch	1	
6	DT 1130 34	Tension Spring	1	
7	39 1537 21	O-ring	1	
8	39 0808 08	Split Pin	1	
9	KA DD06 16	Bolt	1	

Anti Brake Lock System

No.	Part No.	Description	Qty.	Remarks
1	JY 1318 16	ABS Unit	1	
2	36 DT00 44	Hose M Cylinder to ABS	1	
3	36 DT00 43	Hose Caliper to ABS	1	
4	DT 1138 50	Bracket ABS Mtg	1	
5	LA E000 21	Bolt Flanged	1	
6	KA Ed06 12	Bolt Flanged	1	
7	KA Ed06 08	Bolt Flanged	1	
8	JG 1138 26	Clamp for ABS	1	
9	DT 1318 39	Clamp Brake Hose	1	
10	DE 1910 10	Copper Washer	1	
11	DE 1910 11	Benjo Bolt	4	
12	39 1958 04	Bolt Flanged	2	
13	DT 1318 39	Clamp Brake Hose Front	1	
14	DT 1318 37	Bracket Hose Clamp ABS	1	
15	KA Da06 12	Flanged Bolt	2	
16	KA Ab08 20	Bolt M8	1	
17	DT 1318 49	Clamp Brake Hose	3	

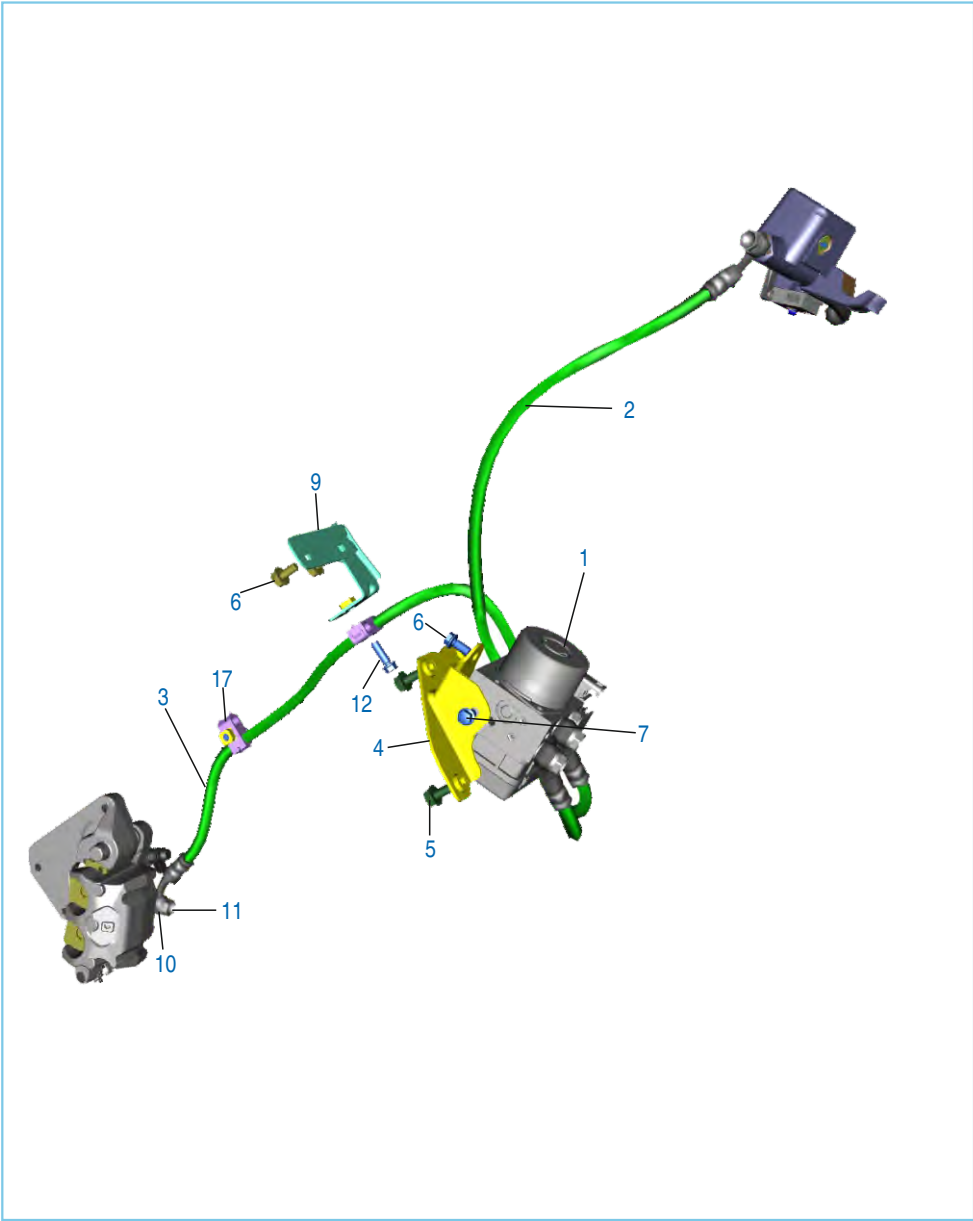


Handle Bar Assly

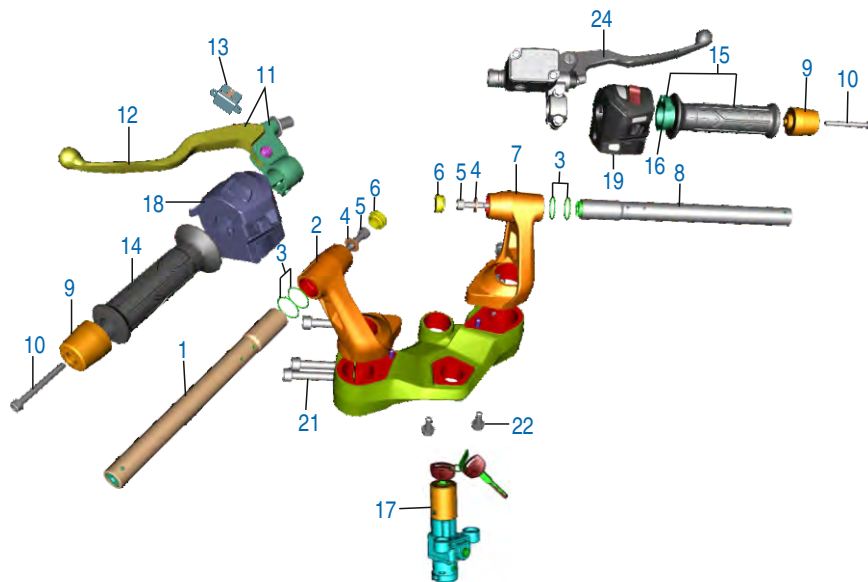

No.	Part No.	Description	Qty.	Remarks
1	DT 1510 10	Handle Bar Tube LH Assly.	1	
2	DT 1510 36	Holder Handle LH	1	
3	JL 1510 38	O Ring	4	
4	39 1180 11	Washer - Plain	2	
5	LA C000 20	Bolt Socket	2	
6	DT 1510 39	Plug Handle Holder	2	
7	DT 1510 37	Holder Handle RH	1	
8	DT 1510 12	Handlebar Tube Assly RH	1	
9	JL 1510 35	Handlebar Weight	2	
10	39 2427 04	Bol - Hexagon	2	
11	DT 1610 07	Lever & Holder Assly LH	1	
12	JG 1610 08	Lever Clutch	1	
13	JY 4014 04	Clutch Switch	1	
14	JL 1610 03	Handle Grip LH	1	
15	DT 1610 05	Grip Handle Assly RH	1	
16	JG 1510 22	Pipe -Throttle	1	
17	DT 2326 01	Lock Set 3 In 1	1	
	DT 2326 03	Lock Set 3 In 1	1	For Argentina
18	DT 4014 03	Switch Control LH	1	
19	DT 4014 04	Switch Control RH	1	
	DT 4014 07	Switch Control RH	1	For Argentina
20	DT 1210 30	Bracket Upper	1	
21	DG 1810 08	Bolt Socket	6	
22	39 1943 04	Bolt Flange	2	
23	DS 1910 52	Lever Boot LH	1	
24	JG 1610 10	Lever RH	1	




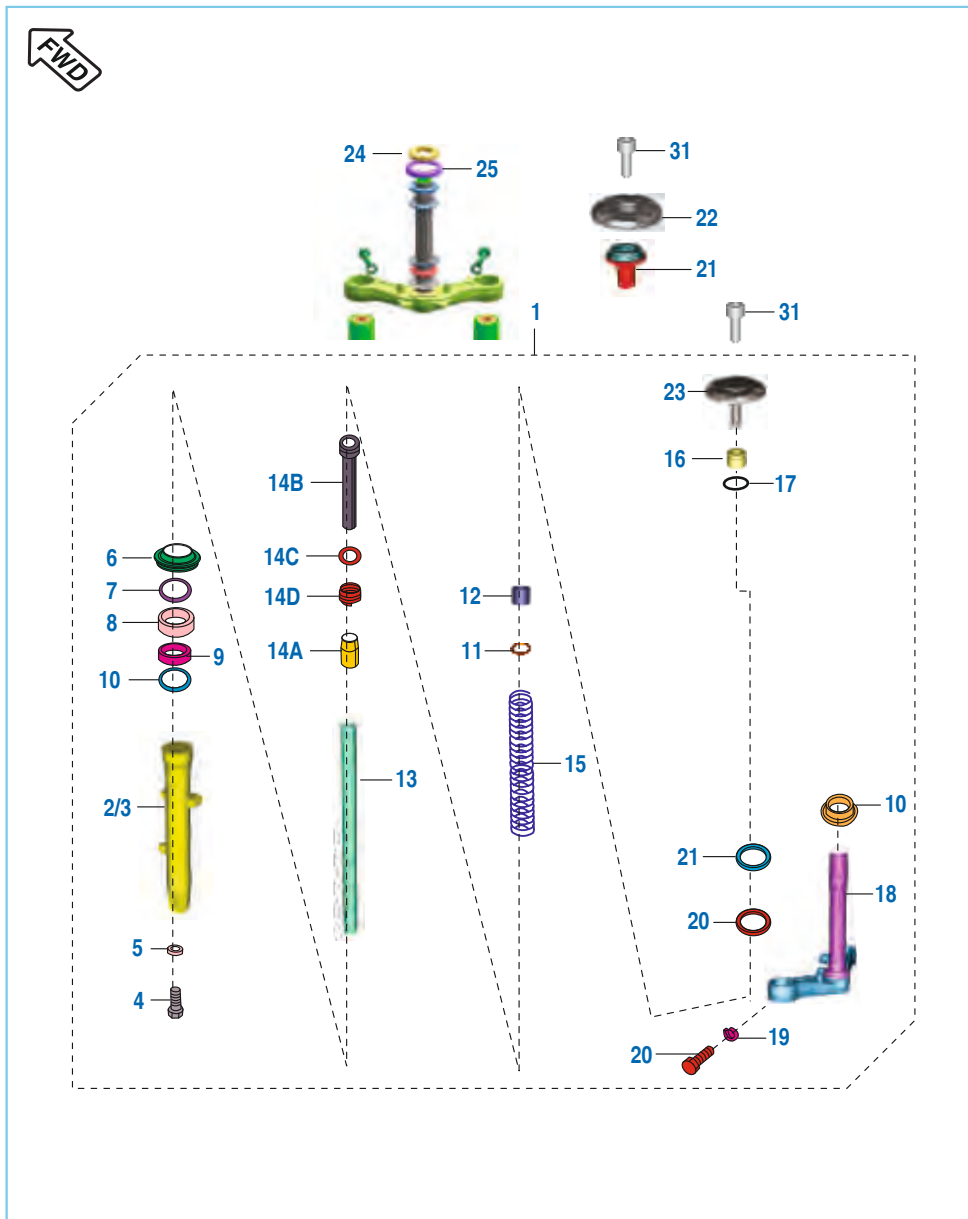Front Fork




No.	Part No.	Description	Qty.	Remarks
1	DT 1210 38	Fork Assly - Front	1	
2	JL 1510 02	Tube Outer LH	1	
3	DT 1210 40	Tube Outer RH	1	
4	DK 1810 06	Socket Headed Bolt M10	2	
5	DK 1810 07	Copper Washer	2	
6	DK 1810 21	Inner Dust Seal	2	
7	DK 1810 18	Washer Seal	2	
8	DK 1810 19	Oil Seal	2	
9	DK 1810 17	Guide Bush	2	
10	DK 1810 20	Oil Seal Stopper	2	
11	DK 1810 15	Washer	2	
12	DT 1210 36	Spacer Tube	2	
13	DT 1510 40	Fork Pipe Inner	2	
14A	DK 1810 09	Cap Oil Lock	2	
14B	DK 1810 10	Seat Pipe	1	
14C	DK 1810 12	Piston Ring	2	
14D	DK 1810 13	Rebound Spring	2	
15	DT 1210 37	Spring Main Spring	2	
16	DT 1510 42	Fork Bolt	2	
17	DK 1810 23	'O' Ring	2	
18	DT 1210 35	Under Bracket Assly Complete	1	
19	DK 1810 25	Spring Washer	2	
20	DK 1810 28	Bolt	2	
21	DT 1210 31	Fork Top Bolt	1	

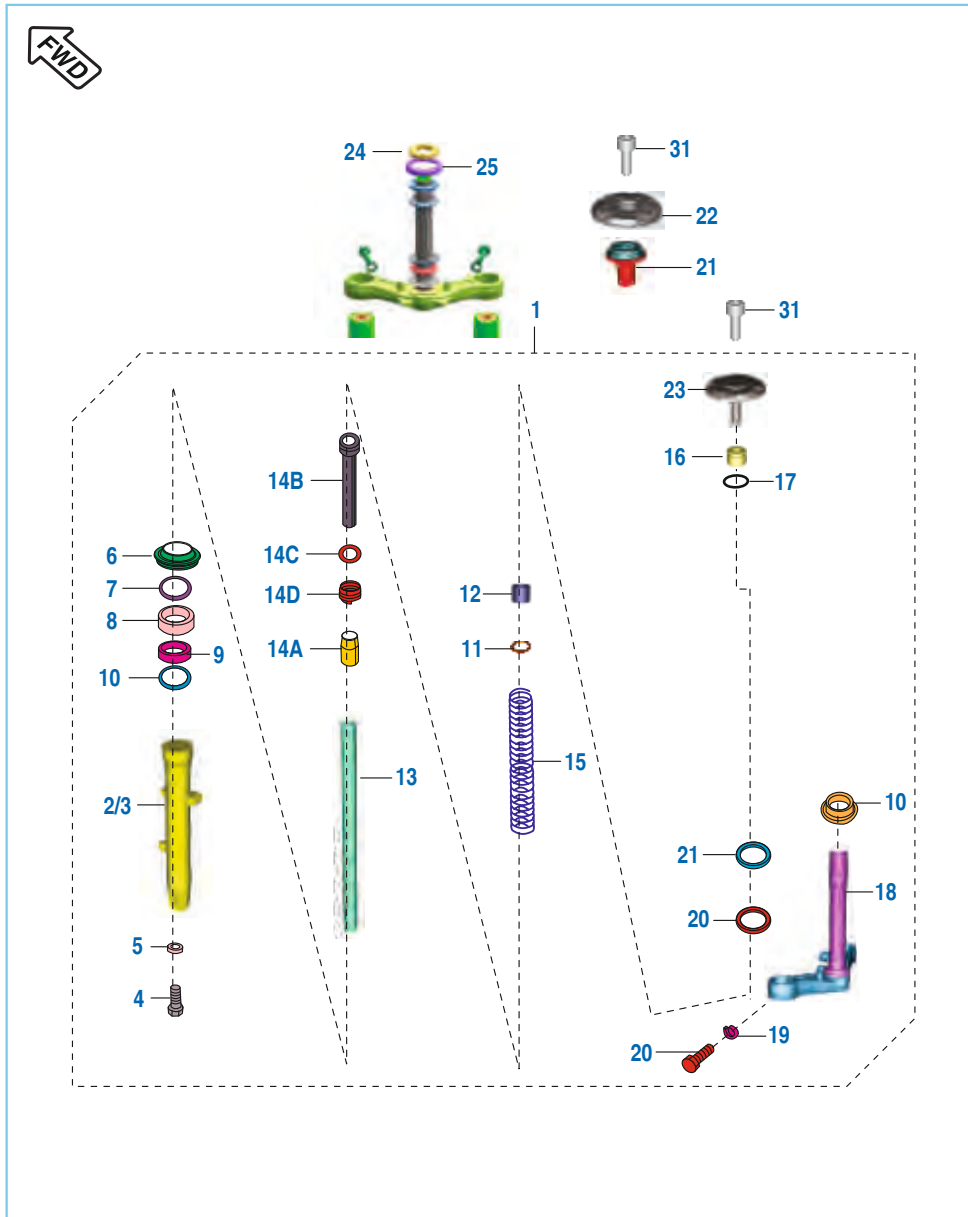Front Fork



No.	Part No.	Description	Qty.	Remarks
22	DT 1210 32	Cap Steering Top Bolt	1	
23	DT 1510 43	Cap Fork Top Bolt	2	
24	DK 1810 75	Nut Steering	1	
25	DK 1810 76	Cup Steering	1	
26	LA C000 68	Bolt Socket	3	

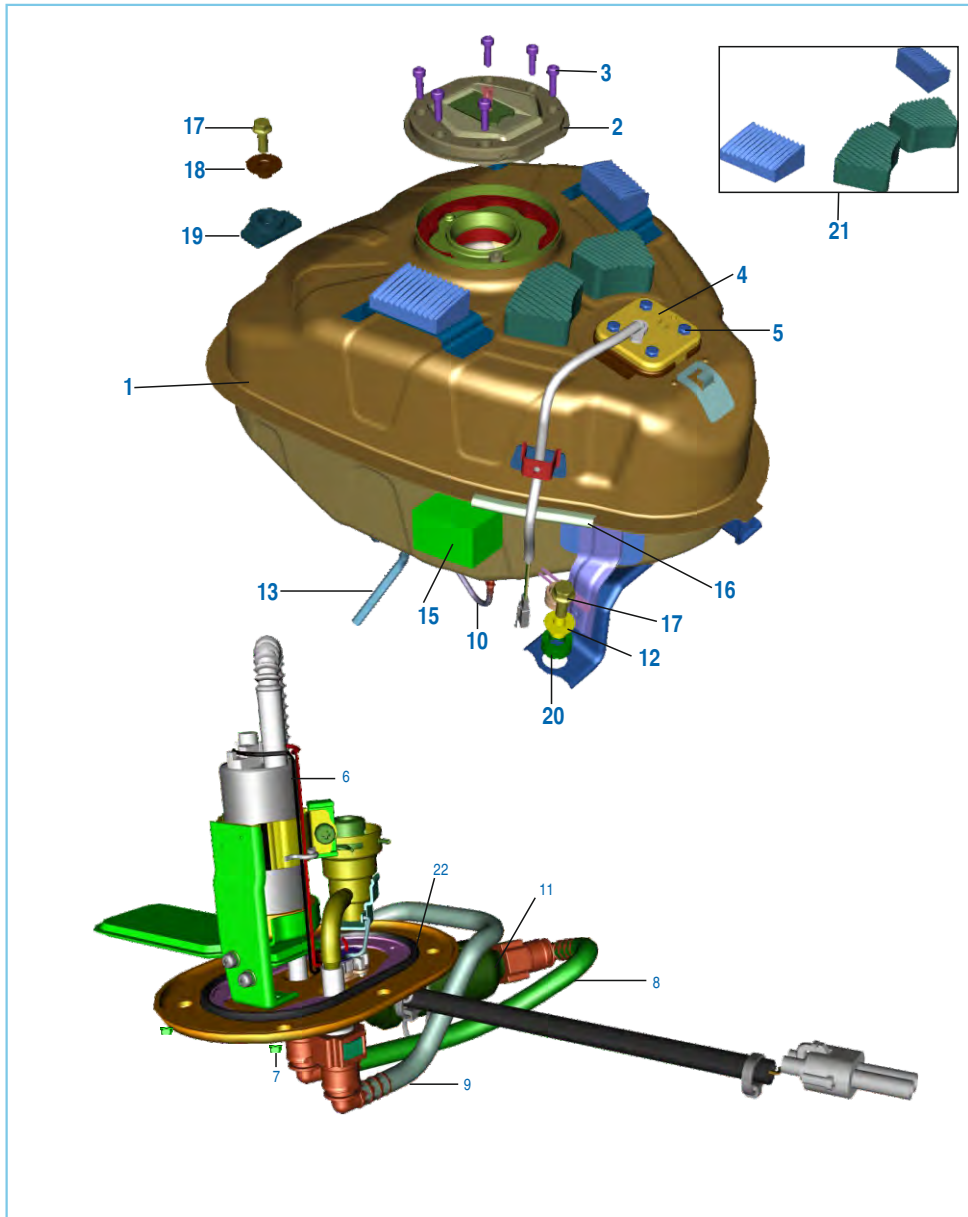
Petrol Tank, Cap Tank and Gauge Fuel



No.	Part No.	Description	Qty.	Remarks
1	DT 1710 01	Tank Assly	1	
2	JL 1716 00	Cap Tank	1	
3	KA Cd05 16	Screw Allen	6	
4	DT 4026 00	Fuel Level Sensor	1	
5	30 1410 32	Bolt	4	
6	DT 1718 23	Fuel Pump Module	1	
7	39 0798 15	Nut	6	
8	DT 6112 03	Tube Filter To Injector	1	
9	JL 1718 32	Tube Filter to RR QA	1	
10	JL 1718 30	Hose- Fuel Pump - I	2	
11	DT 1718 14	Fine fuel Filter	1	
12	JL 1710 19	Sleeve Tank Mtg Rear	2	
13	DT 1710 61	Drain Pipe	1	
14	DG 1410 28	Clamp	1	
15	DT 1710 55	Foam Fuel Tank	2	
16	JL 1710 38	Beading Tank LH	1	
17	39 1946 04	Bolt Tank Mtg	3	
18	DT 1710 75	Sleeve Tank Mtg Front	3	
19	DT 1710 78	Grommet Tank Mtg	1	
20	JL 1710 20	Grommet Tank Mtg Rear	2	
21	36 DT00 06	Kit Tank Damper	1	
22	DT 1718 11	O Ring Fuel Pump	1	




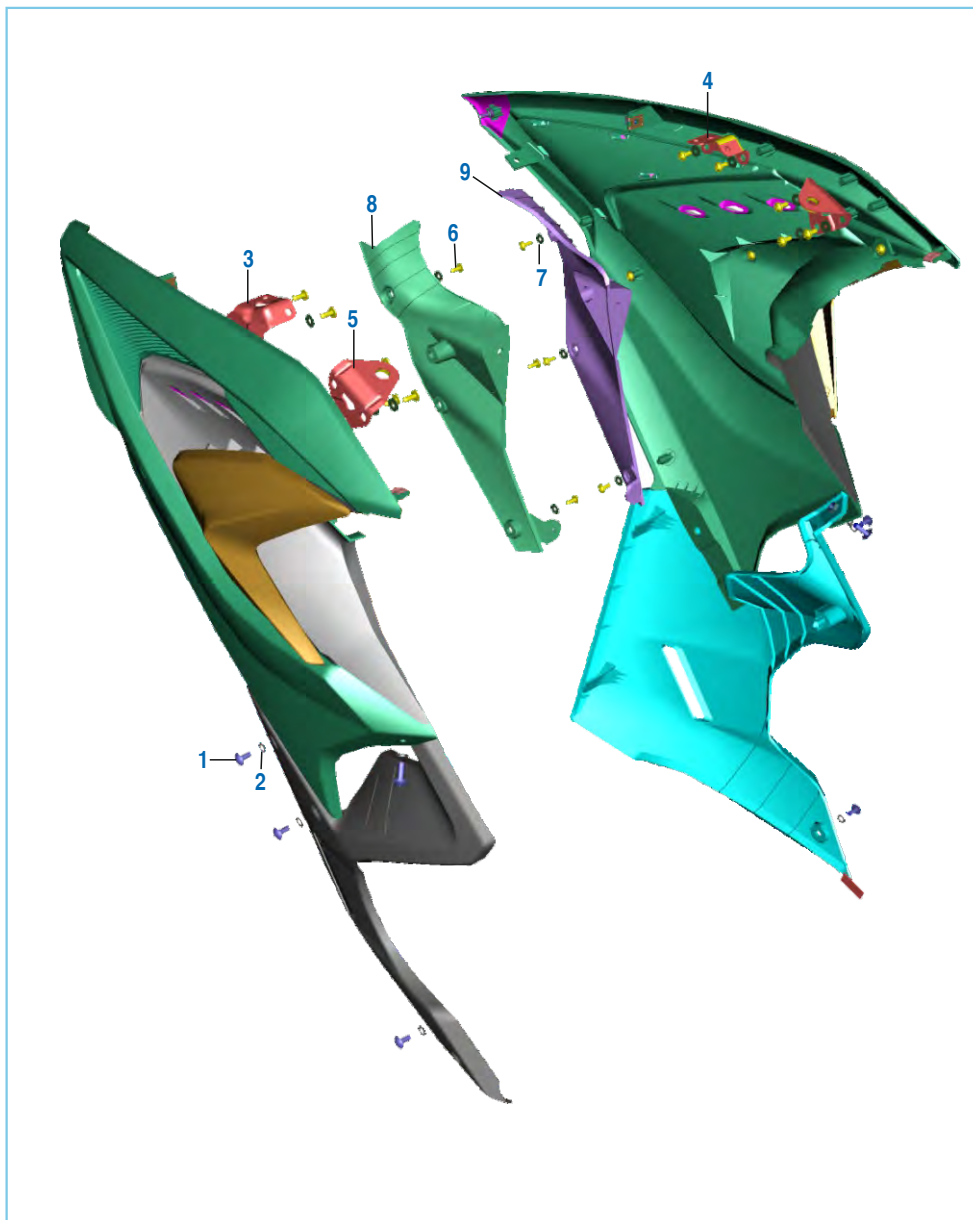Fittings - Side Fairing




No.	Part No.	Description	Qty.	Remarks
1	KB UB06 12	Mushroom Round Head Screw	6	
2	KD BC06 13	Plain Washer	8	
3	DT 1812 91	Bracket Side Fairing Front LH	1	
4	DT 1812 92	Bracket Side Fairing Front RH	1	
5	DT 1812 93	Bracket Side Fairing Rear	2	
6	LB R000 02	Self Tapping Screw-	14	
7	LD A000 07	Washer Plain Small	14	
8	DT 1812 15	Side Fairing Enclosure LH	1	
9	DT 1812 28	Side Fairing Enclosure RH	1	

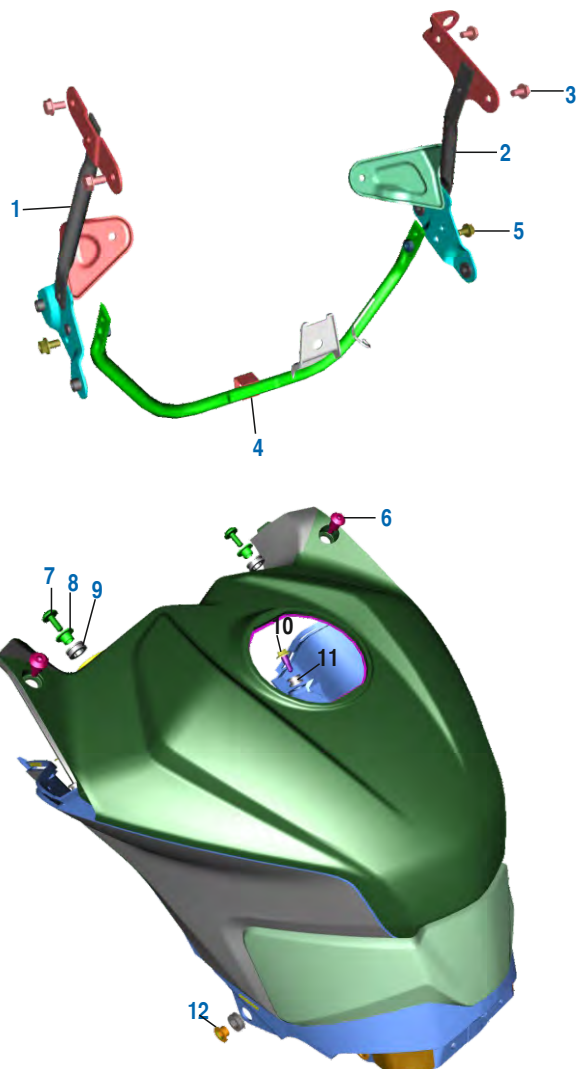Fittings - Side Fairing Bracket & Fuel Tank Cover




No.	Part No.	Description	Qty.	Remarks
1	DT 1812 44	Fairing Structure Middle LH	1	
2	DT 1812 46	Fairing Structure Middle RH	1	
3	LA D000 40	Bolt Flange	4	
4	DT 1812 75	Fairing Structure Middle	1	
5	KA DB06 10	Bolt Flange	2	
6	DT 1812 73	Step Bolt Tank cover Top	2	
7	LA C000 22	Bolt Socket- Special head	2	
8	DT 1710 80	Collar Tank cover Mtg	2	
9	DT 1710 53	Grommet Tank Side Cover	6	
10	LB U000 27	Screw Truss	2	
11	DT 1710 73	Grommet Tank Cover Assly	2	
12	DT 1812 74	Collar Side Cover	4	

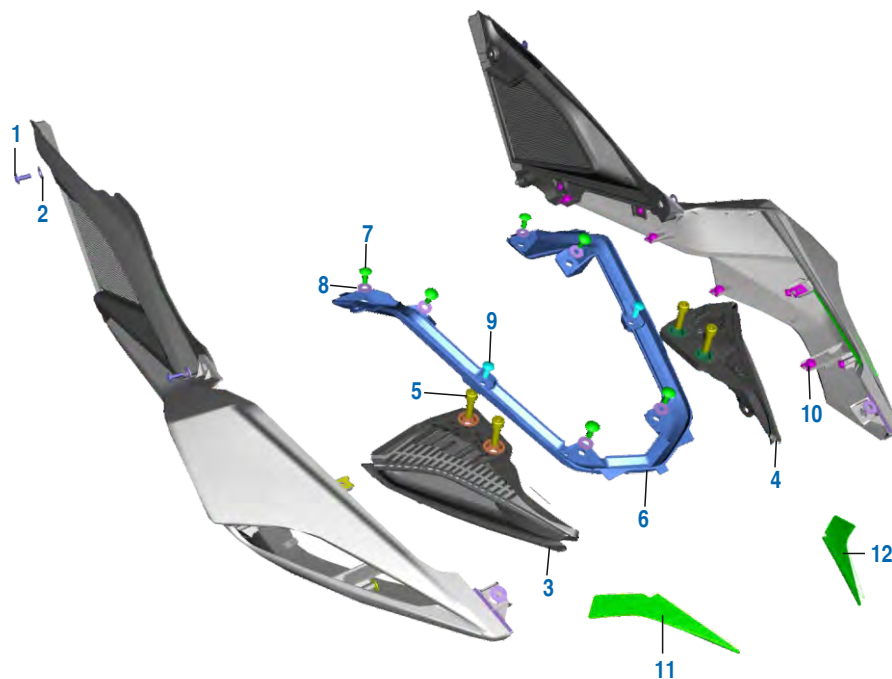Fittings - Side Cover




No.	Part No.	Description	Qty.	Remarks
1	JW 1710 16	Screw Truss	4	
2	39 0239 11	Plain Washer	4	
3	DT 2314 04	Assly Grab Handle LH	1	
4	DT 2314 05	Assly Grab Handle RH	1	
5	LA C000 05	Bolt Socket	4	
6	DT 1812 07	Flange Seat Cover LH	1	
7	KB UB06 14	Screw Truss	6	
8	39 0239 11	Plain Washer	6	
9	39 1907 01	Mushroom Head Screw	2	
10	DJ 1612 29	Clip Nut	12	
11	DT 1812 63	Foam LH Seat Cowl	1	
12	DT 1812 64	Foam RH Seat Cowl	1	

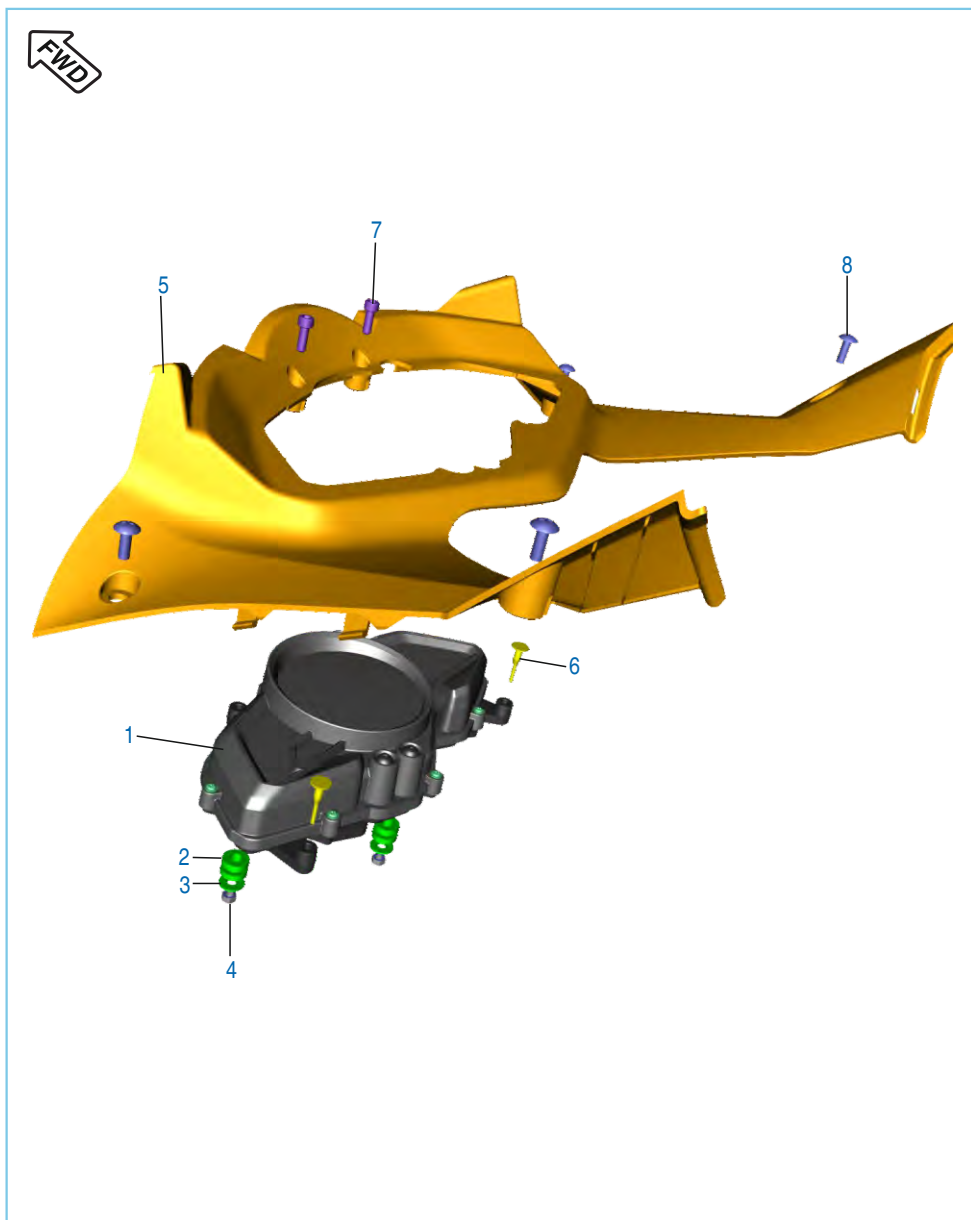Meter Assembly




No.	Part No.	Description	Qty.	Remarks
1	DT 4024 08	Speedometer Assembly	1	
2	JG 1812 38	Grommet Dashboard	3	
3	LD B000 07	Washer Plain	3	
4	39 0291 15	Nut - Hex	3	
5	DT 1812 33	Speedo Flap	1	
6	DT 1812 55	Damper Speedo Flap	2	
7	KA Cd05 16	Bolt Socket	2	
8	DT 1810 10	Bolt Socket	4	
9	39 2141 24	Washer Non Metallic	4	N.I
10	YD T020 04	Speedometer Top Cover & 'O' Ring	1	N.I

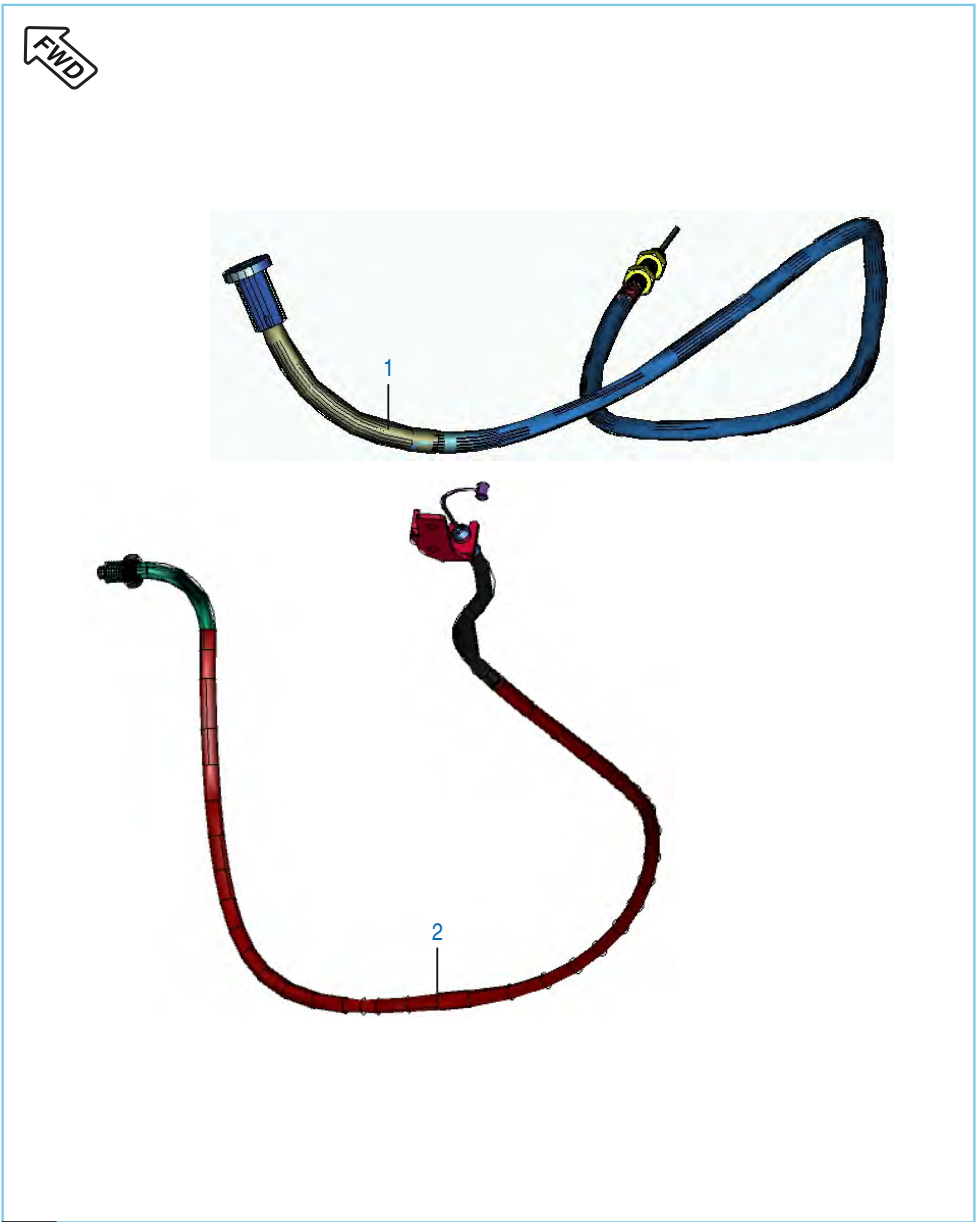Control Cables




No.	Part No.	Description	Qty.	Remarks
1	DT 1612 04	Cable Throttle	1	
2	DT 1612 03	Cable Clutch	1	

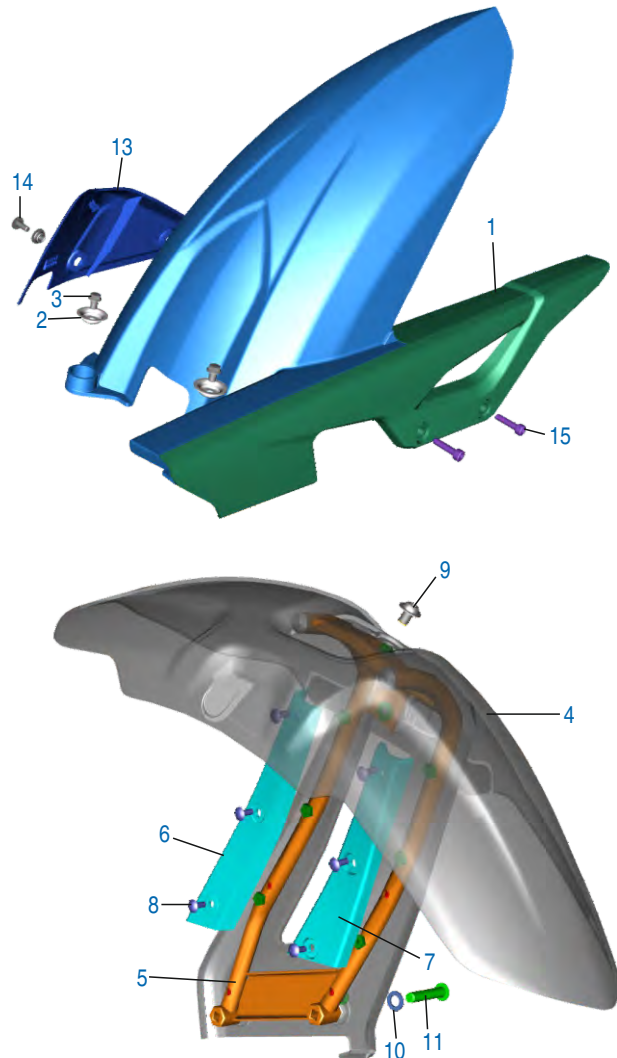Chain Case




No.	Part No.	Description	Qty.	Remarks
1	JL 1812 05	Cover Assly Chain	1	
2	JG 1220 28	Extruded Washer	2	
3	39 1791 04	Bolt Flanged M6X8	2	
4	DT 1814 14	Asly Hugger Rear	1	
5	DT 1810 00	Tube Rear Hugger Mtg	1	
6	DT 1814 15	Cover 1- Hugger Rear	1	
7	JL 1814 08	Cover 2- Hugger Rear	1	
8	KB UF04 08	Screw	6	
9	LA C000 37	Bolt Soc-special Head	3	
10	39 0265 12	Spring Washer	2	
11	LA C000 36	Bolt Special Socket	2	
12	JL1814 10	Collar Hugger Rear	2	
13	JL 1812 53	Chain Cover RH Side	1	
14	LA C000 08	Bolt Socket Head	2	
15	KA CB06 22	Bolt Socket	2	

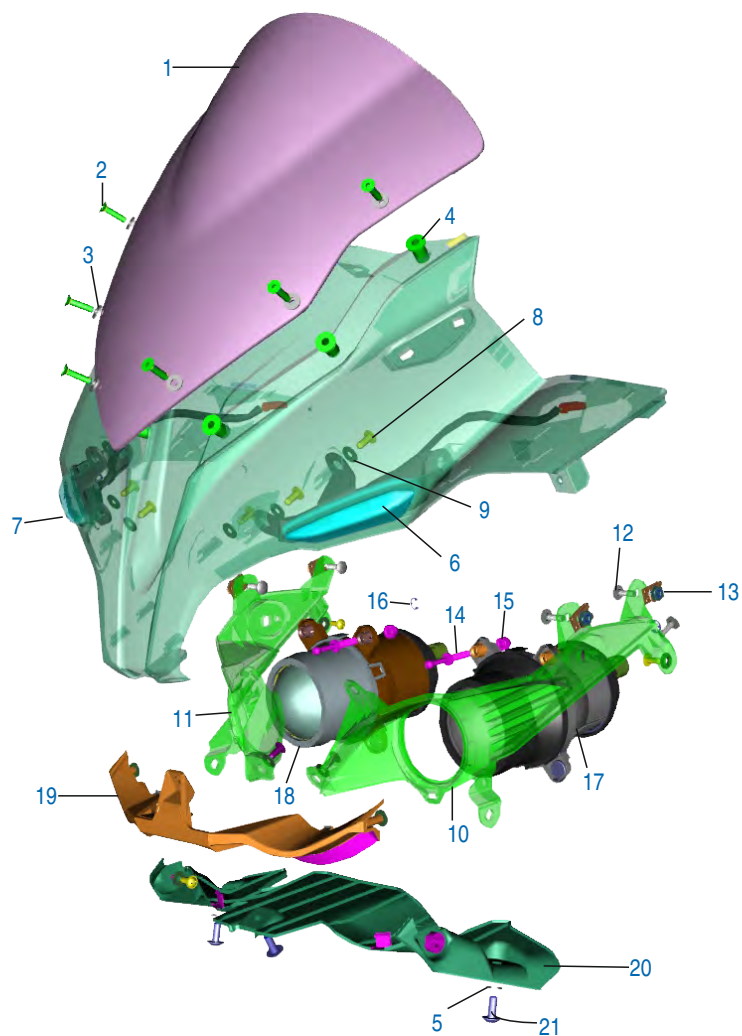Head Lamp & Fairing




No.	Part No.	Description	Qty.	Remarks
1	DT 1812 32	Visor	1	
2	LB S000 02	Screw CSK Socket Head	6	
3	39 2141 24	Washer	6	
4	JG 1812 36	Well Nut	6	
5	LD A000 07	Washer Plain Small	3	
6	DT 4010 09	Front Position Lamp LH	1	
7	DT 4010 10	Front Position Lamp RH	1	
8	LB R000 02	Self Tapping screw	12	
9	LD A000 07	Washer Plain small	12	
10	DT 1812 67	Outer Mask LH	1	
11	DT 1812 68	Outer Mask RH	1	
12	39 1907 01	Mushroom Head Screw	6	
13	DJ 1612 29	Clip Nut	4	
14	DT 4010 17	Pivot Screw	2	
15	KC Ea06 05	Nut Domed Cap single Piece	2	
16	KE CB50 06	Circlip Type E	2	
17	DT 4010 08	Assly Low Beam Projector	1	
18	DT 4010 11	Assly High Beam Projector	1	
19	DT 1812 52	Front Bezel Lower	1	
20	DT 1812 85	Cover Fairing Mtg Lower	1	
21	KB UC06 14	Screw Truss	3	

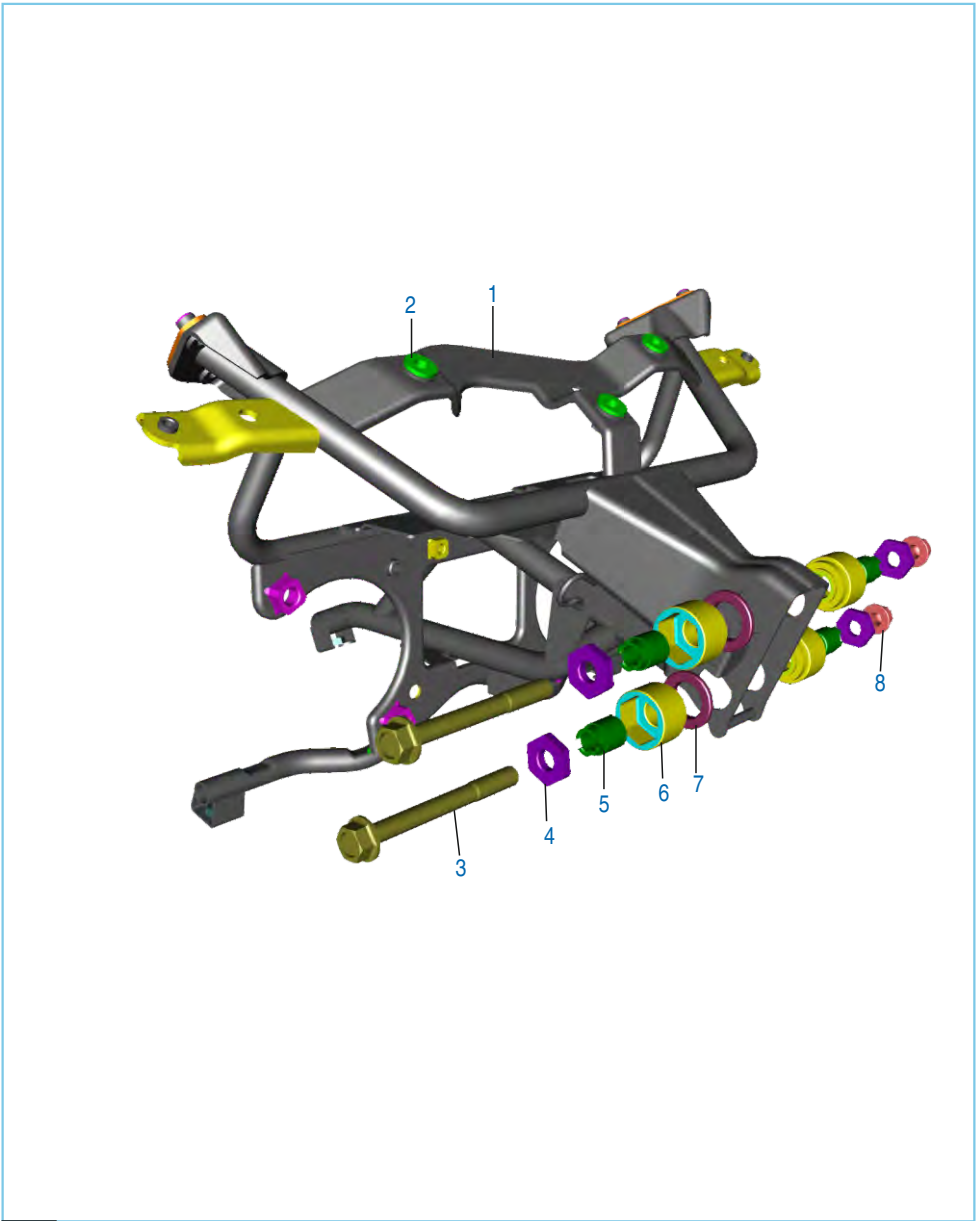Fairing Structure




No.	Part No.	Description	Qty.	Remarks
1	DT 1812 42	Fairing Structure	1	
2	JG 1812 38	Grommet Dashboard	3	
3	LA D001 20	Bolt Flanged	2	
4	DT 1813 10	Hex Thrust Washer	4	
5	DT 1813 11	Spacer Fairing Structure	4	
6	39 2535 15	Nut Domed Cap	2	

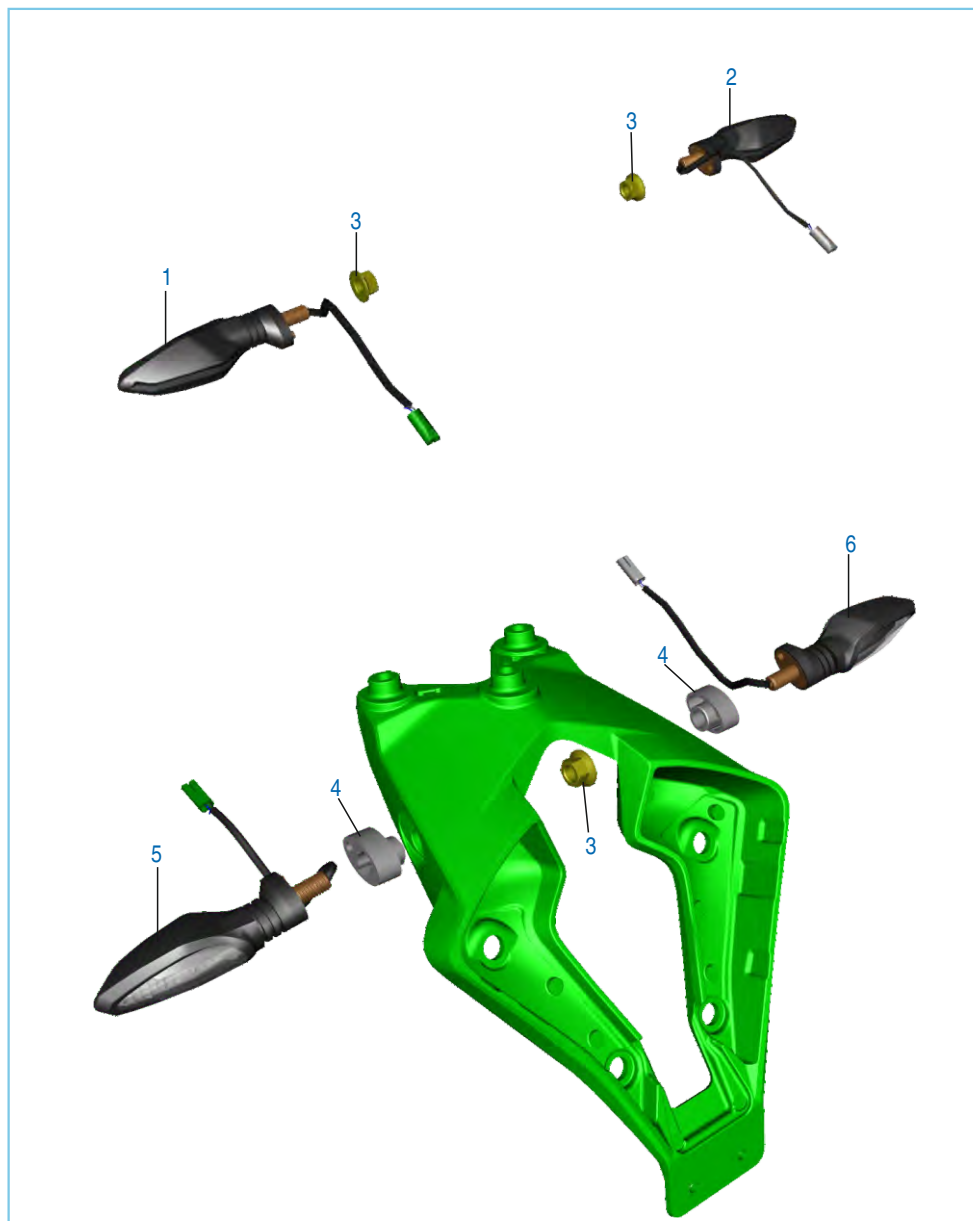Indicator Light Assembly




No.	Part No.	Description	Qty.	Remarks
1	DT 4010 02	Indicator Assy FR LH	1	
2	DT 4010 03	Indicator Assy FR RH	1	
3	DT 4010 04	Indicator Assy RR LH	1	
4	DT 4010 05	Indicator Assy RR RH	1	
5	39 1225 15	Nut - Hexagon With Flange : M10	4	
6	DT 1138 19	Spacer Blinker Mounting	4	

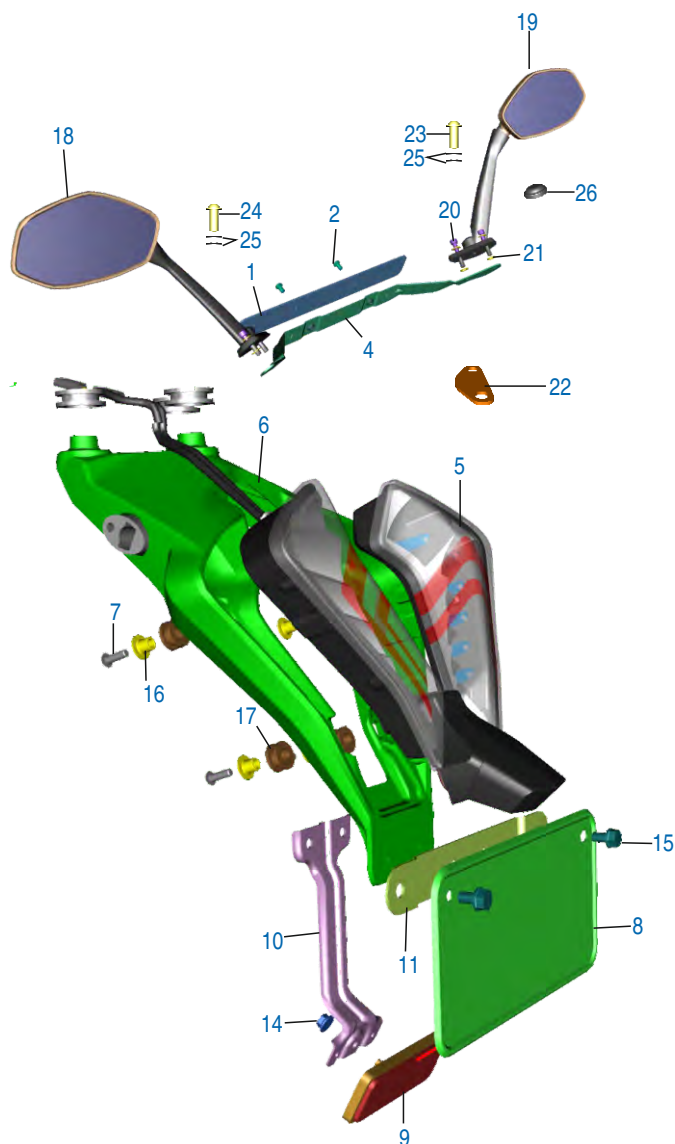Tail Lamp Assly / Front Number Plate




No.	Part No.	Description	Qty.	Remarks
1	JU 2328 00	Front Number Plate	1	
	JL 2328 06	Front Number Plate	1	For Iran
2	LB U000 09	Screw Mushroom Head	2	
3	39 2141 24	Washer Non Metallic	2	N.I
4	DT 1812 48	Number Plate Mtg Bkt	1	
5	DT 4010 01	Lamp Tail Assly	1	
6	DT 1138 07	Bkt Rear Blinker Mtg	1	
7	DT 1138 18	Screw	4	
8	DP 1611 45	Rear No. Plate	1	
9	DD 2010 02	Reflector - Reflex	1	
10	DT 1138 13	Bkt- Reflector Reflex Mtg	1	
11	JD 1138 00	Bkt Rear No.Plake Mtg	1	
	JL 2328 17	Bkt Rear No.Plake Mtg	1	
12	39 2476 04	Hex Head With Flange	2	N.I
13	39 2124 15	Flange Nut	2	N.I
14	39 1972 15	Nut Hex with Flange	1	
15	39 2475 04	Bolt Hex Head With Flange	2	
16	DT 1138 24	Sleeve	4	
17	DT 1138 17	Grommet	4	
18	DT 2316 00	Mirror Assly LH	1	
19	DT 2316 01	Mirror Assly RH	1	
20	LA C000 22	Bolt Socket	4	
21	KD AC06 11	Washer Plain Small	8	
22	DT 1812 84	Pad Mirror Mtg	2	
23	DT 2316 08	Bolt Mirror Mtg RH	1	Ref. Cir. IB- 185
24	DT 2316 07	Bolt Mirror Mtg LH	1	Ref. Cir. IB- 185
25	DT 2316 06	Mirror Mtg Bolt Plug	2	Ref. Cir. IB- 185
26	LD H000 08	Conical Washer	4	Ref. Cir. IB- 185

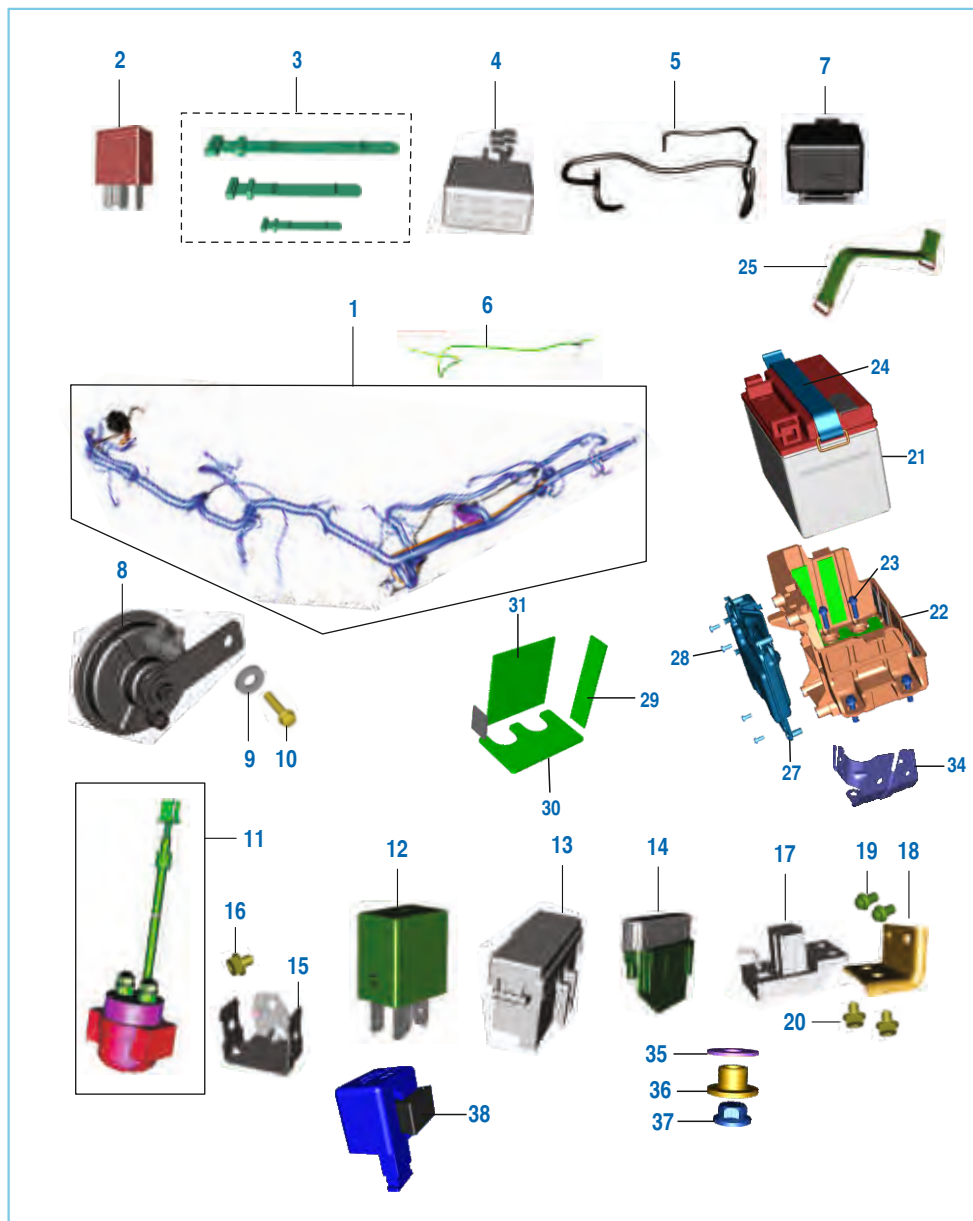Electrical Equipments




No.	Part No.	Description	Qty.	Remarks
1	DT 4022 20	Harness Wiring- ABS	1	Ref. Cir. IB-196 For Argentina
	DT 4022 33	Harness Wiring- ABS	1	
	DT 4022 36	Harness Wiring- ABS	1	
	JL 4030 00	Relay Inter lock	1	
2	36 DT00 04	Kit Band Wiring Harness	1	
3	DT 4020 05	Light Control Module	1	
4	DT 4022 18	Cable Assly Relay to Motor	1	
5	DT 4022 23	Cable Earth	1	
6	JL 4032 00	Termination Unit	1	
7	PA 4016 00	Horn LH	1	
8	39 1507 11	Washer- Plain	1	
9	KA Da08 14	Hex Head Bolt Flanged	1	
10	JN 3516 04	Starter Relay with Grommet	1	
11	JL 4030 01	Relay - Aux 1 diode	1	
12	DT 4022 04	Fuse Box	1	
13A	DT 4022 26	Fuse - 7.5A	5	
13B	JG 4022 29	Fuse 15A	5	
13C	JG 4022 30	Fuse 30A	2	
14	GL 4022 10	Fuse Box	1	
14A	JG 4022 34	Fuse 25A	2	
14B	60 1115 28	Fuse 10A	2	
15	DT 1138 01	Bracket Starter Relay Loose	1	
16	KA Da06 08	Bolt Flanged	1	
17	JG 4032 00	Roll Over Sensor	1	
18	DT 1138 00	Bracket Roll Over Sensor	1	
19	LA E000 17	Bolt Flanged	2	
20	KA Ea05 10	Bolt Flanged Small	2	
	KB UC05 20	Screw Truss	2	Ref. Cir. IB-175

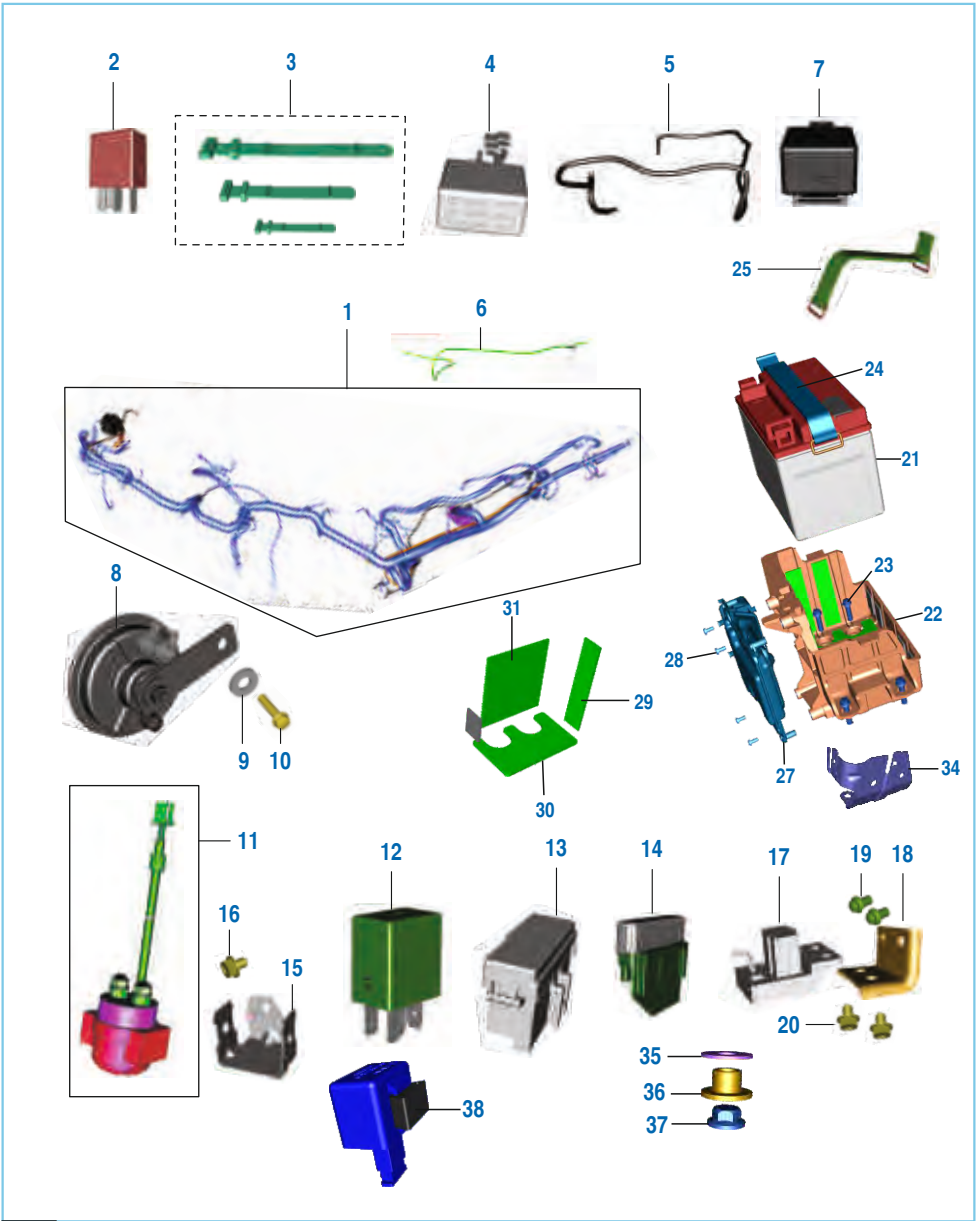Electrical Equipments




No.	Part No.	Description	Qty.	Remarks
21	36 JU00 15	12V 8Ah VRLA Battery	1	
22	52 DT01 24	Assly Battery Case	1	
23	KA EA06 22	Bolt	4	
24	JL 1138 25	Band Battery Case Vertical	1	
25	DT 1810 22	Band Battery Case	1	
26	DT 1138 49	Strap ECU Harness	1	N.I
27	DT 3514 04	EMS- ECU Assly	1	
28	KB BF04 08	Screw Pan Cross	4	
29	DT 1813 20	Foam Battery Case II	3	
30	DT 1813 18	Foam Battery Case	2	
31	DT 1813 19	Foam Battery Case I	1	
32	DT 1813 16	Sleeve Battery Case	4	N.I
33	DT 1813 17	Grommet Battery case	3	N.I
34	DT 1138 51	Bracket fuse box mtg loose	1	
35	DT 1138 06	Sleeve Sensor Roll Over	2	Ref. Cir. IB-175
36	39 0239 11	Plain Washer	2	Ref. Cir. IB-175
37	39 1972 15	Nut Flange	2	Ref. Cir. IB-175
38	DT 4020 08	LED Flasher	1	Ref. Cir. IB-196
39	DT 4022 34	Harness Pigtail - Magneto RR	1	Ref. Cir. IB-196

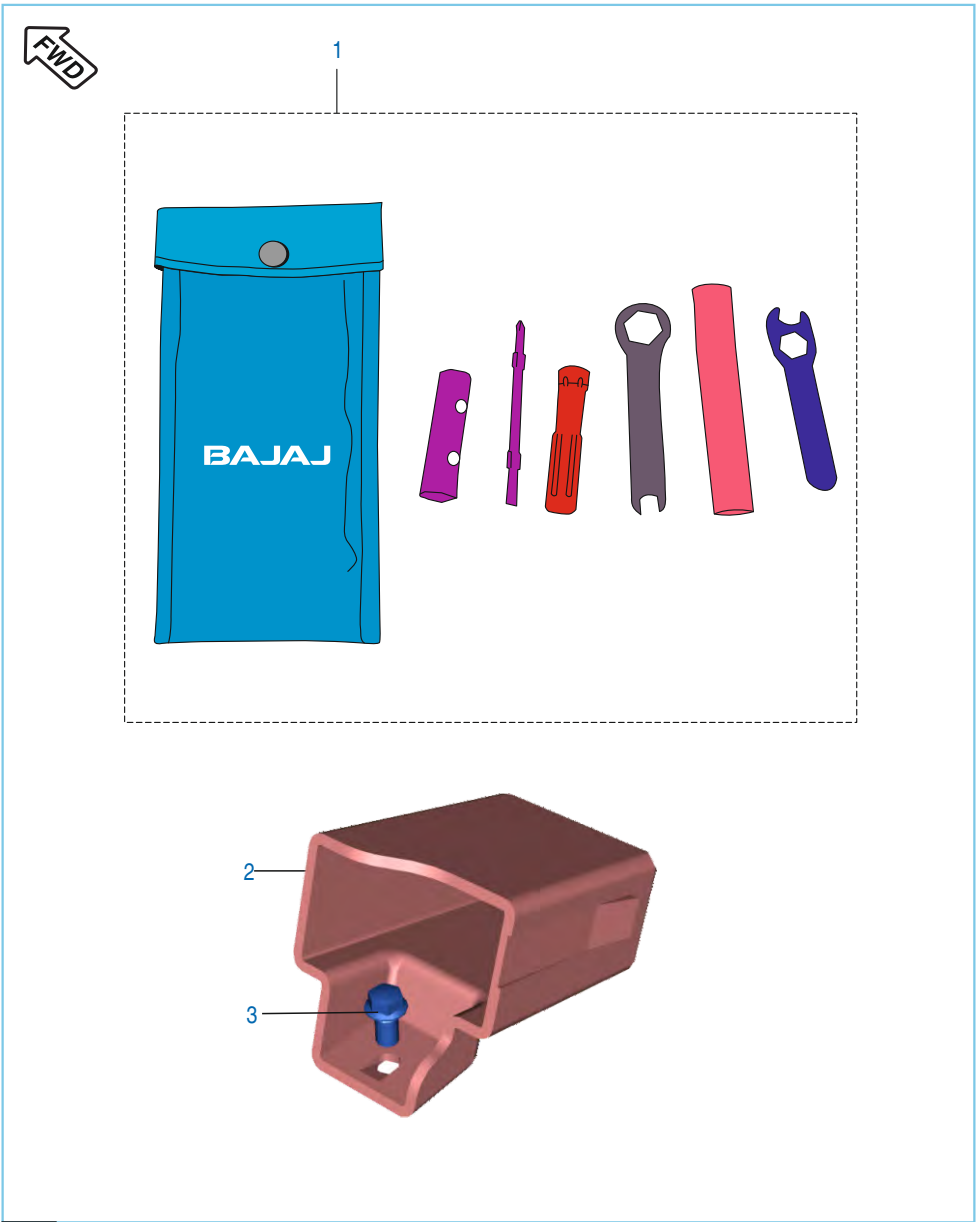

Tool Kit


No.	Part No.	Description	Qty.	Remarks
1	JL 2310 04	Tool Kit	1	
2	DT 2310 00	Box Tool Kit	1	
3	KA EA06 10	Bolt Flange	1	

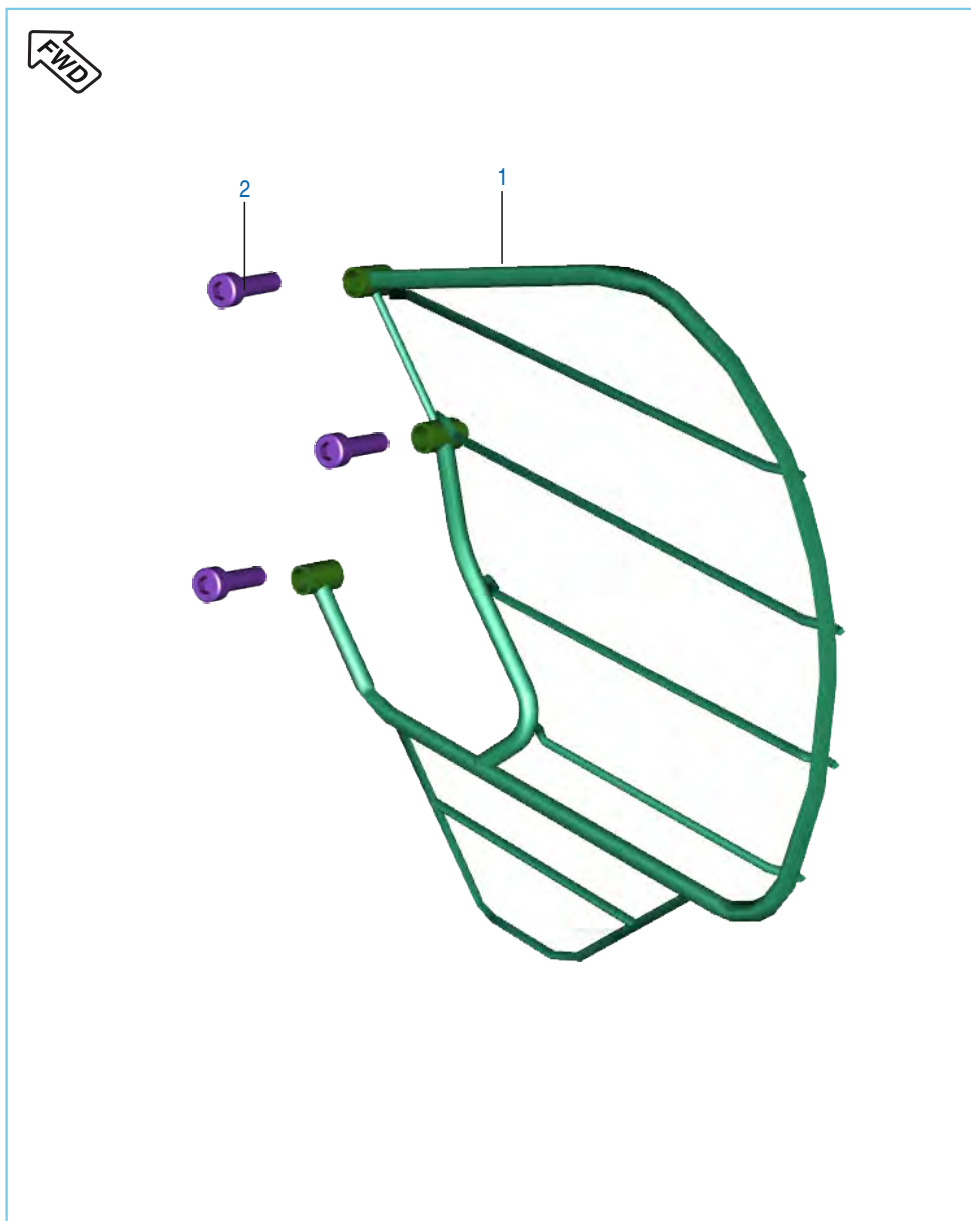Accessories



No.	Part No.	Description	Qty.	Remarks
1	JL 2312 02	Guard Saree	1	
2	KA CB06 22	Bolt Socket	3	

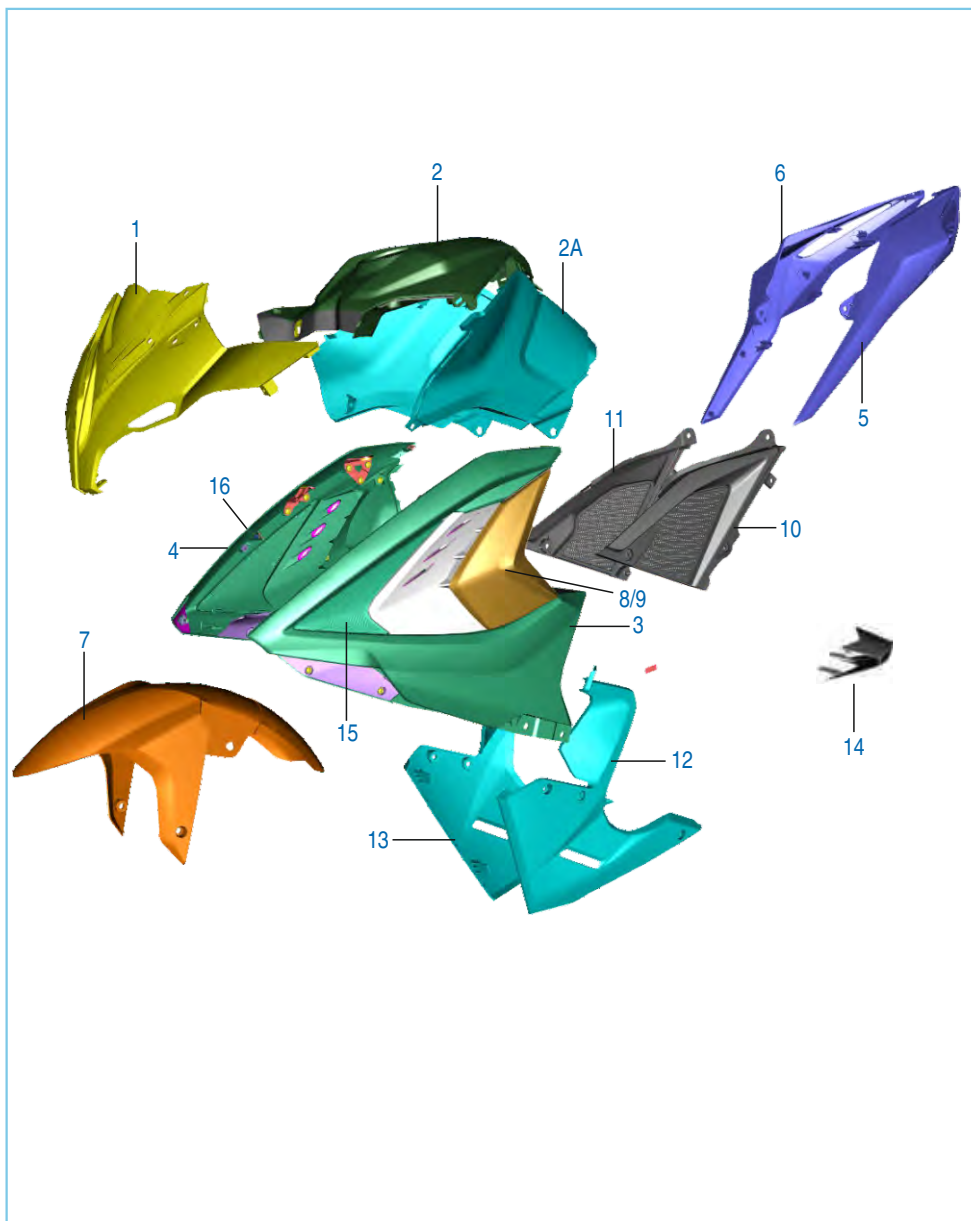Painted Parts & Decals



No.	Part No.	Description	Qty.	Remarks
1	56 DT65 6T	Front Fairing Bright Yellow	1	
	56 DT04 4R	Front Fairing Passion Red	1	
	56 DT65 X3	Front Fairing E Black	1	
2	56 DT22 6T	Tank Cover Top Bright Yellow	1	
	56 DT22 4R	Tank Cover Top Passion Red	1	
	56 DT22 X3	Tank Cover Top E Black	1	
2A	DT 1710 42	Tank Side Assly	1	
3	56 DT58 6T	Side Fairing RH Bright Yellow	1	
	56 DT35 4R	Side Fairing RH Passion Red	1	
	56 DT58 X3	Side Fairing RH E Black	1	
4	56 DT34 4R	Side Fairing LH Passion Red	1	
	56 DT57 6T	Side Fairing LH Bright Yellow	1	
	56 DT57 X3	Side Fairing LH E Black	1	
5	56 DT11 6T	Seat Cowl LH Bright Yellow	1	
	56 DT11 4R	Seat Cowl LH Passion Red	1	
	56 DT11 X3	Seat Cowl LH E Black	1	
6	56 DT10 4R	Seat Cowl RH Passion Red	1	
	56 DT10 6T	Seat Cowl RH Bright Yellow	1	
	56 DT10 X3	Seat Cowl RH E Black	1	
7	56 DT05 4R	Fender Front - Passion Red	1	
	56 DT05 6T	Fender Front - Bright Yellow	1	
	56 DT05 X3	Fender Front - E Black	1	
8	56 DT08 4X	Side Fairing Flap RH- E Black	1	
9	56 DT07 4X	Side Fairing Flap LH- E Black	1	
10	56 DT12 4X	Side Cover LH	1	
11	56 DT13 4X	Side Cover RH	1	
12	DT 1812 86	Lower Fairing LH	1	
13	DT 1813 24	Lower Fairing RH	1	
14	DT 1812 10	Seat Cow Central Top	1	
15	DT 1812 14	Side Fairing Mesh LH	1	
16	DT 1812 21	Side Fairing Mesh RH	1	

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
1.	36DT0032	KIT ASSly CYL HEAD	JL511045 JG511046	HEAD CYLINDER COMP STUD (M8*1.25)	1 2
2	36DT0033	KIT GEAR PRIMARY DRIVE & DRIVEN	JG551216 DT551407	GEAR PRIMARY DRIVE 22T HOUSING CLUTCH ASSY COMP	1 1
3	36DT0005	KIT CHAIN GUIDE	JF531008 JL531005	GUIDE CHAIN (SLACK SIDE) CHAIN GUIDE TIGHT SILENT	1 1
4	36DT0007	KIT CHAIN SPROCKET	DV101048 DT141004 DT141005	SPROCKET OUTPUT (14T) SPROCKET 41T CHAIN 110 LINK	1 1 1
5	36DT0008	KIT ENGINE GASKET	JG541041 JL541207 JL541208 JL521002 JL511022 CS101128 JL511042 JG591070	GASKET CRANKCASE GASKET CLUTCH COVER GASKET MAGNETO COVER GASKET CYLINDER BLOCK GASKET CYLINDER HEAD GASKET GASKET HEAD COVER GASKET EXHAUST	1 1 1 1 1 1 1
6	36JL0011	KIT VALVE REPAIR	JF511215 39201719 JF511214 JF511217 DG101029	SEAT VALVE SPRING SEAL VALVE STEM RETAINER VALVE SPRING VALVE SPRING COTTER VALVE	4 4 4 4 8
7	36JL0007	KIT BLOCK PISTON	JL521004 JL521200	CYLINDER BLOCK WITH NIPPLE PISTON ASSLY COMPL	1 1
8	36JU0001	KIT PISTON RING SET	JU521206 JU521207 JU521208	RING PISTON TOP RING PISTON SECOND RING PISTON OIL	1 1 1
9	36JL0004	KIT ASSLY C'CASE RH 200	JL541016 39256220 JG541061 BA102003	CRANKCASE RH BEARING - NEEDLE ROLLER PIPE BREATHER PLUG - OIL HOLE	1 1 1 3
10	36JL0003	KIT ASSLY C'CASE LH 200	JL541019 JC101077 JG541021 JG541015 39256220 JG541020	CRANKCASE LH PLUG TAPER OIL NOZZLE NEEDLE BEARING HK 1514 RS BEARING - NEEDLE ROLLER JET OIL CRANKCASE RH	1 2 1 1 1 1

Kit List

Sr No	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty/Kit
11	36JG0004	SHAFT OIL PUMP ASSEMBLY	JG571022 28121008	ROTOR OIL PUMP WITH SHAFT OUTER ROTOR	1 1
12	36DT0028	DCL FENDER ABS-P RED	DT233089 DT233090	FRONT FENDER DECAL ABS LH FRONT FENDER DECAL ABS RH	1 1
13	36DT0029	DCL FENDER ABS-BR YELLOW	DT233091 DT233092	FRONT FENDER DECAL ABS LH FRONT FENDER DECAL ABS RH	1 1
14	36DT0030	DCL FENDER -P RED	DT233085 DT233086	FRONT FENDER DECAL LH FRONT FENDER DECAL RH	1 1
15	36DT0031	DCL FENDER - BR YELLOW	DT233087 DT233088	FRONT FENDER DECAL LH FRONT FENDER DECAL RH	1 1
16	36DT0011	KIT DCL FAIRING-PA RED	DT233015 DT233016 DT233017 DT233018	DECAL FAIRING UPPER LH DECAL FAIRING UPPER RH DECAL FAIRING LOWER LH DECAL FAIRING LOWER RH	1 1 1 1
17	36DT0017	KIT DCL SPOILER LH-PA RED	DT233021 DT233023 DT233025	DECAL TANK SPOILER UPPER LH DECAL TANK SPOILER LOW 1 LH DECAL TANK SPOILER LOW 2 LH	1 1 1
18	36DT0020	KIT DCL SPOILER RH-PA RED	DT233022 DT233024 DT233026	DECAL TANK SPOILER UPP RH DECAL TANK SPOILER LOW RH DECAL TANK SPOILER LOW RH	1 1 1
20	36DT0014	KIT DCL S COWL-PA RED	DT233027 DT233028	DECAL SEAT COWL LH DECAL SEAT COWL RH	1 1
21	36DT0010	KIT DCL FAIRING-BR YELLOW	DT233029 DT233030 DT233031 DT233032	DECAL FAIRING UPPER LH DECAL FAIRING UPPER RH DECAL FAIRING LOWER LH DECAL FAIRING LOWER RH	1 1 1 1
23	36DT0016	KIT DCL SPOILER LH-BR YELLOW	DT233035 DT233037 DT233039	DECAL TANK SPOILER UPP LH DECAL TANK SPOILER LOW LH DECAL TANK SPOILER LOW LH	1 1 1
24	36DT0019	KIT DCL SPOILER RH-BR YELLOW	DT233036 DT233038 DT233040	DECAL TANK SPOILER UPP RH DECAL TANK SPOILER LOW RH DECAL TANK SPOILER LOW RH	1 1 1
25	36DT0013	KIT DCL S COWL-BR YELLOW	DT233041 DT233042	DECAL SEAT COWL LH DECAL SEAT COWL RH	1 1
26	36DT0016	KIT DCL SPOILER LH-BR YELLOW	DT233035 DT233037 DT233039	DECAL TANK SPOILER UPP LH DECAL TANK SPOILER LOW LH DECAL TANK SPOILER LOW LH	1 1 1

115116

Amendment Sheet

Page no.	Fig. no.	Old part no.	New part no.	Description	Updation date	Remarks
104	20	KADA0510	KBUC0520	SCREW TRUSS	22.08.15	REF. CIR. IB-175
104	35	-----	DT113806	SLEEVE	22.08.15	REF. CIR. IB-175
104	36	-----	39023911	WASHER	22.08.15	REF. CIR. IB-175
104	37	-----	39197215	NUT FLANGE	22.08.15	REF. CIR. IB-175
52	3	JL122014	JL122013	SWING ARM	13.10.12	CHILD PART TO BE SERVICED
62	23	—	DT231608	BOLT MIRROR MTG RH	31.10.15	REF. CIR. IB-185
62	24	—	DT231507	BOLT MIRROR MTG LH	31.10.15	REF. CIR. IB-185
62	25	----	DT231606	MIRROR MTG BOLT PLUG	31.10.15	REF. CIR. IB-185
62	26	—	LDH00008	CONICAL WASHER	31.10.15	REF. CIR. IB-185
40	6	DT591239	DT591238	MUFFLER ASSLY	20.11.15	ALT UPDATION
110	15	-----	DT181214	SIDE FAIRING MESH LH	20.11.15	ADDITION
110	16	-----	DT181221	SIDE FAIRING MESH RH	20.11.15	ADDITION
98	6	DT181312	-----	COLLAR FAIRING STRUCT	07.01.15	DELETION
98	7	DT181313	-----	GUIDE BUSH FAIRING STR	07.01.15	DELETION
38	2	DT581063	-----	ASSLY TOP COVER	07.01.15	DELETION
38	6	DT581061	-----	AIT FILTER BOTTOM	07.01.15	DELETION

Amendment Sheet

Page no.	Fig. no.	Old part no.	New part no.	Description	Updation date	Remarks

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
30101195	3	32	39153721	7A	30
30141032	5	82	39153721	7	72
30151082	9	68	39166511	3	24
30191038	14	70	39167204	9	42
31101173	7	12	39176904	2	72
39019811	15	70	39177304	6	22
39021111	8	28	39177304	19	22
39023911	2	38	39179104	3	94
39023911	2	88	39190701	9	56
39023911	8	88	39190701	9	88
39023911	36	106	39190701	12	96
39026512	10	94	39191304	2	44
39029115	4	90	39193120	6	12
39042215	7	58	39193120	3	20
39045411	11	52	39194304	14	62
39055302	12	52	39194304	22	76
39059417	4	8	39194604	17	82
39074601	20	20	39195804	2	56
39074601	1	68	39195804	12	74
39079815	7	82	39197215	14	102
39080808	16	70	39197215	37	106
39080808	8	72	39199020	2	30
39099906	3	26	39201719	1	6
39099906	11	30	39203804	17	68
39099906	4	32	39212415	13	102
39104119	10	30	39213217	5	10
39104319	8	22	39214004	14	54
39104619	15	30	39214124	3	28
39105315	19	52	39214124	10	56
39118011	4	76	39214124	9	90
39122515	5	100	39214124	3	96
39128321	11	4	39214124	3	102
39150711	9	104	39215811	3	14
			39218106	3	10

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
39218106	20	22	36DT0019	3	114
39220307	5	12	36DT0020	3	114
39242704	10	76	36DT0028	6	114
39244011	12	6	36DT0029	6	114
39247504	15	102	36DT0032	1	4
39247604	12	102	36DT0033	3	34
39253515	6	98	36DT0034	14	64
39256220	19	20	36DT0037	11	70
39256220	13	22	36DT0038	12	70
39260120	11	20	36DT0039	17	70
39260220	8	20	36DT0040	18	70
39260607	3	16	36DT0042	3	70
39260607	5	24	36DT0043	3	74
39260801	12	4	36DT0044	2	74
39262921	10	4	36DT0045	1	114
39266921	14	8	36DT0046	2	114
39272315	6	48	36DT0047	3	114
59040014	23	70	36DT0048	4	114
59200006	11	22	36DT0049	6	114
59200028	14	20	36JG0011	2	50
59200036	12	24	36JG0018	20	70
60111528	14B	104	36JL0003	1	22
36DT0001	9	8	36JL0004	2	20
36DT0001	30	28	36JL0007	1	10
36DT0004	3	104	36JL0011	10	6
36DT0006	21	82	36JL0015	10	54
36DT0007	2	68	36JL0041	19	54
36DT0008	23	22	36JU0001	2	10
36DT0010	1	114	36JU0015	21	106
36DT0011	1	114	52Dt0124	22	106
36DT0013	4	114	52DT0153	10	40
36DT0014	4	114	52JL0156	1	48
36DT0016	2	114	52Jl0157	2	48
36DT0017	2	114	56DT044R	1	112

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
56DT054R	7	112	DE151047	3	66
56DT056T	7	112	DE151047	9	70
56DT05X3	7	112	DE191010	10	64
56DT074X	9	112	DE191010	8	70
56DT084X	8	112	DE191010	10	74
56DT104R	6	112	DE191011	11	64
56DT106T	6	112	DE191011	11	74
56DT10X3	6	112	DE191028	7	64
56DT114R	5	112	DE191029	6	64
56DT116T	5	112	DE191033	5	66
56DT11X3	5	112	DE191036	4	64
56DT124X	10	112	DF161102	6	58
56DT134X	11	112	DG101029	9	6
56DT224R	2	112	DG101456	10	22
56DT226T	2	112	DG121002	11	38
56DT22X3	2	112	DG141028	14	82
56DT344R	4	112	DG151005	4	62
56DT354R	3	112	DG171016	4	52
56DT576T	4	112	DG171018	5	52
56DT57X3	4	112	DG171019	6	52
56DT586T	3	112	DG181008	21	76
56DT58X3	3	112	DH101048	16	24
56DT656T	1	112	DH101235	14	14
56DT65X3	1	112	DH101295	11	6
AN111015	8	44	DH101336	15	14
AP101236	2	8	DH101381	3	22
BA102004	12	32	DH101383	9	20
BF551037	7	14	DH101383	17	30
BF551037	17	14	DH101388	21	30
CS101128	11	8	DH101389	10	42
DD111011	12	44	DH101392	10	8
DD111012	6	44	DH101648	13	34
DD201002	9	102	DH102117	9	30
DE151046	10	70	DH111013	9	44

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DH111016	11	44	DK181015	11	78
DH161146	5	58	DK181017	9	78
DJ101312	30	14	DK181018	7	78
DJ161229	2	28	DK181019	8	78
DJ161229	10	88	DK181020	10	78
DJ161229	13	96	DK181021	6	78
DJ191029	2	64	DK181023	17	78
DJ191030	3	64	DK181025	19	78
DJ191031	5	64	DK181028	20	78
DJ201109	9	64	DK181052	15	64
DK101180	8	18	DK181075	24	80
DK101225	6	4	DK181076	25	80
DK101284	13	42	DK201121	13	56
DK101340	7	4	DK211009	2	46
DK101352	27	14	DP101191	22	20
DK101386	17	24	DP161145	8	102
DK111011	10	44	DS101154	14	24
DK111028	4	44	DS121126	12	38
DK151013	8	68	DS191052	23	76
DK151015	14	68	DS211004	8	46
DK151026	2	60	DS211004	5	50
DK151045	19	70	DT111106	14	50
DK151063	7	70	DT111107	15	50
DK151069	4	70	DT111163	1	50
DK151074	18	70	DT113001	1	54
DK151081	20	68	DT113002	5	54
DK151082	21	68	DT113006	8	54
DK151085	13	70	DT113008	12	54
DK181006	4	78	DT113014	17	54
DK181007	5	78	DT113015	18	54
DK181009	14A	78	DT113028	6	54
DK181010	14B	78	DT113029	2	54
DK181012	14C	78	DT113034	6	72
DK181013	14D	78	DT113202	8	58

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DT113204	1	58	DT131831	8	64
DT113205	2	58	DT131833	23	54
DT113408	3	48	DT131837	1	56
DT113800	18	104	DT131837	14	74
DT113801	15	104	DT131839	9	74
DT113802	14	44	DT131839	13	74
DT113806	35	106	DT131849	12	56
DT113807	6	102	DT131849	17	74
DT113813	10	102	DT131853	1	66
DT113817	17	102	DT131866	2	70
DT113818	7	102	DT151010	1	76
DT113819	6	100	DT151012	8	76
DT113824	16	102	DT151036	2	76
DT113842	7	48	DT151037	7	76
DT113846	11	50	DT151039	6	76
DT113848	18	52	DT151040	13	78
DT113849	26	106	DT151042	16	78
DT113850	4	74	DT151043	23	80
DT113851	34	106	DT161004	5	72
DT113855	16	44	DT161005	15	76
DT121030	20	76	DT161007	11	76
DT121031	21	78	DT161011	1	72
DT121032	22	80	DT161012	3	72
DT121035	18	78	DT161203	2	92
DT121036	12	78	DT161204	1	92
DT121037	15	78	DT171001	1	82
DT121038	1	78	DT171042	2A	112
DT121040	3	78	DT171053	9	86
DT122019	1	52	DT171054	8	36
DT131017	15	62	DT171055	15	82
DT131018	1	60	DT171061	13	82
DT131222	5	60	DT171073	11	86
DT131802	5	62	DT171075	18	82
DT131826	1	70	DT171076	10	50

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DT171078	19	82	DT181286	12	112
DT171080	8	86	DT181291	3	84
DT171811	22	82	DT181292	4	84
DT171814	11	82	DT181293	5	84
DT171823	6	82	DT181310	4	98
DT181000	5	94	DT181311	5	98
DT181001	1	28	DT181316	32	106
DT181010	8	90	DT181317	33	106
DT181022	25	106	DT181318	30	106
DT181207	6	88	DT181319	31	106
DT181210	14	112	DT181320	29	106
DT181214	15	112	DT181321	12	50
DT181215	8	84	DT181322	8	50
DT181221	16	112	DT181323	9	50
DT181228	9	84	DT181324	13	112
DT181232	1	96	DT181407	7	56
DT181233	5	90	DT181411	6	56
DT181242	1	98	DT181414	4	94
DT181244	1	86	DT181415	6	94
DT181246	2	86	DT181433	11	56
DT181248	4	102	DT181434	5	56
DT181252	19	96	DT191006	1	46
DT181255	6	90	DT191009	7	46
DT181256	8	56	DT191012	3	46
DT181263	11	88	DT231000	2	108
DT181264	12	88	DT231404	3	88
DT181265	3	50	DT231405	4	88
DT181267	10	96	DT231600	18	102
DT181268	11	96	DT231601	19	102
DT181273	6	86	DT231606	25	102
DT181274	12	86	DT231607	24	102
DT181275	4	86	DT231608	23	102
DT181284	22	102	DT232601	17	76
DT181285	20	96	DT232603	17	76

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DT232605	9	46	DT402233	1	104
DT233043	7	114	DT402234	39	106
DT233079	7	114	DT402236	1	104
DT233082	5	114	DT402404	9	62
DT233093	5	114	DT402404	22	68
DT233095	7B	114	DT402408	1	90
DT233096	7B	114	DT402600	4	82
DT233113	7A	114	DT511239	1	8
DT233123	7A	114	DT511242	4	6
DT351006	12	42	DT511243	5	6
DT351404	27	106	DT541018	13	30
DT351802	7	22	DT541019	5	30
DT401001	5	102	DT541206	1	32
DT401002	1	100	DT541210	11	32
DT401003	2	100	DT541212	1	30
DT401004	3	100	DT551400	1	34
DT401005	4	100	DT551401	8	34
DT401008	17	96	DT551402	5	34
DT401009	6	96	DT551403	9	34
DT401010	7	96	DT561201	5	18
DT401011	18	96	DT561205	11	18
DT401017	14	96	DT561206	1	18
DT401403	18	76	DT561408	10	18
DT401404	19	76	DT561409	7	18
DT401407	19	76	DT581028	4	38
DT402003	17	44	DT581048	7	38
DT402004	13	44	DT581062	5	38
DT402005	4	104	DT581064	1	38
DT402008	38	106	DT591072	11	40
DT402204	13	104	DT591116	7	40
DT402218	5	104	DT591118	8	40
DT402220	1	104	DT591230	1	40
DT402223	6	104	DT591238	1	40
DT402226	13A	104	DT591238	6	40

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
DT601210	12	28	JG181238	2	90
DT601226	10	28	JG181238	2	98
DT601228	11	28	JG181239	22	70
DT601232	5	28	JG191008	6	46
DT611202	1	36	JG232601	9	46
DT611203	7	36	JG232606	10	46
DT611203	8	82	JG351019	6	42
DV101048	29	14	JG351400	8	4
DX161066	7	50	JG351805	10	36
EC561023	2	16	JG402229	13B	104
FD211006	5	46	JG402230	13C	104
GL402210	14	104	JG402234	14A	104
JA113403	5	48	JG403200	17	104
JA541048	15	22	JG511010	3	40
JA541233	2	32	JG511021	3	2
JB181223	13	50	JG511022	4	2
JC101034	12	8	JG511046	16	4
JD113800	11	102	JG511269	8	8
JD131811	6	62	JG511270	15	8
JD351207	7	44	JG531027	8	12
JF511207	7	6	JG531031	9	12
JF531007	2	12	JG531040	12	12
JF531014	3	12	JG531041	11	12
JG113806	27	28	JG531207	15	24
JG113826	8	74	JG531215	8	24
JG122028	2	94	JG531220	3	8
JG131001	2	62	JG531228	11	24
JG131821	5	70	JG531229	10	24
JG151022	16	76	JG541015	12	22
JG161008	12	76	JG541041	16	22
JG161010	1	64	JG541043	8	42
JG161010	24	76	JG541044	5	22
JG171029	26	28	JG541045	21	20
JG181236	4	96	JG541046	5	20

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JG541058	17	22	JG551443	10	34
JG541059	10	20	JG551447	7	34
JG541063	4	22	JG551448	6	34
JG541068	3	4	JG551451	11	34
JG541074	21	22	JG551455	6	34
JG541223	14	42	JG561009	17	20
JG541230	7	30	JG561010	4	16
JG541231	16	30	JG561011	1	16
JG551000	24	14	JG561012	7	16
JG551010	28	14	JG561013	8	16
JG551013	4	14	JG561016	9	16
JG551017	4	30	JG561204	15	20
JG551020	6	14	JG561205	16	20
JG551020	19	14	JG561215	11	16
JG551021	21	14	JG561216	13	12
JG551021	26	14	JG561216	4	18
JG551022	11	14	JG561217	2	18
JG551025	13	14	JG561222	5	16
JG551026	12	14	JG561225	10	16
JG551027	2	14	JG561226	18	20
JG551028	1	14	JG561232	3	18
JG551213	5	14	JG571014	23	20
JG551214	8	14	JG571016	24	20
JG551215	22	14	JG581014	9	28
JG551220	9	14	JG581056	9	38
JG551222	18	14	JG581424	9	36
JG551223	20	14	JG581437	11	36
JG551224	23	14	JG591038	4	40
JG551225	25	14	JG591039	5	40
JG551227	10	14	JG591070	2	40
JG551228	16	14	JG601005	7	24
JG551423	14	34	JG601007	6	20
JG551427	2	34	JG601012	6	24
JG551428	4	34	JG601013	9	24

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JG601209	20	28	JL131216	5	68
JG601211	13	28	JL131218	16	68
JG601230	14	28	JL131220	6	70
JG601234	16	28	JL131225	7	68
JG601235	15	28	JL131226	11	68
JG601237	6	28	JL131232	6	68
JG611007	5	36	JL131802	12	64
JG611206	6	36	JL131806	2	66
JG621412	3	42	JL131807	4	66
JG621413	2	42	JL131831	7	66
JG621417	4	42	JL131831	8	66
JL111054	4	48	JL131832	6	66
JL113012	3	54	JL131841	13	54
JL113014	9	54	JL131878	20	54
JL113016	11	54	JL151002	2	78
JL113036	16	54	JL151035	9	76
JL113209	4	58	JL151038	3	76
JL113818	12	58	JL161003	14	76
JL113825	24	106	JL171019	12	82
JL122001	8	52	JL171020	4	50
JL122002	7	52	JL171020	20	82
JL122003	10	52	JL171038	16	82
JL122004	13	52	JL171600	2	82
JL122008	14	52	JL171830	10	82
JL122009	9	52	JL171832	9	82
JL122013	3	52	JL181205	1	94
JL122026	17	52	JL181224	15	52
JL131000	7	62	JL181225	16	52
JL131001	11	62	JL181253	13	94
JL131004	3	60	JL181408	7	94
JL131004	1	62	JL181410	12	94
JL131203	13	68	JL231004	1	108
JL131209	4	60	JL231202	1	110
JL131211	15	68	JL232604	12	46

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JL232806	1	102	JL541237	25	20
JL232817	11	102	JL551407	12	34
JL233015	9	32	JL561409	12	18
JL351218	5	44	JL581039	3	36
JL351235	3	44	JL581055	10	38
JL351237	1	44	JL591045	12	40
JL351600	1	42	JL591148	16	40
JL401406	4	72	JL591156	14	40
JL401408	11	58	JL591157	6A	40
JL403000	2	104	JL591165	13	40
JL403001	12	104	JL601001	21	28
JL403200	7	104	JL601005	2	24
JL501004	1	20	JL601212	22	28
JL511009	5	4	JL601216	7	28
JL511010	2	6	JL601221	25	28
JL511011	3	6	JL601222	17	28
JL511022	2	4	JL601223	18	28
JL511029	14	4	JL601228	19	28
JL511041	1	2	JL601237	13	4
JL511042	2	2	JN351604	11	104
JL511205	6	6	JU131801	10	62
JL511219	9	4	JU131802	23	68
JL511220	6	8	JU232800	1	102
JL511221	5	8	JU531021	4	12
JL511222	7	8	JU531027	1	12
JL521002	4	10	JU531215	7	20
JL541203	7	32	JU531215	13	24
JL541207	12	30	JU541005	13	20
JL541208	5	32	JU551401	6	30
JL541222	18	30	JU571000	1	26
JL541223	10	32	JU581006	2	36
JL541227	8	30	JU581403	1a	36
JL541230	19	30	JW171016	1	88
JL541231	20	30	JY131816	1	74

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.
JY351019	11	42	KA EA0610	22	54
JY401404	13	76	KA EA0610	3	108
JY551402	16	42	KA Ea0622	23	106
JY571030	14	22	KA Ed0608	7	74
JY581028	8	38	KA Ed0612	6	74
JY601241	28	28	KA EM0610	13	38
JY601248	29	28	KA EQ0620	15	4
JZ113061	15	54	KA EQ0620	1	24
JZ181322	6	50	KA EQ0630	14	30
JZ191010	4	46	KA EQ0630	6	32
JZ403601	3	58	KA EQ0630	3	38
KA AB0820	3	56	KA EQ0645	8	32
KA Ab0820	16	74	KB BA0512	21	54
KACa0630	4	56	KBBF0408	28	106
KACB0622	15	94	KBBG0612	18	22
KACB0622	2	110	KB UB0612	1	84
KACd0516	3	82	KB UB0614	7	88
KACd0516	7	90	KB UC0520	20	104
KADA0512	10	58	KB UC0614	21	96
KADa0608	16	104	KB UF0408	8	94
KADa0612	15	74	KCEa0605	15	96
KADA0614	15	44	KDAC0611	21	102
KADA0622	11	46	KDBC0613	2	84
KADA0630	6	38	KE AB1010	2	26
KADA0630	17	40	KE BA3715	9	22
KADa0814	10	104	KE CB5006	16	96
KADB0610	5	86	KP BC6202	3	62
KADD0614	21	70	KP BC6202	4	68
KADD0616	9	72	KP BC6302	3	68
KADH0870	9	58	LAA00019	10	68
KADM0622	6	18	LAC00005	5	88
KADQ0620	13	8	LAC00008	14	94
KADQ0625	1a	42	LAC00019	2	52
KA Ea0510	20	104	LAC00020	5	76

Parts Index

Part Number	Figure No.	Page No.
LAC00022	7	86
LAC00022	20	102
LAC00024	6	16
LAC00036	11	94
LAC00037	9	94
LAC00045	4	54
LAC00068	26	80
LAC00074	7	54
LAD00037	13	64
LAD00040	3	86
LAD00055	5	42
LAD00063	26	20
LAD00077	4	20
LAD00081	22	22
LAD00082	23	28
LAD00120	3	98
LAE00010	15	42
LAE00014	2	22
LAE00016	8	6
LAE00017	31	14
LAE00017	4	24
LAE00017	19	104
LAE00018	5	26
LAE00021	5	74
LBB00006	12	20
LBC00002	4	36
LBR00002	6	84
LBR00002	8	96
LBS00002	2	96
LBU00009	2	102
LBU00023	4	28
LBU00027	10	86
LBU00037	9	40
LCA00009	12	68

Part Number	Figure No.	Page No.
LCB00003	9	18
LCD00001	10	12
LCG00006	17	4
LCG00006	15	40
LCJ00002	13	62
LCJ00002	19	68
LDA00007	7	84
LDA00007	5	96
LDA00007	9	96
LDA00008	4	4
LDB00007	3	90
LDB00010	7	42
LDB00020	3	30
LDB00029	12	62
LDB00029	18	68
LDH00002	14	12
LDH00008	26	102
LEB00001	27	20
LJA00004	14a	22
LJA00005	24	28
PA401600	8	104
YDT02004	10	90

Parts Index

Part Number	Figure No.	Page No.

Part Number	Figure No.	Page No.

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.

Parts Index

Part Number	Figure No.	Page No.	Part Number	Figure No.	Page No.